

For Reference

NOT TO BE TAKEN FROM THIS ROOM

Ex LIBRIS
UNIVERSITATIS
ALBERTAENSIS



THE UNIVERSITY OF ALABAMA

ALABAMA

STATE OF ALABAMA
COUNTY OF ALBANY
I, the undersigned, Clerk of the Circuit Court of the County of Albany, do hereby certify that the within and foregoing is a true and correct copy of the original as the same appears in the records of the County of Albany.

Witness my hand and the seal of the County of Albany, this 1st day of May, 1911.

W. H. H. H.

CLERK OF THE CIRCUIT COURT

ALBANY COUNTY, ALABAMA

1911 - 56

ALBANY, ALABAMA

ALBANY, ALABAMA

THE UNIVERSITY OF ALBERTA

NUMERICAL ANALYSIS OF GENERAL SHELLS OF
REVOLUTION SUBJECTED TO ARBITRARY LOADING

by



AHMED MOHAMED EL-SHAZLY

A THESIS

SUBMITTED TO THE FACULTY OF GRADUATE STUDIES AND RESEARCH
IN PARTIAL FULFILMENT OF THE REQUIREMENTS FOR THE DEGREE
OF MASTER OF SCIENCE

DEPARTMENT OF CIVIL ENGINEERING


EDMONTON, ALBERTA

FALL, 1978

ABSTRACT

The governing partial differential equations of a classical shell theory are reduced to a set of eight first order ordinary differential equations. A forward numerical integration process is used to obtain influence coefficients and particular solutions for shells of revolution of general geometric configuration subjected to arbitrary types of loading.

Standard stiffness methods of structural analysis are employed to obtain displacements and stress resultants everywhere within a complex shell structure. A computer program is developed to perform the analysis based on the theory presented. Example problems are selected to test the accuracy of the method. Excellent results, when compared with known solutions, are achieved.



Digitized by the Internet Archive
in 2022 with funding from
University of Alberta Library

<https://archive.org/details/Elshazly1978>

ACKNOWLEDGEMENTS

The author wishes to express sincere gratitude to his supervisor Dr. S.H. Simmonds for his guidance, encouragement and support. Special thanks and deep appreciation are due to Dr. D.W. Murray for his valuable advice and great deal of help throughout the course of this study. Thanks are also due to Dr. A. Craggs, Department of Mechanical Engineering, University of Alberta, for serving as a member of the thesis committee.

The programming phase was accomplished through the supreme service of the University of Alberta Computing Centre. The preparation of the final manuscript was achieved through the excellent assistance of Mrs. D. Wyman and the University of Alberta Graphic Services.

Acknowledgement is extended to the National Research Council and the Department of Civil Engineering at the University of Alberta for their financial assistance in the course of this program.

Finally, the author wishes to convey his deepest thanks to his wife, Valerie, for her patience, cheerful spirit and encouragement during this study.

TABLE OF CONTENTS

CHAPTER		PAGE
1.	INTRODUCTION	1
	1.1 Introduction	1
	1.2 Purpose of the Study	2
	1.3 Types of Shells of Revolution	2
	1.4 Loadings	4
	1.5 Shell Theory	5
	1.6 Methods of Analysis	7
	1.7 Outline of Contents	11
2.	BASIC EQUATIONS	15
	2.1 Introduction	15
	2.2 Fourier Series	15
	2.3 Natural Boundary Conditions	22
	2.4 Reduction of the Governing Equations	23
3.	STIFFNESS ANALYSIS	40
	3.1 Introduction	40
	3.2 Influence Coefficients	40
	3.3 Shell Element Influence Coefficients	42
	3.4 Solution of the Governing System of Equations	44
	3.5 Shell Element Stiffness Matrix	48
	3.6 Stiffness Matrix Sign Convention	51

CHAPTER	PAGE
3.7 Stress Resultants and Displacements at Intermediate Points	52
3.8 Transformation from Local to Global Coordinates	53
3.9 Modification of the Stiffness Coefficients for Eccentricity	54
4. EXAMPLE APPLICATIONS	59
4.1 Introduction	59
4.2 Logic Flow of SASHELL	60
4.3 Pinched Cylinder	64
4.4 Hyperboloid Natural Draft Cooling Tower . .	69
4.4.1 Geometry of the Tower	69
4.4.2 Load Description	71
4.4.3 Analysis Conclusions	73
4.5 Comments on Results	74
5. LIMITATIONS	91
5.1 Introduction	91
5.2 Singularity of the Governing Equations at the Apex	91
5.3 Stability of the Numerical Integration Process	92
5.4 Convergence of Fourier Expansions	95
6. SUMMARY AND CONCLUSIONS	105
REFERENCES	107

CHAPTER	PAGE
APPENDIX A - SHELL THEORY	110
A.1 Geometry of Shells	110
A.2 Equations of Equilibrium	112
A.3 Strain-Displacement Relations	114
A.4 Stress-Strain Relations	117
A.5 Elastic Law	119
APPENDIX B - USER'S MANUAL FOR SASHELL	131
APPENDIX C - PROGRAM LISTING.	143
APPENDIX D - DATA FILES AND SAMPLE OUTPUT OF EXAMPLE APPLICATIONS	169

LIST OF TABLES

TABLE		PAGE
2.1	Coefficient Matrices B1, B2 and load vector B3 in Eq. 2.14	34
2.2.1	Coefficient matrix A1 in Eq. 2.18	35
2.2.2	Coefficient matrix A2 and load vector A3 in Eq. 2.18	36
2.3.1	Coefficient matrix C1 and load vector C3 in Eq. 2.20	37
4.1	Stresses and radial displacement in a pinched cylinder as per Eqs. 4.6	67
5.1	Effect of length and number of integration points on the accuracy of the solution	100
5.2.1	Fourier coefficients of wind pressure load . . .	101
5.2.2	Effect of number of harmonics on representing the wind pressure load	101
5.3.1	Fourier coefficients of two diametrically opposed concentrated loads	102
	Effect of member of harmonics on representing the two concentrated loads	102

LIST OF FIGURES

Figure	Title	Page
1.1	Plate	12
1.2	Sphere	12
1.3	Cylinder	12
1.4	Cone	13
1.5	Toroid	13
1.6	Ellipsoid	13
1.7	Hyperboloid of revolution	14
1.8	Shell of revolution of arbitrary shape	14
2.1	Effective shearing forces	39
3.1	Shell theory sign convention for stress resultants and displacements	56
3.2	Stiffness matrix sign convention for stress resultants and displacements	57
3.3	Notation for transformation of stress resultants and displacements	58
3.4	Eccentricity at a node	58
4.1	"Pinched cylinder": Circumferential live load . .	75
4.2	"Pinched cylinder": Two concentrated loads . . .	75
4.3	"Pinched cylinder": Circumferential live load: Stress resultants and radial displacement	76
4.4.1	"Pinched cylinder": Two concentrated loads: Radial displacement ($r = 4.0$ ft)	77

Figure	Title	Page
4.4.2	"Pinched cylinder": Two concentrated loads: Radial displacement ($r = 0.413$ ft)	78
4.5	Typical hyperboloid natural draft cooling tower	79
4.6.1	Wind pressure coefficients c_θ	80
4.6.2	Wind pressure profile ($\theta = 0$)	80
4.7.1	Hyperboloid tower dead load membrane force N_s . .	81
4.7.2	Hyperboloid tower dead load meridional moment M_s	82
4.7.3	Hyperboloid tower dead load membrane force N_θ . .	83
4.8.1	Hyperboloid tower wind load membrane force N_s ($\theta = 0$)	84
4.8.2	Hyperboloid tower wind load meridional moment M_s ($\theta = 0$)	85
4.8.3	Hyperboloid tower wind load membrane force N_θ ($\theta = 0$)	86
4.8.4	Hyperboloid tower wind load circumferential moment M_θ ($\theta = 0$)	87
4.8.5	Hyperboloid tower wind load circumferential variation of N_s	88
4.8.6	Hyperboloid tower wind load circumferential variation of N_θ	88
4.8.7	Hyperboloid tower wind load circumferential variation of S_s	89

Figure	Title	Page
4.8.8	Hyperboloid tower wind load circumferential variation of M_s	89
4.8.9	Hyperboloid tower wind load circumferential variation of W	90
4.8.10	Hyperboloid tower wind load circumferential variation of V and U	90
5.1	Fourier approximation for wind load	103
5.2	Fourier approximation for two diametrically opposed concentrated loads	104
A.1	Meridian and parallel circle of a shell of revolution	124
A.2	Shell element stress resultants and load components	125
A.3.1	Meridional rotation due to displacement V . . .	126
A.3.2	Meridional rotation due to displacement W . . .	126
A.4.1	Meridian of a shell before and after deformation	127
A.4.2	Parallel circle before and after deformation . .	127
A.4.3	Change of the right angle between live elements after deformation	128
A.5	Relation between displacement of two points on live normal to the middle surface	129
A.6	Stresses acting on a shell element	130

NOMENCLATURE

- a = constant and equal to the throat radius of the hyperboloid shell of revolution (Eq. 4.9).
- $[A]$ = flexibility matrix in Eq. 3.2.
- $[A_1], [A_2], \{A_3\}$
= coefficient matrices defined in Table 2.1
- $[A_{(s)}]$ = coefficient matrix relating the shell fundamental variables and their derivatives at the location s (Eq. 3.5).
- b = constant
- $[B_1], [B_2], \{B_3\}$
= coefficient matrices defined in Tables 2.2.1 and 2.2.2.
- $\{B_{(s)}\}$ = column vector of the loading terms in the basic set of equations (Eq. 3.5)
- $\{c\}$ = column vector of the eight arbitrary constant of integration defined in Eq. 3.9.
- $[C_1], [C_2], \{C_3\}$
= coefficient matrices defined in Tables 2.3.1 and 2.3.2.
- D = extensional rigidity of the shell defined in Eq. A.18.1
- $\{D\}$ = column vector of the displacements defined in Eq. 2.19.1
- $\{D^\bullet\}$ = derivative of $\{D\}$ with respect to s (Eq. 2.19.2)
- E = modulus of elasticity.
- $[Ec]$ = eccentricity transformation matrix defined in Eq. 3.31.
- $\{F_s\}$ = column vector of primary stress resultants defined in Eq. 2.15.1.
- $\{F_s^\bullet\}$ = derivative of $\{F_s\}$ with respect to s (Eq. 2.15.2)

- $\{F_\theta\}$ = column vector of secondary stress resultants defined in Eq. 2.15.3.
- $\{F^0\}$ = column vector of the fixed end forces in Eq. 3.3.
- G = shear modulus defined in Eq. A.13.
- $\{h_{(s)}\}$ = column vector of the homogeneous solution of the eight fundamental equations (Eq. 3.6).
- $[H_{(s)}]$ = transfer matrix arises from integrating the inhomogeneous terms in the eight fundamental equations (Eq. 3.11).
- K = flexural rigidity of the shell defined in Eq. A.18.2.
- $[K]$ = stiffness matrix
- $[L]$ = transformation matrix from local to global coordinates defined in Eq. 3.29.
- M_s, M_θ = meridional and circumferential moments per unit length, respectively.
- $M_{s\theta}, M_{\theta s}$ = circumferential and meridional twisting moments per unit length, respectively.
- n = harmonic number
- N_s, N_θ = normal in-plane forces per meridional and circumferential unit length, respectively.
- $N_{s\theta}, N_{\theta s}$ = in-plane shear forces per meridional and circumferential unit length, respectively.
- P_s, P_z, P_θ = intensity of load components in the direction s , z and θ respectively.
- Q_s, Q_θ = transverse shear forces per meridional and circumferential unit length, respectively.

$\{Q_{(s)}\}$	= column vector arises from integrating the inhomogeneous terms in the eight fundamental equations (Eq. 3.14).
r	= radius of curvature of parallel circles.
r_1	= radius of curvature of meridian.
r_2	= length of the normal between any point on the middle surface and the axis of revolution.
\dot{r}_1	= derivative of r_1 with respect to the coordinate s .
R	= curvature of parallel circles.
R_1	= first principle curvature = $1/r_1$.
R_2	= second principle curvature = $1/r_2$.
s	= coordinate measures the distance along the meridian of the shell.
S_s	= effective transverse shearing force per circumferential unit length defined in Eq. 2.6.1.
t	= thickness of the shell.
T	= change in temperature from arbitrary level.
T_s	= effective tangential shearing force per circumferential unit length defined in Eq. 2.6.2.
T_{O1}, T_{O2}	= temperature terms defined in Eq. A.19.1.
T_{11}, T_{12}	= temperature terms defined in Eq. A.19.2.
T^O, T^i	= change in temperature from arbitrary level x measured at the exterior and interior face of the shell, respectively.
U	= displacement component in the circumferential direction.
V	= displacement component in the meridional direction.

- W = displacement component in the rotation direction.
- U_z, V_z, W_z = displacement components of a point at distance z from the middle surface.
- X = coordinate measures the distance along the axis of revolution.
- $\{y_{(s)}\}$ = column vector of the eight fundamental variables (Eq. 3.5).
- $\{y^{\bullet}_{(s)}\}$ = derivative of $\{y_{(s)}\}$ with respect to the coordinate s .
- α = coefficient of thermal expansion.
- β = rotation of the meridian due to deformation.
- γ = specific weight of the shell material.
- $\gamma_{s\theta}, \gamma_{\theta s}$ = shear strain.
- ϵ_s = meridional strain.
- ϵ_θ = hoop strain.
- θ = coordinate measures the angle in the circumferential direction.
- ν = Poisson's ratio.
- σ_s, σ_θ = normal stresses in the meridional and circumferential direction, respectively.
- $\tau_{s\theta}, \tau_{\theta s}$ = shearing stresses.
- ϕ = coordinate measures the angle between any point on the middle surface and the axis of revolution.
- $()^{\bullet}$ = $\frac{\partial ()}{\partial s}$
- $()'$ = $\frac{\partial ()}{\partial \theta}$

CHAPTER 1

INTRODUCTION

1.1 Introductory Remarks

Shells of revolution are important structural elements. Many structures such as storage tanks, pressure vessels, silos, chimneys and towers are composed of either a single shell unit or an assemblage consisting of different types of shells. Their behaviour allows the shell thickness to be reduced to a minimum and their advantageous shapes permit more modern architectural concepts.

Although the governing field equations have been known for many years, cases where analytical solutions can be obtained are relatively scarce and are restricted to simple forms of geometry, boundaries and loads. The determination of the forces and deformations in shells constitutes a difficult problem in the theory of elasticity, owing to the complexity of the mathematical equations involved. For conditions in which the analytical solution is complex, or is unknown, the application of numerical methods with the aid of a digital computer has proven to be useful and efficient. This approach allows the solution for generalized geometric configurations and loadings of shells of revolution.

1.2 Purpose of the Study

The objectives of this thesis are:

- 1) to develop a technique for evaluating the stiffness influence coefficients of any arbitrary element of a shell of revolution of general geometric configuration by means of a direct numerical integration method.
- 2) to employ the standard stiffness method of structural analysis to analyze assemblages of such elements.
- 3) to demonstrate the capability of the method to treat arbitrary surface loadings and thermal gradients, including line and concentrated loads.

1.3 Types of Shells of Revolution

The position of a point in a shell of revolution can be given by three orthogonal coordinates s , θ and z (See Appendix A, Sect. A.1, for definitions). The shape of the shell is determined by specifying the two principal radii of curvature r_1 and r_2 of the middle surface and the thickness of the shell (Fig. A.1). Instead of r_2 it is sometimes convenient to use the distance r from a point on the middle surface to the axis of revolution (Fig. A.1) where

$$r = r_2 \sin \phi \quad 1.1$$

in which ϕ is the angular distance of the point under consideration from the axis of revolution. The generating curve of the middle

surface is defined by the equation

$$r = r(x) \quad 1.2$$

where $r(x)$ represent the radius r as a function of the distance measured along the axis of revolution, x . Therefore the principal radii of curvature can be determined by the following two equations

$$r_1 = \left[1 + \left(\frac{dr}{dx} \right)^2 \right]^{3/2} / \frac{d^2r}{dx^2} \quad 1.3.1$$

$$r_2 = r \left[1 + \left(\frac{dr}{dx} \right)^2 \right]^{1/2} \quad 1.3.2$$

The general shape of any type of shell of revolution (Fig. 1.1 to 1.8) is characterized by particular forms of Eqns. 1.3, as follows:

$$\text{a) for plates (Fig. 1.1)} \quad r_1 = \infty \quad 1.4.1$$

$$r_2 = \infty \quad 1.4.2$$

$$\phi = 0 \quad 1.4.3$$

$$\text{b) for spheres (Fig. 1.2)} \quad r_1 = a \quad 1.4.4$$

$$r_2 = a \quad 1.4.5$$

$$\text{c) for cylinders (Fig. 1.3)} \quad r_1 = \infty \quad 1.4.6$$

$$r_2 = a \quad 1.4.7$$

$$\phi = \pi/2 \quad 1.4.8$$

$$\text{d) for cones (Fig. 1.4)} \quad r_1 = \infty \quad 1.4.9$$

$$r_2 = \frac{r}{\sin \phi} \quad 1.4.10$$

$$\phi = \text{constant} \quad 1.4.11$$

$$\text{e) for toroids (Fig. 1.5)} \quad r_1 = a \quad 1.4.12$$

$$r_2 = \frac{r}{\sin \phi} \quad 1.4.13$$

f) for ellipsoids (minor axis coincides with the axis of revolution) (Fig. 1.6)

$$r_1 = \frac{a^2 b^2}{(a^2 \sin^2 \phi + b^2 \cos^2 \phi)^{3/2}} \quad 1.4.14$$

$$r_2 = \frac{a^2}{(a^2 \sin^2 \phi - b^2 \cos^2 \phi)^{1/2}} \quad 1.4.15$$

g) for hyperboloids (Fig. 1.7)

$$r_1 = \frac{-a^2 b^2}{(a^2 \sin^2 \phi - b^2 \cos^2 \phi)^{3/2}} \quad 1.4.16$$

$$r_1 = \frac{a^2}{(a^2 \sin^2 \phi - b^2 \cos^2 \phi)^{1/2}} \quad 1.4.17$$

h) for arbitrary shell elements for which the form of the middle surface cannot be expressed as a closed form function (Fig. 1.8), one can describe r_1 , r_2 and r at discrete points along the meridian and interpolate numerically.

1.4 Loadings

Applied surface loads at any point of the shell can be resolved into three components in the three orthogonal directions s , θ and z . This load may vary in the direction along the meridian as well as in the circumferential direction of the shell. Therefore a load component may be written as a function of the coordinates s and θ in the following form

$$P_i = F_{1i}(s, \theta) \quad 1.5.1$$

where P_i is the magnitude of the load at the point under consideration in the direction i ($i = s, \theta, z$) and F_{1i} is the function representing the applied load. For the special case of axisymmetric loading P_i is independent of θ , thus

$$P_i = F_{2i}(s) \quad 1.5.2$$

For non-axisymmetrical loading, the classical method of analysis is to expand this load into a Fourier series, analyze for each harmonic separately and superimpose the effects [10,27]. The number of terms considered in this series must be sufficient to give the desired degree of convergence.

Thermal loading can be considered in either case by algebraically adding the strain due to thermal expansion to the strain due to the surface loading in the stress-strain equations.

1.5 Shell Theory

Shell theories of various degrees of complexity may be derived, depending upon the degree to which the theory of linear elasticity is simplified.

In all cases one begins by reducing the three-dimensional shell problem to a two-dimensional problem expressed in terms of the deformation of the middle surface of the shell. Further simplifications establish various shell theories which may be classified into different categories [3]. Such categories are based on the terms that are retained in the strain and stress-

displacement equations with respect to the thickness coordinate.

The second order approximation theory for shells of revolution was presented in 1932 by Flugge [10] and based upon the following assumptions:

- 1) Consistent with the formulation of the classical theory of elasticity, strains and displacements under loads are small enough so that changes in geometry of the shell will not alter the equations of static equilibrium of the shell (i.e., equations of equilibrium are written in the undeformed configuration).
- 2) The components of stress normal to the middle surface are small compared to the other components of stress and may be neglected in the stress-strain relationships (i.e., the material may be considered to be in a plane stress condition).
- 3) Points on lines normal to the middle surface before deformation remain on straight lines normal to the middle surface after deformations (i.e., deformations of the shell due to the radial shears are neglected).

Contrary to other theories, Flugge's theory did not entirely neglect the ratio of the thickness to the radius of curvature (except for an occasional dropping of the fifth and higher order terms) in the stress resultant equations and in the strain-displacement relationships [10, pg. 320].

Applications of this theory have generally been restricted to circular cylindrical shapes, for which some solutions have been obtained [10,16,19] and are considered as standards against which other simplified theories may be compared [16,19].

The fundamental equations of Flugge's theory, upon which this study is based, are presented in Appendix A.

1.6 Methods of Analysis

A structure usually consists of an assemblage of many parts and tends to be complex in nature. Generally, the true structure must be replaced by an idealized approximation, or model, suitable for mathematical analysis. Structural analysis for shells may conveniently be carried out by matrix methods using influence coefficients.

In the literature, the analysis of symmetrically loaded shells of revolution is classically performed using flexibility influence coefficients [3,4,21]. These have been given, in an explicit manner, for very limited number of types of shells of revolution, such as, cylinders, spheres and cones, of uniform thickness.

For symmetrically loaded shells, the membrane solution, which represents the momentless state of stress in the shell, may approximate the particular solution which satisfies the general differential equation of the shell. Using the membrane

solution, a flexibility method of analysis can be performed by satisfying the continuity requirements at the joints at which the elements are connected. When the forces and displacements at these joints are known, the conditions within each element may be determined from the solution of the differential equation of the element.

For the case of arbitrary shells of revolutions, under arbitrary systems of loadings, the corresponding expressions for influence coefficients are unknowns. The analytical method of obtaining these expressions would involve the solution of eighth-order differential equations expressed in terms of the geometry of the shell surface and the physical constants. This method is difficult and complicated, even for a simple geometry such as a cylinder, and it is generally impossible for the case of an arbitrary shell under arbitrary loads. However, the latter case is the rule rather than the exception in modern architecture.

As a consequence of the availability of electronic computers, and the increasing familiarity of engineers with this computational tool, the application of numerical methods of analysis to shell problems has become more attractive.

Two numerical methods for the analysis of shells of revolution with arbitrary configurations have received extensive treatment in the technical literature. The first method is the finite difference method, which consists essentially of the direct replacement of the derivatives which appear in the governing

differential equations by finite difference approximations. This method transforms the differential equations into a system of algebraic equations which may be solved by an iterative procedure [26] or by means of matrix methods [6]. The method is quite general in application. Replacement of the derivatives by finite difference approximations may be undertaken at any level in the basic formulation of the shell problem. However, it is difficult to introduce boundary conditions into the problem. It also becomes cumbersome when attempting to satisfy equations involving high order derivatives [9,12].

The second method is the finite element method. In this method the displacement of each element into which a shell is subdivided are represented by an approximation [9,11,13,20,24]. The most common practice is to represent each shell by a series of short conical shell elements of uniform thickness. The variation in thickness along the generator of the shell, can be accounted for by considering the average thickness of each element [20]. Once these short segments have been defined, the problem becomes one of analyzing a shell that is an assembly of many short conical shells. Stiffness influence coefficients are evaluated using energy methods. Conditions of continuity are then applied at the boundaries of each segment to evaluate the forces and deformations.

An alternative method of numerical analysis based on direct integration of the shell equations, as proposed by

Goldberg, et al [12] for spherical domes and by Iyer and Simmonds [17] for conical shells, is presented for general shells of revolution in this thesis.

In the application of this method to the analysis of shells of revolution under arbitrary loadings, the governing partial differential equations of a consistent shell theory are expanded by means of Fourier series. Differentiation with respect to the colatitude coordinate θ may be performed to transform the governing equations to ordinary differential equations. These equations are reduced to a set of eight first-order ordinary differential equations involving eight intrinsic dependent variables and their derivatives. The intrinsic variables are the three components of displacement at the middle surface, the rotation of the tangent to the meridian, the membrane normal force in the meridian direction, the moment acting on circumferential sections and two modified shear terms in the directions perpendicular and tangent to the meridian.

This system of equations can be integrated in a stepwise fashion across a given element. By performing matrix operations, which will be described in Chapter 3, the stiffness influence coefficients can be calculated. Fixed end forces can be obtained and stiffness analysis may then be performed to determine the conditions at the element boundaries. These conditions can be used to determine the forces and deformation everywhere within the shell element.

1.7 Outline of Contents

The governing equations of the classical theory of shells of revolution are reduced to a set of eight basic equations in Chapter 2. In Chapter 3, the solution technique for the basic equations is described. Standard stiffness methods for segmented shell structures are outlined. Two example problems are handled in Chapter 4. General types of loadings are considered. In Chapter 5, limitations of the technique are discussed. Conclusions are drawn and possible future developments are outlined in Chapter 6.

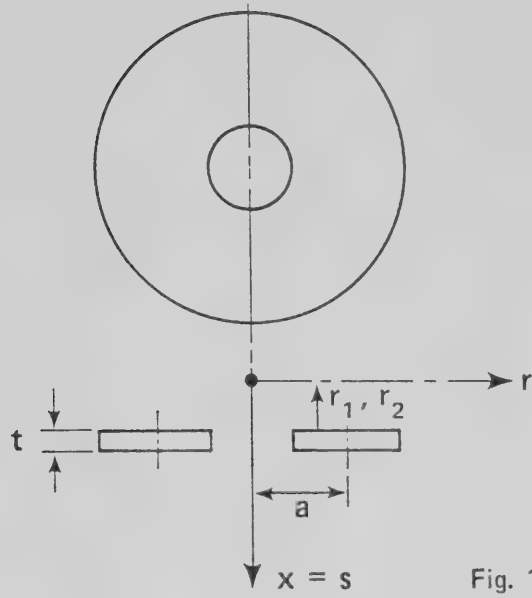


Fig. 1.1 Plate

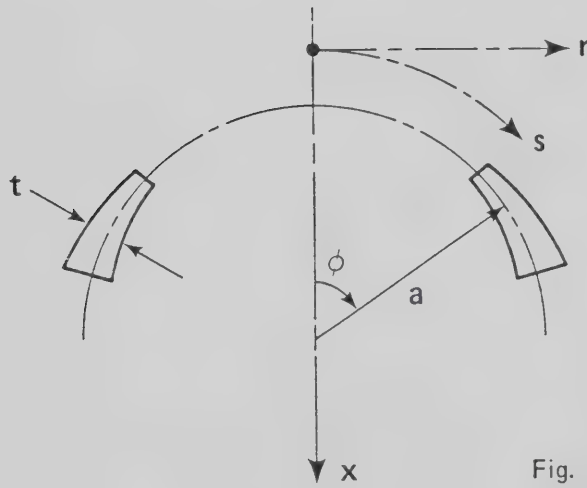


Fig. 1.2 Sphere

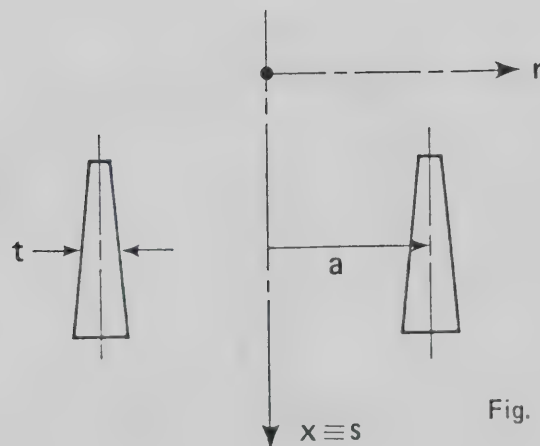


Fig. 1.3 Cylinder

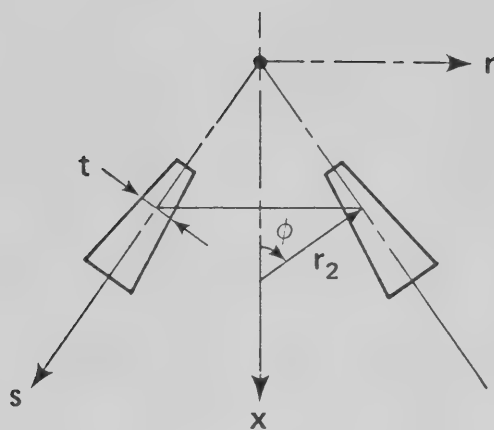


Fig. 1.4 Cone

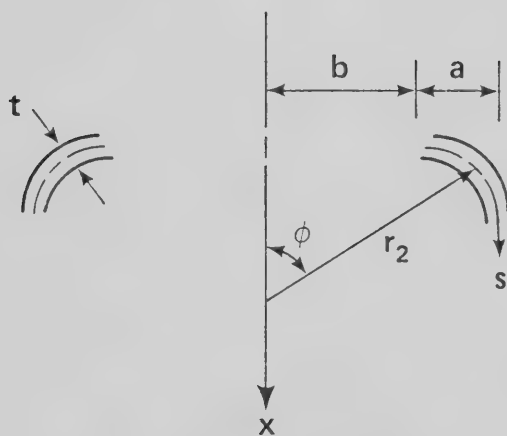


Fig. 1.5 Toroid

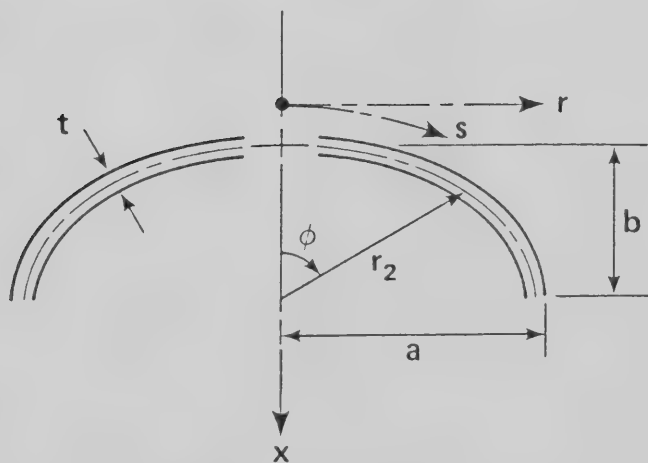


Fig. 1.6 Ellipsoid

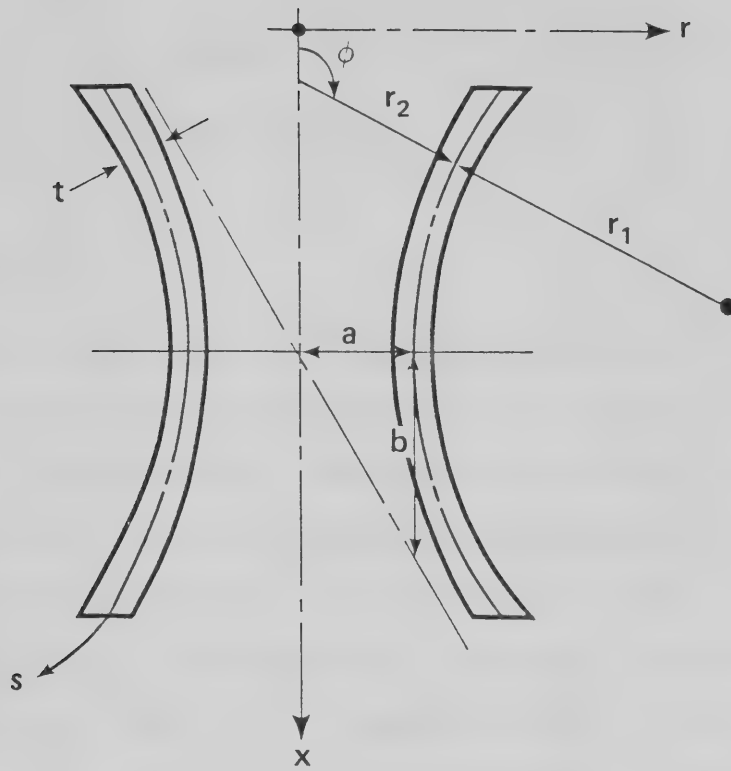


Fig. 1.7 Hyperboloid of Revolution

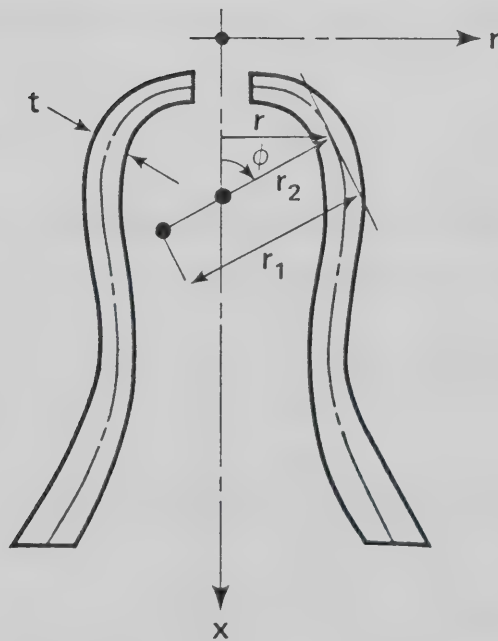


Fig. 1.8 Shell of Revolution of Arbitrary Shape

CHAPTER 2

BASIC EQUATIONS

2.1 Introduction

In this chapter the governing field equations of a shell of revolution, as derived in Appendix A, are expanded using Fourier series. Modified shear terms are introduced into the governing equations to eliminate the inplane shearing force in the circumferential direction and the meridional twisting moment, which appear at the boundaries $s = \text{constant}$. By performing matrix operations to eliminate the stress resultants in the circumferential direction (secondary stress resultants) the governing field equations are reduced to a set of eight first order equations involving four stress resultants (primary stress resultants) and four displacements and their derivatives.

2.2 Fourier Series

The load components and temperature, being arbitrary functions of s and θ , may always be represented in the form

$$P_s = \sum_{n=0}^{\infty} P_{sn}(s) \cos n\theta + \sum_{n=1}^{\infty} \bar{P}_{sn}(s) \sin n\theta \quad 2.1.1$$

$$P_{\theta} = \sum_{n=0}^{\infty} \bar{P}_{\theta n}(s) \cos n\theta + \sum_{n=1}^{\infty} P_{\theta n}(s) \sin n\theta \quad 2.1.2$$

$$P_z = \sum_{n=0}^{\infty} P_{zn}(s) \cos n\theta + \sum_{n=1}^{\infty} \bar{P}_{zn}(s) \sin n\theta \quad 2.1.3$$

$$T = \sum_{n=0}^{\infty} T_n(s) \cos n\theta + \sum_{n=1}^{\infty} \bar{T}_n(s) \sin n\theta \quad 2.1.4$$

where P_s , P_θ and P_z are defined in Appendix A, T represents temperature, and the functions of s on the right hand side are Fourier coefficients [10,27]. The corresponding stress resultants and displacements may be expressed as

$$N_s = \sum_{n=0}^{\infty} N_{sn}(s) \cos n\theta + \sum_{n=1}^{\infty} \bar{N}_{sn}(s) \sin n\theta \quad 2.2.1$$

$$N_\theta = \sum_{n=0}^{\infty} N_{\theta n}(s) \cos n\theta + \sum_{n=1}^{\infty} \bar{N}_{\theta n}(s) \sin n\theta \quad 2.2.2$$

$$N_{s\theta} = \sum_{n=0}^{\infty} \bar{N}_{s\theta n}(s) \cos n\theta + \sum_{n=1}^{\infty} N_{s\theta n}(s) \sin n\theta \quad 2.2.3$$

$$N_{\theta s} = \sum_{n=0}^{\infty} \bar{N}_{\theta s n}(s) \cos n\theta + \sum_{n=1}^{\infty} N_{\theta s n}(s) \sin n\theta \quad 2.2.4$$

$$Q_s = \sum_{n=0}^{\infty} Q_{sn}(s) \cos n\theta + \sum_{n=1}^{\infty} \bar{Q}_{sn}(s) \sin n\theta \quad 2.2.5$$

$$Q_\theta = \sum_{n=0}^{\infty} \bar{Q}_{\theta n}(s) \cos n\theta + \sum_{n=1}^{\infty} Q_{\theta n}(s) \sin n\theta \quad 2.2.6$$

$$M_s = \sum_{n=0}^{\infty} M_{sn}(s) \cos n\theta + \sum_{n=1}^{\infty} \bar{M}_{sn}(s) \sin n\theta \quad 2.2.7$$

$$M_\theta = \sum_{n=0}^{\infty} M_{\theta n}(s) \cos n\theta + \sum_{n=1}^{\infty} \bar{M}_{\theta n}(s) \sin n\theta \quad 2.2.8$$

$$M_{s\theta} = \sum_{n=0}^{\infty} \bar{M}_{s\theta n}(s) \cos n\theta + \sum_{n=1}^{\infty} M_{s\theta n}(s) \sin n\theta \quad 2.2.9$$

$$M_{\theta s} = \sum_{n=0}^{\infty} \bar{M}_{\theta s n}(s) \cos n\theta + \sum_{n=1}^{\infty} M_{\theta s n}(s) \sin n\theta \quad 2.2.10$$

$$U = \sum_{n=0}^{\infty} \bar{U}_n(s) \cos n\theta + \sum_{n=1}^{\infty} U_n(s) \sin n\theta \quad 2.2.11$$

$$V = \sum_{n=0}^{\infty} V_n(s) \cos n\theta + \sum_{n=1}^{\infty} \bar{V}_n(s) \sin n\theta \quad 2.2.12$$

$$W = \sum_{n=0}^{\infty} W_n(s) \cos n\theta + \sum_{n=1}^{\infty} \bar{W}_n(s) \sin n\theta \quad 2.2.13$$

where the variables on the left hand side are defined in Appendix A, Sects. A.2 and A.3, and where the term (s) indicates that the variable coefficients with subscript n are functions of the coordinate s only and n is the harmonic number. The first and the second series in each expression represent the portions of the variables which are, respectively, symmetric and anti-symmetric with respect to the meridian passing through the line $\theta = 0$.

For an arbitrary applied load expressed as a Fourier series of the order N (Eqs. 2.1.1 to 2.1.3), there are $2N+1$ terms that represent each component of load; ($n = 0, 1, 2, \dots, N$) for the symmetric series and ($n = 1, 2, \dots, N$) for the anti-symmetric series. For each value of n the (s dependent) variables with the subscript n from each series can be entered in the governing equations of shells of revolution of Appendix A, because the sequences $\cos n\theta$ and $\sin n\theta$ are linearly independent. Differentiations with respect to θ can be performed and the terms grouped according to the common factors, $\cos n\theta$ or $\sin n\theta$. Since the coefficient of each of these factors must be zero, each

factor produces a separate equation. For example, Eqn. A.5.1 is

$$r\dot{N}_s + \cos \phi N_s + N'_{\theta s} - \cos \phi N_\theta - \frac{r}{r_1} Q_s + rP_s = 0 \quad 2.3.1$$

for which, for any n , the cosine terms become

$$\begin{aligned} & r\dot{N}_{sn} \cos n\theta + \cos \phi N_{sn} \cos n\theta + nN_{\theta sn} \cos n\theta \\ & - \cos \phi N_{\theta n} \cos n\theta - \frac{r}{r_1} Q_{sn} \cos n\theta + rP_{sn} \cos n\theta = 0 \end{aligned} \quad 2.3.2$$

which, upon factoring out the common term, yields

$$\begin{aligned} & r\dot{N}_{sn} + \cos \phi N_{sn} + n N_{\theta sn} - \cos \phi N_{\theta n} - \frac{r}{r_1} Q_{sn} \\ & + rP_{sn} = 0 \end{aligned} \quad 2.3.3$$

If the Fourier expansions of Eqs. 2.1 and 2.2 are truncated such that $0 \leq n \leq N$, the governing system of equations is replaced by $(2N+1)$ ordinary differential systems of equations, each equation of the type illustrated by Eq. 2.3.3, and an analysis is carried out to obtain the solutions for the s dependent coefficients corresponding to each value of n . In the general case there are twenty-six variable coefficients associated with each $n > 0$ in Eqs. 2.2, thirteen associated with each of the factors.

Finally, since linear stress-displacement relations were assumed, the principal of superposition is valid and one can superimpose the $(2N+1)$ solutions so obtained.

The n^{th} set of equations can be written as follows.

The six equilibrium equations are obtained from Eqs. A.5 as

$$N_{sn}^{\bullet} + R \cos \phi N_{sn} \pm R_n N_{\theta sn} - R \cos \phi N_{\theta n} - R_1 Q_{sn} + P_{sn} = 0 \quad 2.4.1$$

$$N_{s\theta n}^{\bullet} + R \cos \phi N_{s\theta n} \mp R_n N_{\theta n} + R \cos \phi N_{\theta sn} - R_2 Q_{\theta n} + P_{\theta n} = 0 \quad 2.4.2$$

$$R_2 N_{\theta n} + R_1 N_{sn} \pm R_n Q_{\theta n} + Q_{sn}^{\bullet} + R \cos \phi Q_{sn} - P_{zn} = 0 \quad 2.4.3$$

$$M_{sn}^{\bullet} + R \cos \phi M_{sn} \pm R_n M_{\theta sn} - R \cos \phi M_{\theta n} - Q_{sn} = 0 \quad 2.4.4$$

$$M_{s\theta n}^{\bullet} + R \cos \phi M_{s\theta n} \mp R_n M_{\theta n} + R \cos \phi M_{\theta sn} - Q_{\theta n} = 0 \quad 2.4.5$$

$$N_{\theta sn} - N_{s\theta n} - R_2 M_{\theta sn} + R_1 M_{s\theta n} = 0 \quad 2.4.6$$

where R_1 and R_2 are the principal curvatures of the shell, defined as the reciprocals of the radii of curvature r_1 and r_2 , respectively, and R is the curvature of the parallel circle.

The eight stress-displacement equations are obtained from Eqs. A17 as

$$N_{sn} = [K R_1 (R_1 - R_2) r_1^{\bullet}] \beta_n - [K(R_1 - R_2)] \beta_n^{\bullet} + [D(R_1 + \nu R_2) + K R_1^2 (R_1 - R_2)] W_n$$

$$\begin{aligned}
& + [\nu DR \cos \phi - K R^2 {}_1(R_1 - R_2) \mathbf{r}_1^\bullet] V_n \\
& + [D + K R_1 (R_1 - R_2)] V_n^\bullet \pm [\nu DR n] U_n \\
& - [(1 + \nu) \alpha D] T_{o_2 n}
\end{aligned} \tag{2.5.1}$$

$$\begin{aligned}
N_{\theta n} &= [K R (R_1 - R_2) \cos \phi] \beta_n \\
& + [D(R_2 + \nu R_1) + K (R_1 - R_2)(R^2 n^2 - R_2^2)] W_n \\
& + [D R \cos \phi - K R R_2 \cos \phi (R_1 - R_2)] V_n \\
& + [\nu D] V_n^\bullet \pm [D R n] U_n \\
& - [(1 + \nu) \alpha D] T_{o_1 n}
\end{aligned} \tag{2.5.2}$$

$$\begin{aligned}
N_{s\theta n} &= \frac{1 - \nu}{2} \{ \pm [K R (R_1 - R_2) n] \beta_n \\
& \pm [K R^2 \cos \phi (R_1 - R_2) n] W_n \\
& \mp [D R n + K R R_1 (R_1 - R_2) n] V_n \\
& - [D R \cos \phi - K R \cos \phi (R_1 - R_2)^2] U_n \\
& + [D + K (R_1 - R_2)^2] U_n^\bullet \}
\end{aligned} \tag{2.5.3}$$

$$\begin{aligned}
N_{\theta sn} &= \frac{1 - \nu}{2} \{ \pm [K R (R_1 - R_2) n] \beta_n \\
& \mp [K R^2 \cos \phi (R_1 - R_2) n] W_n \\
& \mp [D R n - K R R_2 (R_1 - R_2) n] V_n \\
& - [D R \cos \phi] U_n + [D] U_n^\bullet \}
\end{aligned} \tag{2.5.4}$$

$$M_{sn} = [K R_1 \mathbf{r}_1^\bullet - \nu K R \cos \phi] \beta_n - [K] \beta_n^\bullet$$

$$\begin{aligned}
& + [K R_1 (R_1 - R_2) - \nu K R^2 n^2] W_n \\
& - [K R^2_1 r^{\bullet}_1] V_n + [K (R_1 - R_2)] V^{\bullet}_n \\
& + [\nu K R R_2 n] U_n + [(1 + \nu) \alpha K] T_{12n}
\end{aligned} \tag{2.5.5}$$

$$\begin{aligned}
M_{\theta n} & = [\nu K R_1 r^{\bullet}_1 - K R \cos \phi] \beta_n - [\nu K] \beta^{\bullet}_n \\
& - [K R^2 n^2 + K R_2 (R_1 - R_2)] W_n \\
& - [\nu K R_1 r^{\bullet}_1 + K R \cos \phi (R_1 - R_2)] V_n \\
& + [K R R_1 n] U_n + [(1 + \nu) \alpha K] T_{11n}
\end{aligned} \tag{2.5.6}$$

$$\begin{aligned}
M_{s\theta n} & = \frac{1 - \nu}{2} \{ \pm [2 K R n] \beta_n \pm [2 K R^2 n \cos \phi] W_n \\
& + [K R R_1 n] V_n - [K R \cos \phi (R_1 - 2R_2)] U_n \\
& + [K (R_1 - 2R_2)] U^{\bullet}_n \}
\end{aligned} \tag{2.5.7}$$

$$\begin{aligned}
M_{\theta sn} & = \frac{1 - \nu}{2} \{ \pm [2 K R n] \beta_n \pm [2 K R^2 n \cos \phi] W_n \\
& + [K R R_2 n] V_n + [K R R_2 \cos \phi] U_n \\
& - [K R_2] U^{\bullet}_n \}
\end{aligned} \tag{2.5.8}$$

where Eqs. A.7 have been used to eliminate the first and second derivatives of the displacement component W .

Eqs. 2.4 and 2.5 are fourteen equations in terms of the thirteen unknown functions (the variable Fourier series coefficients). As such the system of equations is overspecified. In the theory developed herein, Eq. 2.4.6 is discarded and the

remaining thirteen equations allow the solution for the thirteen functions associated with each trigonometric functions of the Fourier series expansion.

2.3 Natural Boundary Conditions

According to the classical theory of shells, the quantities which appear in the natural boundary conditions on an edge $s = \text{constant}$ of a shell of revolution are the four displacements β , W , V , U and the corresponding four forces M_s , S_s , N_s , T_s .

The forces S_s , T_s are the transverse and tangential effective shears which are commonly known as Kirchhoff's shears [27]. The Kirchhoff shears are work-equivalent forces associated with the displacements W and U , and these effective shears replace the stress resultants Q_s , $N_{s\theta}$ and $M_{s\theta}$. Such replacement is essential to describe simple boundary conditions [10,27]. Although the expressions for these forces may be derived rigorously from variational principles, the following physical interpretation, due to Kelvin and Tait [27, pg.45], is more instructive. If the twisting moment $M_{s\theta}$ acting on an infinitesimally small element of the shell is replaced by a statically equivalent force as shown in Fig. 2.1, one can write from statics the expression for the effective transverse shearing force as [27]

$$S_s = Q_s + \frac{M'_{s\theta}}{r} \quad 2.6.1$$

and the effective tangential shearing force as

$$T_s = N_{s\theta} - \frac{M_{s\theta}}{r_2} \quad 2.6.2$$

Writing Eqs. 2.6.1 and 2.6.2 in Fourier series terms, and separating the linearly independent terms, we may define

$$S_{sn} = Q_{sn} \pm \frac{nM_{s\theta n}}{r} \quad 2.7.1$$

$$T_{sn} = N_{s\theta n} - \frac{M_{s\theta n}}{r_2} \quad 2.7.2$$

Using the geometrical relations in Eqs. A.2, the derivatives of these forces with respect to the coordinate s may be written as

$$S'_{sn} = Q'_{sn} \pm R_n M'_{s\theta n} \mp R^2_n \cos \phi M_{s\theta n} \quad 2.8.1$$

$$\begin{aligned} T'_{sn} &= N'_{s\theta n} - \frac{r_2 M'_{s\theta n} - M_{s\theta n} r'^2_2}{r^2_2} \\ &= M'_{s\theta n} - R_2 M'_{s\theta n} - R_2 (R_1 - R_2) \cot \phi M_{s\theta n} \end{aligned} \quad \begin{array}{l} 2.8.2 \\ 2.8.2 \end{array}$$

2.4 Reduction of the Governing Equations

It can be seen that the stress resultants Q_θ , N_θ , M_θ , $M_{\theta s}$ and $N_{\theta s}$ do not enter into any boundary conditions on an edge for which $s = \text{constant}$. Therefore, it is preferable to

$$M_s = F_{11}(\beta, \beta^*, W, V, V^*, U, T_{12}) \quad 2.10.5$$

$$M_\theta = F_{12}(\beta, \beta^*, W, V, U, T_{11}) \quad 2.10.6$$

$$M_{s\theta} = F_{13}(\beta, W, V, U, U^*) \quad 2.10.7$$

$$M_{\theta s} = F_{14}(\beta, W, V, U, U^*) \quad 2.10.8$$

where the form of the functions F_1 to F_{14} is obtained from Eqs. 2.4 and 2.5. In addition, Eqs. A.7.1, 2.7 and 2.8, which will be called auxiliary equations, may be written in the following symbolic form,

$$\beta = F_{15}(W^*, V) \quad 2.11.1$$

$$S_s = F_{16}(Q_s, M_{s\theta}) \quad 2.11.2$$

$$T_s = F_{17}(N_{s\theta}, M_{s\theta}) \quad 2.11.3$$

$$S_s^* = F_{18}(Q_s^*, M_{s\theta}^*, M_{s\theta}) \quad 2.11.4$$

$$T_s^* = F_{19}(N_{s\theta}^*, M_{s\theta}^*, M_{s\theta}) \quad 2.11.5$$

It should be noted that for shells with equal radii of curvature (i.e., $r_1 = r_2$), the sixth equation of equilibrium Eq. 2.4.6 will be an identity as

$$N_{s\theta} = N_{\theta s}$$

$$M_{s\theta} = M_{\theta s}$$

Therefore, this equation will be discarded, as mentioned in

eliminate them in terms of the other stress resultants and evaluate them after the solution of the governing equations.

For convenience, the subscript n in Fourier coefficients will be omitted and the governing equations (Eqs. 2.4 and 2.5) can be written, for each set of equations, in the following symbolic form. The equilibrium equations (Eqs. 2.4) may be written symbolically as:

$$F_1 (N_s^*, N_s, N_{\theta s}, N_\theta, Q_s, P_s) = 0 \quad 2.9.1$$

$$F_2 (N_{s\theta}^*, N_{s\theta}, N_\theta, N_{\theta s}, Q_\theta, P_\theta) = 0 \quad 2.9.2$$

$$F_3 (N_\theta, N_s, Q_\theta, Q_s^*, Q_s, P_z) = 0 \quad 2.9.3$$

$$F_4 (M_s^*, M_s, M_{\theta s}, M_\theta, Q_s) = 0 \quad 2.9.4$$

$$F_5 (M_{s\theta}^*, M_{s\theta}, M_\theta, M_{\theta s}, Q_\theta) = 0 \quad 2.9.5$$

$$F_6 (N_{\theta s}, N_{s\theta}, M_{\theta s}, M_{s\theta}) = 0 \quad 2.9.6$$

The stress resultant-displacement equations (Eqs. 2.5) may be written symbolically as:

$$N_s = F_7(\beta, \beta^*, W, V, V^*, U, T_{O_2}) \quad 2.10.1$$

$$N_\theta = F_8(\beta, W, V, V^*, U, T_{O_1}) \quad 2.10.2$$

$$N_{s\theta} = F_9(\beta, W, V, U, U^*) \quad 2.10.3$$

$$M_{\theta s} = F_{10}(\beta, W, V, U, U^*) \quad 2.10.4$$

Appendix A, Sect. A.5 and as noted in Sect. 2.3.

In solving the above equations, the displacements which may be physically imposed on the boundary of a shell are β , W , V and U . The external forces associated with these displacements (in a work-equivalent sense) are M_s , S_s , N_s and T_s . The first set of variables are specified in the case of displacement boundary conditions while the latter set is specified in the case of mechanical or force boundary conditions. In general a combination of four of these eight quantities must be specified to properly define a boundary condition, provided that if one of the displacements is specified the associated force should not be specified and vice-versa. Since the remaining five of the thirteen variables cannot be determined at the boundary, it is desirable to eliminate them from the governing equations. The objective in the following is, therefore, to reduce the thirteen governing equations (Eqs. 2.9.1 to 2.9.5 and Eqs. 2.10) to a set of eight governing equations in terms of the eight variables which may arise in the specification of the boundary conditions. It is also desirable to keep the order of these differential equations to a minimum in order to facilitate the numerical solution. The final set of equations will be of first order.

Combining Eq. 2.9.1 and Eq. 2.11.2 to eliminate Q_s , one can get

$$N_s^* = R_1 S_s - R \cos \phi N_s + RR_1 M_{s\theta} + R \cos \phi N\theta + R_n N_{\theta s} - P_s$$

Using Eqs. 2.9.2 and 2.9.5 to eliminate Q_θ and then substituting for $M_{s\theta}^*$, $N_{s\theta}$, $N_{s\theta}^*$ by means of Eqs. 2.11.3 and 2.11.5, one can write

$$\begin{aligned}
 T_s^* &= -R \cos \phi T_s + RR_2 n M_\theta + RR_2 \cos \phi M_{\theta s} \\
 &\quad - R \cos \phi (R_1 - R_2) M_{s\theta} \pm Rn N_\theta \\
 &\quad - R \cos \phi N_{\theta s} - P_\theta
 \end{aligned}
 \tag{2.12.2}$$

Eqs. 2.9.4 and 2.11.2, after eliminating Q_s are in the form

$$\begin{aligned}
 M_s^* &= -R \cos \phi M_s + S_s + R \cos \phi M_\theta \\
 &\quad + Rn M_{\theta s} + Rn M_{s\theta}
 \end{aligned}
 \tag{2.12.3}$$

Using Eq. 2.9.3, after eliminating Q_θ by means of Eq. 2.9.5, together with Eqs. 2.11.2 and 2.11.4 results in the equation

$$\begin{aligned}
 S_s^* &= -R \cos \phi S_s - R_1 N_s + R^2 n^2 M_\theta + R^2 n \cos \phi M_{\theta s} \\
 &\quad + R^2 n \cos \phi M_{s\theta} - R_2 N_\theta + P_z
 \end{aligned}
 \tag{2.12.4}$$

Eqs. 2.12, which represent the equilibrium equations, may now be written symbolically as

$$M_s^* = F_{20} (M_s, S_s, M_\theta, M_{\theta s}, M_{s\theta})
 \tag{2.13.1}$$

$$S_s^\bullet = F_{21} (S_s, N_s, M_\theta, M_{\theta s}, M_{s\theta}, N_\theta, P_z) \quad 2.13.2$$

$$N_s^\bullet = F_{22} (S_s, N_s, M_{s\theta}, N_\theta, N_{\theta s}, P_s) \quad 2.13.3$$

$$T_s^\bullet = F_{23} (T_s, M_\theta, M_{\theta s}, M_{s\theta}, N_\theta, N_{\theta s}, P_\theta) \quad 2.13.4$$

or in matrix notation

$$\{F_s^\bullet\} = [B1 \quad B2] \begin{Bmatrix} F_s \\ F_\theta \end{Bmatrix} + \{B3\} \quad 2.14$$

where the loading terms in these equations are separated in the vector $\{B3\}$, and

$$\langle F_s \rangle = \langle M_s \quad S_s \quad N_s \quad T_s \rangle \quad 2.15.1$$

$$\langle F_s^\bullet \rangle = \langle M_s^\bullet \quad S_s^\bullet \quad N_s^\bullet \quad T_s^\bullet \rangle \quad 2.15.2$$

$$\langle F_\theta \rangle = \langle M_\theta \quad M_{\theta s} \quad M_{s\theta} \quad N_\theta \quad N_{\theta s} \rangle \quad 2.15.3$$

The coefficients of the matrices $[B1]$, $[B2]$ and $\{B3\}$ are defined in Table 2.1

In Eq. 2.14, the stress resultants have been separated into the vector $\langle F_s \rangle$, whose components are desired in the final formulation, and the vector $\langle F_\theta \rangle$, which remains to be eliminated from the formulation.

Let us now turn our attention to the displacement variables. Eqs. 2.10.1 and 2.10.5, which are two equations in

β^* , V^* , can be converted to the following two equations

$$\begin{aligned}
 \beta^* = & \frac{1}{CA_2} \left\{ - \left[\frac{CA_1}{K} \right] M_s + [R_1 - R_2] N_s \right. \\
 & + [R_1 r_1^* CA_2 - \nu R \cos \phi CA_1] \beta \\
 & - [\nu D R_2 (R_1 - R_2) + \nu R^2 n^2 CA_1] W \\
 & - [R_1^2 r_1^* CA_2 + \nu D R \cos \phi (R_1 - R_2)] V \\
 & \left. + [\nu R R_1 n CA_2] U + (1 + \nu) \alpha [D(R_1 - R_2) T_{O_2} + CA_1 T_{12}] \right\}
 \end{aligned}
 \tag{2.16.1}$$

in which

$$CA_1 = D + K R_1 (R_1 - R_2) \tag{2.16.2}$$

$$CA_2 = D + K R_2 (R_1 - R_2) \tag{2.16.3}$$

and

$$\begin{aligned}
 V^* = & \frac{1}{CA_2} \left\{ -[R_1 - R_2] M_s + N_s \right. \\
 & - [\nu K R \cos \phi (R_1 - R_2)] \beta \\
 & - [CA_2 R_1 + \nu D R_2 + \nu K R^2 n^2 (R_1 - R_2)] W \\
 & - [\nu D R \cos \phi] V + [\nu R n CA_2] U \\
 & \left. + (1 + \nu) \alpha [D T_{O_2} + K(R_1 - R_2) T_{12}] \right\}
 \end{aligned}
 \tag{2.16.4}$$

Eq. 2.11.1 is in the form

$$W^* = -\beta + R_1 V \quad 2.16.5$$

Finally, Eq. 2.10.3, after eliminating $N_{s\theta}$ by means of Eq. 2.11.3 can be written as

$$\begin{aligned} U^* = & \frac{1}{CA_3} \left\{ \left[\frac{2}{1-\nu} \right] T_s + [K R n (R_1 - 3R_2)] \beta \right. \\ & + [K R^2 n \cos \phi (R_1 - 3R_2)] W \pm [R n CA_1 - K R R_1 R_2 n] V \\ & \left. + [R \cos \phi CA_3] U \right\} \end{aligned} \quad 2.16.6$$

in which

$$CA_3 = D + K(R_1^2 - 3R_1 R_2 + 3R_2^2) \quad 2.16.7$$

Eqs. 2.16.1, 2.16.4, 2.16.5 and 2.16.6 can be written in a symbolic form as

$$\beta^* = F_{24}(\beta, W, V, U, M_s, N_s, T_{O_2}, T_{12}) \quad 2.17.1$$

$$W^* = F_{25}(\beta, V) \quad 2.17.2$$

$$V^* = F_{26}(\beta, W, V, U, M_s, N_s, T_{O_2}, T_{12}) \quad 2.17.3$$

$$U^* = F_{27}(\beta, W, V, U, T_s) \quad 2.17.4$$

or can be written in matrix notation as

$$\{D^\bullet\} = [A1 \quad A2] \begin{Bmatrix} D \\ F_s \end{Bmatrix} + \{A3\} \quad 2.18$$

where

$$\langle D \rangle = \langle \beta \quad W \quad V \quad U \rangle \quad 2.19.1$$

$$\langle D^\bullet \rangle = \langle \dot{\beta}^\bullet \quad \dot{W}^\bullet \quad \dot{V}^\bullet \quad \dot{U}^\bullet \rangle \quad 2.19.2$$

The coefficients of the matrices [A1], [A2] and the column vector {A3} are shown in Tables 2.2.

The stress resultants appearing in the vector $\langle F_\theta \rangle$ of Eq. 2.15.3 can be expressed in terms of the fundamental displacements by selecting Eqs. 2.10.2, 2.10.4, 2.10.6, 2.10.7 and 2.10.8 and writing them in matrix notation

$$\{F_\theta\} = [C1 \quad C2] \begin{Bmatrix} D^\bullet \\ D \end{Bmatrix} + \{C3\} \quad 2.20$$

where $\{F_\theta\}$, $\{D\}$ and $\{D^\bullet\}$ are defined in Eqs. 2.15.3, 2.19.1 and 2.19.2 respectively, and the coefficients of [C1], [C2] and {C3} are defined in Tables 2.3.

The three sets of equations (Eqs. 2.14, 2.18 and 2.20) can now be used to form a set of eight first order differential equations relating the eight fundamental variables; four displacements β , W , V , U , and four corresponding forces M_s , S_s , N_s , T_s and their derivatives. By substituting Eq. 2.20 into Eq. 2.14, to replace $\{F_\theta\}$

$$\{F_s^\bullet\} = [B1]\{F_s\} + [B2] \left\{ [C1]\{D^\bullet\} + [C1]\{D\} + \{C3\} \right\} + \{B3\} \quad 2.21.1$$

and by substituting for $\{D^\bullet\}$, from Eq. 2.18,

$$\begin{aligned} \{F_s^\bullet\} &= [B1]\{F_s\} + [E1] \left\{ [A1]\{D\} + [A2]\{F_s\} + \{A3\} \right\} \\ &\quad + [E2]\{D\} + \{E3\} \end{aligned} \quad 2.21.2$$

or

$$\{F_s^\bullet\} = [G1]\{D\} + [G2]\{F_s\} + \{G3\} \quad 2.22$$

where

$$[E1] = [B2][C1] \quad 2.23.1$$

$$[E2] = [B2][C2] \quad 2.23.2$$

$$\{E3\} = [B2]\{C3\} + \{B3\} \quad 2.23.3$$

$$[G1] = [E1][A1] + [E2] \quad 2.23.4$$

$$[G2] = [E1][A2] + [B1] \quad 2.23.5$$

$$\{G3\} = [E1]\{A3\} + \{E3\} \quad 2.23.6$$

Eq. 2.18 and Eq. 2.22, can be combined into one matrix equation as

$$\begin{aligned} \begin{Bmatrix} D^\bullet \\ F_s^\bullet \end{Bmatrix} &= \begin{bmatrix} A1 & A2 \\ G1 & G2 \end{bmatrix} \begin{Bmatrix} D \\ F_s \end{Bmatrix} + \begin{Bmatrix} A3 \\ G3 \end{Bmatrix} \\ &= [GA] \begin{Bmatrix} D \\ F_s \end{Bmatrix} + \{GB\} \end{aligned} \quad 2.24$$

Therefore, for the applied loads, stresses and displacements being periodic functions of the coordinate θ , the general governing partial differential equations, Eqs. A.5 and Eqs. A.17, have been transformed into a system of eight first order ordinary differential equations for each harmonic member n . These equations relate, at any point, the eight fundamental dependent variables, that appear in the natural boundary conditions of shells of revolution, and their derivatives with respect to the independent variable s .

As was seen, the reduction of the shell equation into this form involves only straight forward algebraic manipulations. The equations have been put in this form to facilitate numerical integration. They can be integrated with the aid of an appropriate integration technique, such as the Runge-Kutta process. Since a digital computer is needed to perform this integration, the reduction of the equations to the final form, as in Eq. 2.24, is not necessary and can be performed by feeding the three sets of equations (Eqs. 2.14, 2.18 and 2.20) into the computer.

It can be seen that the elements of the matrix GA in Eq. 2.24 are dependent only on the shell thickness, the physical constants and the coordinate s . It should be noted that in the case of shell of revolution under symmetrical loading conditions (i.e., $n = 0$) the system of the eight equations reduces naturally to a system of six first order equations as the displacement component U and the corresponding force T_s vanish due to the symmetry of the applied load.

$-R \cos \phi$				$R \cos \phi$	$\frac{-Rn}{+}$	$\frac{-Rn}{+}$				
	$-R \cos \phi$	$-R_1$		$R^2 n^2$	$\frac{-R^2 n \cos \phi}{+}$	$\frac{-R^2 n \cos \phi}{+}$	$-R_2$			P_r
	R_1	$-R \cos \phi$				$\frac{-RR_1 n}{+}$	$R \cos \phi$	$\frac{-Rn}{+}$		$-P_s$
				$\frac{-RR_2 n}{+}$	$RR_2 \cos \phi$	$\frac{-R \cos \phi}{(R_1 - R_2)}$	$\frac{+Rn}{-}$	$-R \cos \phi$		$-P_\theta$

Matrix B1

Matrix B2

Vector B3

TABLE 2.1 Coefficients of Matrices B1, B2 and Load Vector B3 in Eq. 2.14

$R_1 r_{11} - \sqrt{R \cos \phi} \frac{CA_1}{CA_2}$	$- \sqrt{\frac{DR_2(R_1 - R_2)}{CA_2}}$ $- \sqrt{R^2 n^2 \frac{CA_1}{CA_2}}$	$- R^2 r_{11}$ $- \sqrt{D} \frac{R \cos \phi}{CA_2} (R_1 - R_2)$	$-\sqrt{R R_1 n}$
-1		R_1	
$- \sqrt{K} \frac{R \cos \phi}{CA_2} (R_1 - R_2)$	$- R_1 - \sqrt{\frac{D R_2}{CA_2}}$ $- \sqrt{K} \frac{R^2 n^2}{CA_2} (R_1 - R_2)$	$- \sqrt{\frac{D R}{CA_2} \cos \phi}$	$-\sqrt{R n}$
$-\sqrt{K} \frac{R n}{CA_3} (R_1 - 3R_2)$	$-\sqrt{K} \frac{R^2 n \cos \phi}{CA_3} (R_1 - 3R_2)$	$+\sqrt{R n} \frac{CA_1}{CA_3}$ $- K \frac{R R_1 R_2}{CA_3} n$	$R \cos \phi$

TABLE 2.2.1 Coefficients of Matrix A1 in Eq. 2.18

$-\frac{CA_1}{K.CA_2}$	$\frac{R_1 - R_2}{CA_2}$		$\frac{(1 + \nu)\alpha}{CA_2} \{D(R_1 - R_2) T_{O_2} + CA_1 T_{12}\}$
$-\frac{(R_1 - R_2)}{CA_2}$	$\frac{1}{CA_2}$		$\frac{(1 + \nu)\alpha}{CA_2} \{K(R_1 - R_2) T_{12} + DT_{O_2}\}$
		$(\frac{2}{1 - \nu}) \frac{1}{CA_3}$	

Matrix A2

Vector A3

TABLE 2.2.2 Coefficient of Matrix A2 and Load Vector A3 in Eq. 2.18

- vK				(1 + v) α K T ₁₁
			$-\left(\frac{1-v}{2}\right) K R_2$	
			$\left(\frac{1-v}{2}\right)\{K(R_1 - R_2)\}$	
		vD		$-(1 + v) \alpha D T_{O1}$
			$\left(\frac{1-v}{2}\right) D$	


Matrix C1

Vector C3

TABLE 2.3.1 Coefficients of Matrix C1 and Load Vector C3 in
Eq. 2.20

$\vee K R_1 r_1^* - K R \cos \phi$	$- K R^2 n^2 - K R_2 (R_1 - R_2)$	$- \gamma K R_1^2 r_1^* - K R \cos \phi (R_1 - R_2)$	$- K R R_1 n$
$+\left(\frac{1-\nu}{2}\right) (2K Rn)$	$+\left(\frac{1-\nu}{2}\right) (2K R^2 n \cos \phi)$	$+\left(\frac{1-\nu}{2}\right) (K R R_2 n)$	$\left(\frac{1-\nu}{2}\right) (K R R_2 \cos \phi)$
$+\left(\frac{1-\nu}{2}\right) (2K Rn)$	$\left(\frac{1-\nu}{2}\right) (2K R^2 n \cos \phi)$	$+\left(\frac{1-\nu}{2}\right) (K R R_1 n)$	$-\left(\frac{1-\nu}{2}\right) \{K R \cos \phi (R_1 - 2R_2)\}$
$K R \cos \phi (R_1 - R_2)$	$D(R_2 + \nu R_1) + K(R_1 - R_2) (R^2 n^2 - R_2^2)$	$R \cos \phi \{D - K R_2 (R_1 - R_2)\}$	$+D Rn$
$+\left(\frac{1-\nu}{2}\right) \{K Rn (R_1 - R_2)\}$	$+\left(\frac{1-\nu}{2}\right) \{K R^2 n \cos \phi (R_1 - R_2)\}$	$+\left(\frac{1-\nu}{2}\right) \{Rn [D - K(R_1 - R_2)^2]\}$	$-\left(\frac{1-\nu}{2}\right) D R \cos \phi$

TABLE 2.3.2 Coefficients of Matrix C2 in Eq. 2.20

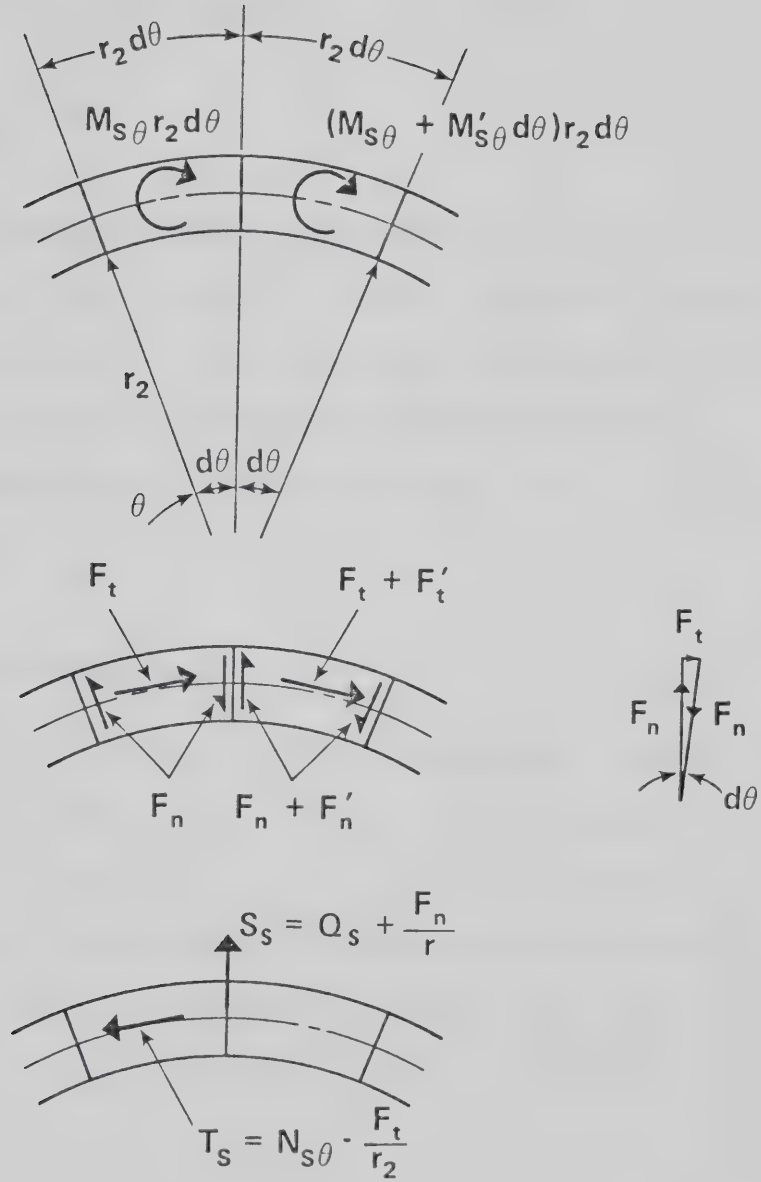

* F_n, F_t are the Equivalent Static Forces of $M_{s\theta}$

Fig. 2.1 Effective Shearing Forces

CHAPTER 3

STIFFNESS ANALYSIS

3.1 Introduction

This chapter describes how the standard methods of structural analysis can be employed to obtain a complete solution in terms of the stresses and the displacements at any point within a complex structure composed of many elements of any type of shell of revolution, using the eight fundamental equations derived in Chapter 2.

3.2 Influence Coefficients

If a perfectly elastic structural component, supported against rigid body motion, is acted upon by a set of forces $F_1, F_2, F_3, \dots, F_n$ at points 1, 2, 3, ..., n and if in addition to this set of forces, intermediate loads are applied simultaneously to the structural member, the induced deformation d_i at the point i due to the forces F_j ($j = 1, 2, 3, \dots, n$) can be expressed in the form

$$d_i = \sum_{j=1}^n a_{ij} F_j + d_i^0 \quad 3.1$$

where d_i^0 is the additional deformation at point i due to the intermediate applied loads and a_{ij} represents the deflection d_i due to a unit value of F_j . The elastic constants a_{ij} are

independent of the magnitude of the applied forces F_j . Eq. 3.1, which represent the linear relation of deformations and forces, can be written in matrix form as

$$\{d\} = [A]\{F\} + \{d^0\} \quad 3.2$$

where the square matrix $[A]$ is known as the flexibility matrix.

For the same problem the relation given in Eq. 3.2 can also be written in a form which represents the equilibrium conditions for the structure as

$$\begin{aligned} \{F\} &= [K]\{d - d^0\} \\ &= [K]\{d\} + \{F^0\} \end{aligned} \quad 3.3$$

where the square matrix $[K]$ is defined the element stiffness matrix. The element K_{ij} is defined as the force F_j due to unit displacement at d_j . $\{F^0\}$ is the column vector $\{F^0_1, F^0_2, \dots, F^0_n\}$ which are the equivalent forces that replace the intermediate applied loads (equivalent in the sense that the work done during any incremental deformation approximates the work done by the actual applied load). These forces are numerically equal to the so-called fixed end forces.

As stated above, while establishing the flexibility matrix the structure is assumed to be supported against rigid body motion, a condition not necessary for the stiffness matrix. For the latter case the structure can be free to move as a rigid

body when a set of nodal displacements is applied. The stiffness matrix, thus obtained, is called "the direct stiffness matrix" which is singular. The elements in any column represent a force system in equilibrium.

The well known advantage of the direct stiffness method is that for an assembly of structural elements, the total structural stiffness matrix can be easily formed by superposition of the individual stiffness matrices irrespective of the boundary conditions. The boundary conditions are considered only after assembly in the actual solution of the system of equations. This permits the consideration of different boundary conditions while the total structure stiffness matrix remains unaltered.

3.3 Shell Element Influence Coefficients

By a procedure similar to that used for a beam element, the stiffness matrix for an element of shell of revolution can be obtained. Since the shell element is a rotationally symmetric element, the nodal points are replaced with nodal circles (Fig. 3.1). The forces and displacements can be expressed as the amplitude of a harmonic number along the nodal circles.

Consider the shell element shown in Fig. 3.1. The eight fundamental stress resultants per unit length at the two edges of the element are shown acting in the positive sense according to the shell theory sign convention. Should the edge $s = a$ of the element be subjected to a unit value of displacement

in the direction of W while preventing any other displacement of the two ends of the element, the forces per unit length that would be required to maintain equilibrium of the element are the influence coefficients for a unit displacement W_a . If one writes the degrees of freedom of the element in the order $\beta_a W_a V_a U_a \beta_b W_b V_b U_b$, the element stiffness equation (Eq. 3.3) can be written as

$$\begin{Bmatrix} M_{sa} \\ S_{sa} \\ N_{sa} \\ T_{sa} \\ M_{sb} \\ S_{sb} \\ N_{sb} \\ T_{sb} \end{Bmatrix} = [K] \begin{Bmatrix} \beta_a \\ W_a \\ V_a \\ U_a \\ \beta_b \\ W_b \\ V_b \\ U_b \end{Bmatrix} + \begin{Bmatrix} M_{sa}^0 \\ S_{sa}^0 \\ N_{sa}^0 \\ T_{sa}^0 \\ M_{sb}^0 \\ S_{sb}^0 \\ N_{sb}^0 \\ T_{sb}^0 \end{Bmatrix} \quad 3.4$$

where M_s^0 , S_s^0 , N_s^0 , T_s^0 are the fixed end stress resultants, at the ends a or b as subscripted, due to the applied loads or thermal gradients.

In order to establish the stiffness matrix and the fixed end stresses, the predetermination of the relationship between the edge displacements and the edge forces is necessary. The stiffness coefficients and fixed end forces for a beam element can be evaluated by the well known method, such as consistent deformation, or solving the pertinent differential equations.

If an analytical solution of the relevant differential equations for a specific geometry of shells is known, both influence coefficients and fixed end forces due to the applied loads can be found. Such a solution is not available for an arbitrary element of shells of revolution with variable thickness and subjected to arbitrary loadings. However, the forces can be evaluated by solving the basic differential equations numerically.

3.4 Solution of the Governing System of Equations

For any given shell element with given geometry and applied load, the governing system of equations (Eq. 2.24) is in the form

$$\{y^{\bullet}_{(s)}\} = [A_{(s)}]\{y_{(s)}\} + \{B_{(s)}\} \quad 3.5$$

where $\{y_{(s)}\}$ is a vector of the eight dependent variables, four displacements and four corresponding forces, at a particular location $s = \text{constant}$; $\{y^{\bullet}_{(s)}\}$ is a vector of the derivatives of the eight variables with respect to the coordinate s , i.e., $d/ds\{y_{(s)}\}$; $[A_{(s)}]$ is the coefficient matrix relating the variables and their derivatives and consists only of functions of the shell thickness and the geometrical parameters of the location s ; and, $\{B_{(s)}\}$ is a vector of the inhomogeneous terms in the equations and is a function of the applied loads and the location s .

The general solution of Eq. 3.5 consists of two parts:

- 1) The solution of the homogeneous part of the equations, i.e., the differential equations when all loading terms, $\{B_{(s)}\}$, are set equal to zero. This homogeneous solution involves the evaluation of eight constants of integration as the result of eight boundary conditions at the two discontinuous edges of the shell.
- 2) The particular solution of the equations in which all loading terms are considered. This solution does not depend upon the boundary conditions.

Therefore, the general solution that satisfies the governing system of equations together with the appropriate boundary conditions at the two edges of the shell element can be written as

$$\{y_{(s)}\} = \{h_{(s)}\} + \{P_{(s)}\} \quad 3.6$$

where $\{P_{(s)}\}$ represents the particular solution that satisfies the equation.

$$\{P^*_{(s)}\} = [A_{(s)}]\{P_{(s)}\} + \{B_{(s)}\} \quad 3.7$$

and, $\{h_{(s)}\}$ is the homogeneous solution that satisfies the equation.

$$\{h^{\bullet}_{(s)}\} = [A_{(s)}]\{h_{(s)}\} \quad 3.8$$

Consider now the solution of Eq. 3.8 for an element which spans the region $b \geq s \geq a$. Since Eq. 3.8 represents eight first order linear differential equations, the solution should contain eight arbitrary constants of integration. Let these arbitrary constants of integration be the eight (arbitrary) boundary values which can be imposed at edge "a", and denote these values by $\{c\}$. Then at edge "a"

$$\{h_{(a)}\} = \{c\} \quad 3.9$$

Substituting into Eq. 3.8 yields, for $s = a$

$$\{h^{\bullet}_{(s)}\}_{s=a} = [A_{(s)}]_{s=a} \{c\} \quad 3.10$$

Integrating this numerically, as an initial value problem, allows the value of $h_{(s)}$ at any point $s > a$ to be determined as

$$\{h_{(s)}\} = [H_{(s)}]\{c\} \quad 3.11$$

where $[H_{(s)}]$ represents the matrix arising from the integration of the $[A_{(s)}]$ matrix along the length of the element.

Since the matrix $[H_{(s)}]$ is independent of the initial conditions ($\{c\}$), it is a property of the element and may be interpreted as follows. As $\{c\}$ is arbitrary, assign a unit value to one component, say component c_j , and set the others equal to zero. Then the j^{th} column of $[H_{(s)}]$ represents the values of $\{h_{(s)}\}$ for a unit value of the j^{th} boundary condition at "a". It is apparent that when $s = a$, Eq. 3.11 must reduce to Eq. 3.9 in order to match the arbitrary boundary conditions, and hence $[H_{(a)}]$ must be the identity matrix, i.e.

$$[H_{(a)}] = [I] \quad 3.12$$

Eq. 3.12 may be considered to be a "boundary condition" on the numerical integration of the matrix $[H]$.

Turning now to the solution of Eq. 3.7, the equation at $s = a$ may be written as

$$\{P^*_{(s)}\}_{s=a} = [A_{(s)}]_{s=a} \{c^*\} + \{B_{(s)}\} \quad 3.13$$

where $\{c^*\}$ represents an arbitrary set of initial values of $\{P_{(a)}\}$. Numerical integration of this equation yields

$$\{P_{(s)}\} = [H_{(s)}] \{c^*\} + \{Q_{(s)}\} \quad 3.14$$

where $[H_{(s)}]$ is the matrix that arises in Eq. 3.11 and $\{Q_{(s)}\}$ is a vector arising from the integration of the inhomogeneous terms. Since the particular solution is any solution which

satisfies the inhomogeneous equations it is adequate to select

$$\{c^*\} = 0 \quad 3.15$$

in which case Eq. 3.14 reduces to

$$\{P_{(s)}\} = \{Q_{(s)}\} \quad 3.16$$

and consequently the general solution, Eq. 3.6, becomes

$$\{y_{(s)}\} = [H_{(s)}]\{c\} + \{Q_{(s)}\} \quad 3.17$$

For $s = b$, Eq. 3.17 becomes

$$\{y_{(b)}\} = [H_{(b)}]\{y_{(a)}\} + \{Q_{(b)}\} \quad 3.18$$

in which each column vector of $[H]$ represents the variables at "b" corresponding to each unit variable applied at "a" in the absence of any applied loads. The vector $\{Q\}$ represents the variables at "b" corresponding to zero displacements and stresses resultants at "a" in the presence of the applied loads.

3.5 Shell Element Stiffness Matrix

The column vector $\{y_{(s)}\}$ represents the vector of Eq. 2.24 consisting of the four displacements as defined by Eq. 2.15.1 and the four stress resultants as defined by Eq. 2.19.1.

Let

$$\{y_{(a)}\} = \begin{Bmatrix} D_a \\ F_a \end{Bmatrix} \quad 3.19$$

and

$$\{y_{(b)}\} = \begin{Bmatrix} D_b \\ F_b \end{Bmatrix} \quad 3.20$$

Eq. 3.18 can be written in partitioned form as

$$\begin{Bmatrix} D_b \\ F_b \end{Bmatrix} = \begin{bmatrix} H_1 & H_2 \\ H_3 & H_4 \end{bmatrix} \begin{Bmatrix} D_a \\ F_a \end{Bmatrix} + \begin{Bmatrix} Q_d \\ Q_f \end{Bmatrix} \quad 3.21$$

where

D represents the four displacement variables,

F represents the four stress resultant variables, and

Q_d , Q_f are the displacement and the stress resultant parts of the particular solution respectively.

The total matrix appearing in Eq. 3.21 is usually referred to as a "transfer matrix" [23]. Eq. 3.21 can be expanded to form two equations as follow

$$\begin{Bmatrix} D_a \\ D_b \end{Bmatrix} = \begin{bmatrix} I & 0 \\ H_1 & H_2 \end{bmatrix} \begin{Bmatrix} D_a \\ F_a \end{Bmatrix} + \begin{Bmatrix} 0 \\ Q_d \end{Bmatrix}$$

$$= [Y_1] \begin{Bmatrix} D_a \\ F_a \end{Bmatrix} + \begin{Bmatrix} 0 \\ Q_d \end{Bmatrix} \quad 3.22$$

and

$$\begin{Bmatrix} F_a \\ F_b \end{Bmatrix} = \begin{bmatrix} 0 & I \\ H_3 & H_4 \end{bmatrix} \begin{Bmatrix} D_a \\ F_a \end{Bmatrix} + \begin{Bmatrix} 0 \\ Q_f \end{Bmatrix}$$

$$= [Y_2] \begin{Bmatrix} D_a \\ F_a \end{Bmatrix} + \begin{Bmatrix} 0 \\ Q_f \end{Bmatrix} \quad 3.23$$

Solving Eq. 3.22 for the vector $\langle D_a \ F_a \rangle^T$ and substituting into Eq. 3.23, yields

$$\begin{Bmatrix} F_a \\ F_b \end{Bmatrix} = [Y_2] [Y_1]^{-1} \begin{Bmatrix} D_a \\ D_b - Q_d \end{Bmatrix} + \begin{Bmatrix} 0 \\ Q_f \end{Bmatrix} \quad 3.24$$

or

$$\begin{Bmatrix} F_a \\ F_b \end{Bmatrix} = [K] \begin{Bmatrix} D_a \\ D_b \end{Bmatrix} + \begin{Bmatrix} F_a^0 \\ F_b^0 \end{Bmatrix} \quad 3.25$$

It can be seen that each column of $[K]$ represents the stress resultants at each end for a unit displacement applied at one end while the other displacements are restrained and $\{F^0\}$ represents the stress resultants corresponding to the totally restrained boundaries.

3.6 Stiffness Matrix Sign Convention

In the derivation of the element stiffness matrix and the fixed end stresses, the sign convention used corresponds to that generally used in shell theory as given in Fig. 3.1. As a result, the stiffness matrix will have some negative elements on the main diagonal. This can be corrected by adapting the so called "stiffness matrix sign convention". This sign convention is shown in Fig. 3.2. It can be seen that the positive direction of the top normal in plane force N_s , the top tangential shearing force T_s , the bottom moment M_s and the bottom transverse shear S_s have been changed to the opposite direction. Therefore, the stiffness matrix and fixed end stresses in Eq. 3.25 are to be premultiplied by the diagonal matrix

$$\begin{bmatrix} 1 & & & & & & & \\ & 1 & & & & & & \\ & & -1 & & & & & \\ & & & -1 & & & & \\ & & & & -1 & & & \\ & & & & & -1 & & \\ & & & & & & 1 & \\ & & & & & & & 1 \end{bmatrix}$$

3.7 Stress Resultants and Displacements at Intermediate Points

For a shell structure composed of a number of elements, the element stiffness matrices and fixed end forces are evaluated and assembled in the master stiffness equations of the structure. Boundary conditions are imposed, and the displacements at the boundaries of each element are obtained from the solution of the master equations. By substituting the final known boundary displacements of each element into the corresponding element stiffness equation (Eq. 3.25), the primary stress resultants at the element boundaries can be obtained. Thus the correct boundary conditions, displacements and primary stress resultants, for each element are known. In order to evaluate the displacements and the stress resultants at any desired number of intermediate points within the element, the correct boundary conditions at one end of the element, say the end at $s = a$, are used as initial conditions in integrating the governing set of equations (Eq. 3.5). At each intermediate point, the secondary stress resultants (which were eliminated from the governing equations) can be evaluated, first by evaluating the derivatives of the displacements using Eq. 2.18.

$$\{D^*\} = [A1]\{D\} + [A2]\{F_s\} + \{A3\} \quad 3.26$$

and then substituting into Eq. 2.20

$$\{F_\theta\} = [C1]\{D^*\} + [C2]\{D\} + \{C3\} \quad 3.27$$

A simple check on the results of the integration is that the displacements and the primary stress resultants at the termination end of the element should agree exactly with the known boundary conditions at this end.

3.8 Transformation from Local to Global Coordinates

Displacements and stress resultants, at any point along the generator, are presented in the direction tangent to the meridian at this point and the direction perpendicular to it. Due to possible discontinuity of the meridian curve at a junction between two elements, it is necessary to transform the influence coefficients and the fixed end forces at this junction, to a new coordinates system. It is simplest to adopt the direction of the structure's axis of revolution, x , and the direction perpendicular to it, r . According to the stiffness matrix sign convention, the transformation equations may be written as follow

$$\{D_L\} = [L]\{D_G\} \quad 3.28.1$$

$$\{F_G\} = [L]^T\{F_L\} \quad 3.28.2$$

where

$$[L] = \begin{bmatrix} 1 & 0 & 0 \\ 0 & \sin \phi_i & -\cos \phi_i \\ 0 & \cos \phi_i & \sin \phi_i \\ 0 & 0 & 0 \end{bmatrix} \quad 3.29$$

$\{D\}$ and $\{F\}$ represent the displacement and forces respectively and the subscripts L, G represent local and global coordinates. ϕ_i is the angle measured from the global axis of rotation to the meridian at the point $s = i$ (Fig. 3.3).

3.9 Modification of Stiffness Coefficients to Account for Eccentricity

In many cases the middle surfaces of two elements which meet at a node do not coincide at the same point (Fig. 3.4). A transformation of the stiffness coefficients and fixed end stresses to a common reference point is then necessary before assembling the element stiffness matrices into the master stiffness matrix. Eqs. A.10 relate the displacement components of a point at a distance z from the middle surface to the displacement components of a point on the middle surface lying in the same plane. By expanding Eqs. A.10, by means of Fourier series, one can write the following equation

$$\begin{Bmatrix} \beta_z \\ W_z \\ V_z \\ U_z \end{Bmatrix} = \begin{bmatrix} 1 & 0 & 0 & 0 \\ 0 & 1 & 0 & 0 \\ z & 0 & 1 & 0 \\ 0 & \frac{nz}{r} & 0 & \frac{r_2+z}{r_2} \end{bmatrix} \begin{Bmatrix} \beta \\ W \\ V \\ U \end{Bmatrix} \quad 3.30$$

where Eq. A.7.1 has been used to eliminate the derivative of W with respect to s and the subscript z refers to the point at a

distance z from the middle surface. Inverting Eq. 3.30 results in

$$\begin{Bmatrix} \beta \\ W \\ V \\ U \end{Bmatrix} = \begin{bmatrix} 1 & 0 & 0 & 0 \\ 0 & 1 & 0 & 0 \\ -z & 0 & 1 & 0 \\ 0 & \frac{-nr_2z}{r(r_2+z)} & 0 & \frac{r_2}{r_2+z} \end{bmatrix} \begin{Bmatrix} \beta_z \\ W_z \\ V_z \\ U_z \end{Bmatrix} \quad 3.31$$

or

$$\{D\} = [EC]\{D_z\} \quad 3.32$$

From the work equivalence requirements, the relation between the stresses at the two points can be written as

$$\{F_z\} = [EC]^T\{F\} \quad 3.33$$

Eq. 3.32 and 3.33 are used to transform the displacements and stresses of a point on the middle surface to a point at a distance z from the middle surface.

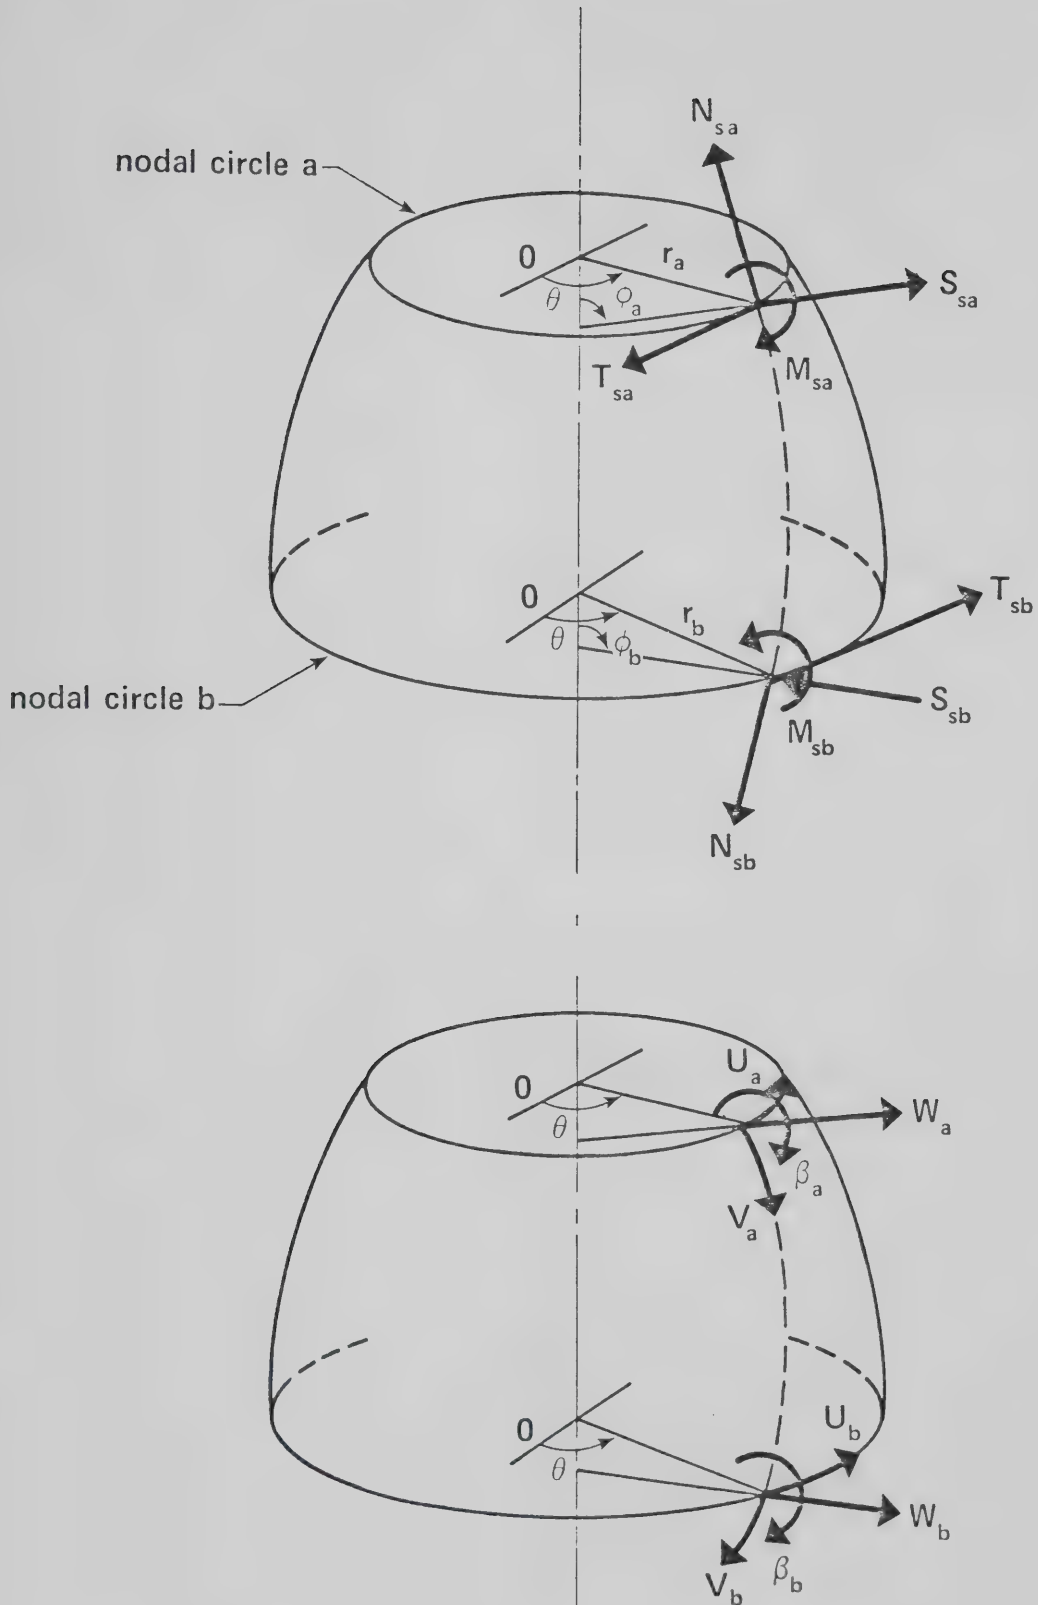


Fig. 3.1 Shell Theory Sign Convention for Stress Resultants and Displacements

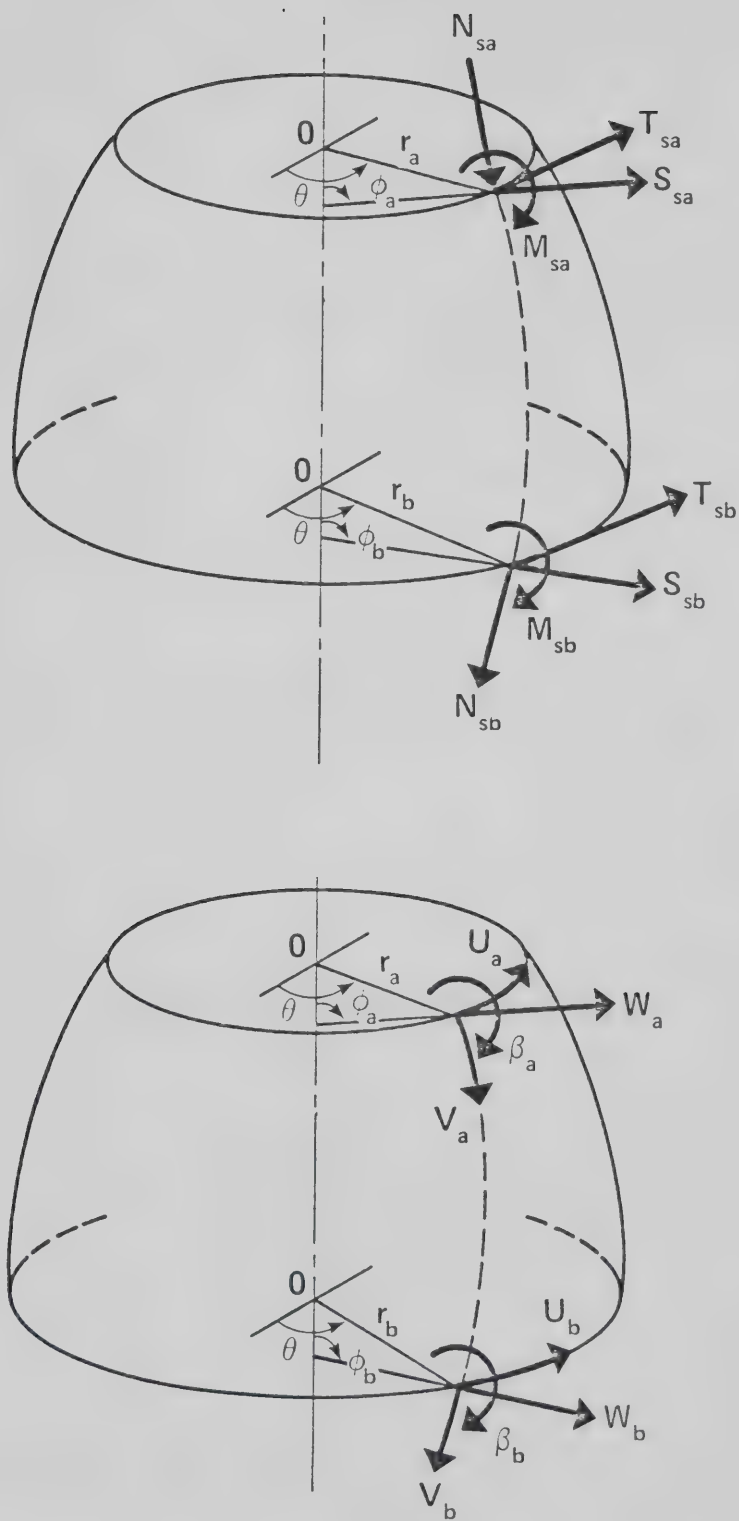


Fig. 3.2 Stiffness Matrix Sign Convention for Stress Resultants and Displacements.

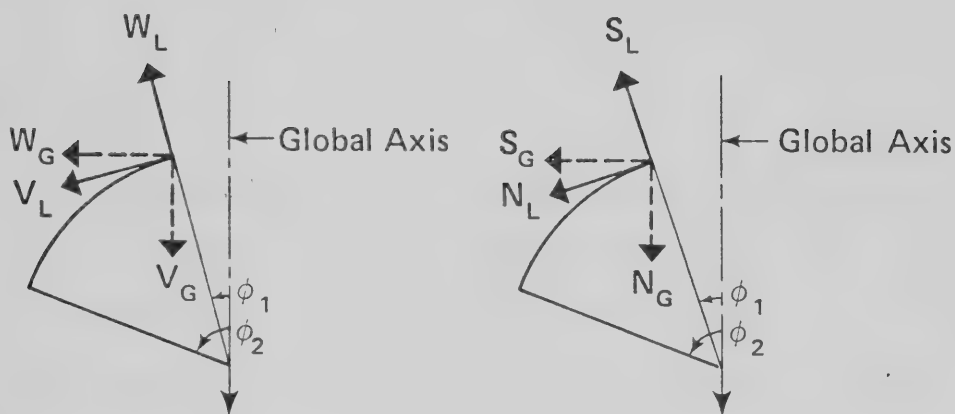


Fig. 3.3 Notation for Transformation of Stress Resultants and Displacements

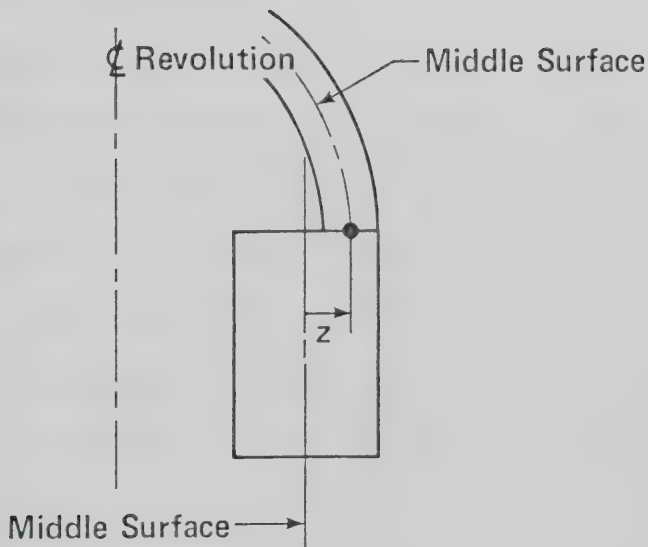


Fig. 3.4 Eccentricity at a Node

CHAPTER 4

EXAMPLE APPLICATIONS

4.1 Introduction

A computer program, named SASHELL, has been developed to perform the stiffness analysis of segmented shell structures based on the theory presented in the preceding chapters. The logic flow of SASHELL is outlined in Sect. 4.2 and listing of the program is included in Appendix C. The results of the analysis of two example applications, using SASHELL, are presented in this chapter.

The first example is the pinched cylinder. The exact analytical solution for a long cylinder pinched by a symmetrical circumferential line load (Fig. 4.1) is known [27, pp. 471; 10, pp. 280]. Finite element solutions, using (48 x 48) element stiffness matrices [11] and (24 x 24) element stiffness matrices [5,7], were obtained for the case of a cylindrical shell loaded by diametrically opposed concentrated loads (Fig. 4.2). This solution was compared [2] against an analytical solution based on the inextensional deformation theory (i.e. neglecting entirely the strain in the middle surface of the shell) [27, pp. 501-506].

The second example is the analysis of hyperboloid natural draft cooling tower under the action of wind load and

its own weight. Finite element analysis, using the computer program SORIII [14] and using conical shell elements to approximate the geometry [24] are known.

4.2 Logic Flow of SASHELL

In this section, the organization of the computer program SASHELL, which can serve as a summary for the solution technique of segmented shell structure as described in the preceding chapters, is outlined. Details of the required input are given in Appendix B.

- 1) The structure is divided into elements, each of which is a simple type of shell of revolution, and which are connected along nodal circles or "nodes". A concentrated load applied at a point along the meridional coordinate must be treated as a load acting on a node connecting two elements.
- 2) Nodal coordinates, system connectivity information and element types, properties and loading conditions are determined. The problem control parameters are established and input (Subroutine READIN and LOADIN).

The program now performs the following operations:

- 1) Each element is examined. If a coefficient which depends on the element geometric parameters (see the limitations in Sect. 5.3) exceeds a certain limit, the element is divided into subelements (segments) each of which satisfies this limit (subroutine SEGMNT).

- 2) The connectivity of the system is altered to include the new intermediate nodal points. Geometric parameters and loadings values at each segment boundary are calculated (subroutine SEGEOM).
- 3) The number of the structure's degrees of freedom are established.
- 4) If the external applied load on the structure is symmetric, the program discards step 5 and goes to step 6.
- 5) If the load is non-axisymmetric, the total number of points in the meridional and circumferential direction in the structure is determined and the "results" array is initialized.
- 6) The harmonic number, n , is set equal to zero.
- 7) The structure stiffness matrix and load vector are initialized. The nodal load coefficients, if any, which correspond to the harmonic n are added to the load vector.
- 8) The stiffness analysis starts by calculating the stiffness matrix and fixed end forces for each segment in the structure (subroutine STIFAN).
- 9) The geometric parameters and external applied loadings at the desired number of integration points in the segment under consideration are calculated. Dead weight of the segment, if required and if $n = 0$, is superimposed (subroutine PLSEG and DLSEG).

- 10) The initial conditions at the starting edge of the segment, as stated in Sect. 3.4 (Eqs. 3.12 and 3.15), are set. The governing equations (subroutine FLUGGE) are integrated, using a fourth order Runge-Kutta method, over the desired number of points to obtain the transfer matrix of the segment (subroutine RNGKT).
- 11) The segment stiffness matrix and fixed end forces are evaluated from the transfer matrix obtained in step 10, as described in Sect. 3.5 (subroutine STIFIX).
- 12) The results of step 11 are saved (subroutine STORE1).
- 13) The segment stiffness matrix and fixed end forces are modified to correspond to the stiffness matrix sign convention, as stated in Sect. 3.6.
- 14) The stiffness influence coefficients and fixed end forces are modified to account for nodal eccentricity, if any, as mentioned in Sect. 3.9. (subroutine ECCNTR).
- 15) If required, the segment stiffness influence coefficients and fixed end forces are transformed, due to discontinuity of the meridian at the node, to the structural global coordinates, as stated in Sect. 3.8 (subroutine GLTRAN).
- 16) The segment stiffness influence coefficients are assembled, with respect to the structure's degrees of freedom, into the master stiffness matrix. The segment fixed end forces are subtracted from the

corresponding values in the load vector (subroutine STORE).

- 17) Steps 9 to 16 are repeated for each segment in the structure.
- 18) The boundary conditions are imposed on the master stiffness equation (subroutine BOUNDC).
- 19) Segments edge displacements is obtained, using Gaussian elimination algorithm to solve the master stiffness equation (subroutine SOLVER).
- 20) The stiffness analysis, for harmonic number n , is completed. The displacements and stress resultants at the desired number of intermediate points in each segment are to be evaluated (subroutine SRADSP).
- 21) The segment edge displacements, obtained in step 19, are transformed, if necessary, to the segment local coordinates and to account for nodal eccentricity (subroutine GLTRAN and ECCNTR).
- 22) The known segment edge displacements are substituted in the corresponding segment stiffness equation, saved in step 12. The primary stress resultants at the segment boundaries are evaluated, as described in Sect. 3.7 (subroutine STORE1).
- 23) The shell equations are integrated, using the initial conditions calculated in step 22, in order to determine the displacements and primary and secondary stress resultants at the intermediate points within the segment, as described in Sect. 3.7 (subroutine RESULT).

- 24) If the load is symmetric (i.e., the required number of harmonics is zero), the results of step 23 are printed out and the program goes to step 26.
- 25) If the load is non-axisymmetric (i.e., the required number of harmonic is greater than zero), the displacements and stress resultants are calculated at the desired number of points in the circumferential direction. The results are superimposed in the "results" array (subroutine STORE2).
- 26) Steps 21 to 25 are repeated for each segment in the structure.
- 27) The harmonic number, n , is increased by one. Steps 7 to 26 are repeated until n is equal to the required number of harmonics.
- 28) The results saved in step 25 are printed out and the program stops.

4.3 Pinched Cylinder

The governing differential equation for a circular cylindrical element is

$$\frac{d^2 W}{dx^2} \left(K \frac{d^2 W}{dx^2} \right) + \frac{Et}{r^2} W = P_z \quad 4.1$$

where x measures the distance along the axis of the cylinder with the origin ($x = 0$) at midlength of the element. When the thickness of the shell is constant, this equation reduces to

$$\frac{d^4 W}{dx^2} + 4\lambda^4 W = \frac{P_z}{K} \quad 4.2$$

in which the flexural rigidity, K , is

$$K = \frac{Et^3}{12(1 - \nu^2)} \quad 4.3$$

and the coefficient λ is defined as

$$\lambda = \sqrt[4]{\frac{3(1 - \nu^2)}{r^2 t^2}} \quad 4.4$$

For the special case of a long cylindrical shell pinched by a live load P uniformly distributed along a circular section (Fig. 4.1), the solution of Eq. 4.2 takes the form [27]

$$W = \frac{-P}{8\lambda^3} e^{-\lambda x} (\cos \lambda x + \sin \lambda x) \quad 4.5$$

The stress resultants may be expressed in terms of derivatives of the displacement W in the form

$$M_x = K \frac{d^2 W}{dx^2} \quad 4.6.1$$

$$Q_x = K \frac{d^3 W}{dx^3} \quad 4.6.2$$

$$M_\theta = \nu M_x \quad 4.6.3$$

$$N_\theta = \frac{Et}{r} W \quad 4.6.4$$

Numerical values of these expressions, at several points along a cylindrical element 20 feet long, 8 feet in diameter and with constant wall thickness equals to 1.24 inches, are shown in Table 4.1 for a live load $P = 1$ kip/ft. Output of the analysis of the same element using SASHELL is included in Appendix D. The results are presented graphically in Fig. 4.3. The results of the two solutions are identical up to the number of significant figures contained in the output.

For the case of a cylindrical shell pinched by two concentrated loads as shown in Fig. 4.2 the concentrated load is approximated as a live load (see Sect. 5.4) that has a value of 1.0 kip/ft at the loaded points and zero at a short distance from the load points (Fig. 4.4.1). The loading function is expanded in Fourier coefficients and the results of the analysis of each harmonic are superimposed.

The results of this loading case are affected by the number of harmonics considered in the analysis, which will be discussed in Sect. 5.4.

If the circumference of the cylinder shown in Fig. 4.4 is divided to 36 intervals and the load is approximated as shown, the equivalent concentrated load is

$$\begin{aligned}\overline{P} &= \frac{2\pi r}{36} P & 4.7 \\ &= 0.698 \text{ kips}\end{aligned}$$

$L = 20'.0$

$r = 4'$

$t = 1.24''$

$E = 30 \times 10^3 \text{ ksi}$

$\nu = 0.3$

$P = 1.0 \text{ K/ft}$

$K = 436 \text{ K.ft}$

$\lambda = 2.0$

X (ft)	λ_x	W (10^{-4} ft)	M_x	Q_x	M_θ	N_θ
0	0	-.3583	.1250	-.5000	+.0375	-3.997
0.25	0.5	-.2949	.0302	-.2661	+.0091	-3.290
0.5	1.0	-.1822	-.0138	-.0994	-.0041	-2.032
0.75	1.5	-.0854	-.0258	-.0079	-.0077	-0.953
1.0	2.0	-.0239	-.0224	+.0282	-.0067	-0.266
1.25	2.5	+.0059	-.0144	+.0329	-.0043	+0.066
1.5	3.0	+.0152	-.0070	+.0246	-.0021	+0.169
1.75	3.5	+.0139	-.0022	+.0142	-.0006	+0.155
2.0	4.0	+.0092	+.0002	+.0060	+.0001	+0.102
2.25	4.5	+.0047	+.0011	+.0012	+.0003	+0.052
2.5	5.0	+.0016	+.0011	-.0009	+.0003	+0.018
2.75	5.5	0	+.0007	-.0015	+.0002	0
3.0	6.0	-.0006	+.0004	-.0012	+.0001	-0.066

TABLE 4.1 Stresses and Radial Displacement in a Pinched
Cylinder as per Eqs. 4.6

The analytical solution for a concentrated load, based on inextensional deformation theory [27, pg. 506], is of the form

$$W_{\phi} = \frac{Pr^3}{\pi KL} \sum_{n=2,4,6,\dots} \frac{1}{(n^2-1)^2} \cos n\theta \quad 4.8$$

where L is one-half the length of the cylinder. Eq. 4.8 yields

$$(W)_{\theta=0} = 0.382 \times 10^{-3} \text{ ft}$$

$$(W)_{\theta=\pi/2} = -0.351 \times 10^{-3} \text{ ft}$$

A comparison of these values with SASHELL values shown in Fig. 4.4.1 indicates good agreement for $\theta = \pi/2$ but considerable discrepancy for $\theta = 0$. The SASHELL solution predicts a displacement 17% larger than the inextensional solution at $\theta = 0$.

Now referring to Fig. 4.4.2, the cylindrical shell example as chosen by Cantin and Clough [7], is shown. For the same number of intervals (36), the equivalent concentrated load is

$$\bar{P} = 0.0721 \text{ kips}$$

The deflections for this case, from Eq. 4.8, are

$$(W)_{\theta=0} = 0.614 \times 10^{-2} \text{ ft}$$

$$(W)_{\theta=\pi/2} = -0.565 \times 10^{-2} \text{ ft}$$

The ratios of the SASHELL displacements are 1.10 and 1.14 to those of the inextensional theory for $\theta = \pi/2$ and $\theta = 0$, respectively.

4.4 Hyperboloid Natural Draft Cooling Tower

Large capacity power plants generate a substantial amount of operational heat that requires dissipation. One of the major structures in these power plants is the natural draft cooling tower in the form of the shell of revolution. The tower utilizes its height to create the necessary air flow in order to cool a large volume of water in a minimum land area. Hyperboloid cooling towers are the most preferable shape [14] when compared to conical or cylindrical shapes from the aerodynamic point of view.

4.4.1 Geometry of the Tower

The middle surface of a hyperboloid shell is shown in Fig. 1.7. The surface of a hyperboloid of revolution may be classified as a non-developable surface, which means that the surface will not tend to flatten out under load. This surface is generated by the rotation of a hyperbola about a vertical axis. The geometrical equation can be written as

$$\frac{r^2}{a^2} - \frac{x^2}{b^2} = 1 \quad 4.9$$

in which r is the horizontal radius, x is the vertical coordinate

measured from the origin at the throat of the shell, a is the throat radius at $x = 0$, and b is a constant in which the ratio b/a equals the slope of the asymptotes to the hyperbola.

The principal radii of curvature are given by

$$r_1 = - \frac{a^2 b^2}{(a^2 \sin^2 \phi - b^2 \cos^2 \phi)^{3/2}} \quad 4.10.1$$

$$r_2 = \frac{a^2}{(a^2 \sin^2 \phi - b^2 \cos^2 \phi)^{1/2}} \quad 4.10.2$$

where $\tan \phi = \frac{dx}{dr}$

$$= \frac{b}{a} \sqrt{\frac{r^2}{r^2 - a^2}} \quad 4.10.3$$

The expression for the derivative of r_1 with respect to the coordinate s (see Eq. 2.5.1) can be obtained by differentiating Eq. 4.10.1 to yield

$$r_{\cdot 1} = \frac{-3}{a^2 b^2} (b^4 r \cos \phi + a^4 x \sin \phi) \left(\frac{r^2}{a^4} + \frac{x^2}{b^4} \right)^{1/2} \quad 4.10.4$$

The middle surface of the hyperboloid tower considered in the following analysis is shown in Fig. 4.5. The shell is 355 ft high and is supported by columns evenly spaced on a circular base of 290 ft diameter. The throat of the tower is 165 ft in diameter and is located 60 ft below the top of the shell. The thickness varies from 30 inches at the bottom level

of the shell to 6 inches at 25 feet elevation from the bottom. In the top 10 feet of the shell, the thickness also varies from 6 inches to 24 inches. Other than the top and the bottom regions, the shell thickness remains constant at 6 inches. The increased thickness at the top provides a stiffening effect that reduces radial deformation under wind load [24]. The bottom ring at the base acts as an equivalent deep beam bridging between columns.

The constant b of Eqs. 4.10 can be calculated by substituting the values for $r = 145$ at $x = 295$ and $a = 82.5$ into Eq. 4.9, which yields $b = 204.1$ ft. For the purpose of comparing the results with References 14 and 24, the following concrete properties are used

$$\text{Young's Modulus} \quad E = 4 \times 10^6 \text{ psi}$$

$$\text{Poisson's Ratio} \quad \nu = 0.15$$

$$\text{Specific Weight} \quad \gamma = 150 \text{ lb/ft}^3$$

4.4.2 Load Description

The tower is analyzed for gravity load and wind pressure load.

The gravity load, which is symmetric with respect to the coordinate θ , is determined from the following equations

$$q = t \times \gamma \tag{4.11.1}$$

$$P_z = -q \cos \phi \tag{4.11.2}$$

$$P_s = q \sin \phi \quad 4.11.3$$

where q is the intensity of weight per square area of the surface.

The wind load, which is the governing factor in the design of the cooling towers [14], is based on the ACI-ASCE Committee 334 recommendations [1]. The following equivalent static pressure distribution is used

$$q(H, \theta) = G C_\theta K_H q_{30} \quad 4.12$$

where the factors in this equation are described as follows:

- a) $q(H, \theta)$ is the equivalent static normal pressure on the surface of the tower at a location defined by coordinates H, θ . H is the vertical distance measured from the ground level, θ is the circumferential angle measured from the windward meridian.
- b) G is the dynamic gust factor which accounts for the overstress due to the tower response to various time variations in the wind pressure.
- c) C_θ is the coefficient of wind pressure distribution in the circumferential direction.
- d) K_H is the exposure factor which establishes the vertical profile of wind pressure, which in turn, depends on wind speed and roughness of terrain.
i.e., K_H can be evaluated from the equation

$$K_H = 2.64 \left(\frac{H}{H_g} \right)^{2\alpha} \quad 4.13$$

where H is the height measured from the ground level;
 H_g is the gradient height above which the wind velocity
 is assumed constant and ranges from 900 ft for open
 country to 1500 ft for center of large cities; α is a
 constant, depending on the terrain roughness, and
 ranges from $1/7$ for open country to $1/3$ for center of
 large cities.

- e) q_{30} is the basic wind pressure (psf) and is equal to
 the dynamic pressure of the free stream of wind at
 30 ft above the ground level at a given site. It may
 be computed from

$$q_{30} = 0.00256 V_{30}^2 \quad 4.14$$

where V_{30} = wind velocity (m.p.h.) at 30 ft above the
 ground level.

The ACI-ASCE Committee 334 has suggested the normalized wind
 pressure distribution in the circumferential direction as shown
 in Fig. 4.6.1. As in Reference 24, assuming $H_g = 900$ ft, $\alpha = 1/7$
 and $V_{30} = 100$ m.p.h., the variation of the wind pressure with the
 height can be taken as shown in Fig. 4.6.2.

4.4.3 Analysis Conclusions

The results of the analysis of the hyperboloid tower,
 loaded as described above, are represented graphically for

dead load in Figs. 4.7.1 to 4.7.3, and for wind load in Figs. 4.8.1 to 4.8.10. Since the actual condition at the bottom of the shell is only partially fixed [24], the results of the analysis for two boundary conditions, fixed and hinged at the bottom, are shown in these figures. Excellent agreement is observed between the displacements and stress resultants shown and the results of References 14 and 24.

The approximation of the geometry with a series of cones [24] does not affect the results for this particular geometry of the tower. However, the meridian curvature R_1 varies only from -0.002 ft^{-1} at the throat to -0.0003 ft^{-1} at the bottom of the hyperboloid shell, and is equal to zero for a conical element. For shells with larger R_1 curvature the conical segment approximation may not be as accurate.

4.5 Comments on Results

The examples of this chapter have been selected to test the ability of SASHELL to analyze different types of shells. The pinched cylinder solutions are common test problems because of the difficulty of achieving solutions for concentrated loads. The hyperboloid cooling tower is an illustration of a shell with negative Gaussian curvature under complex loading conditions. It may be concluded that SASHELL is capable of yielding good results on a wide variety of shell problems.

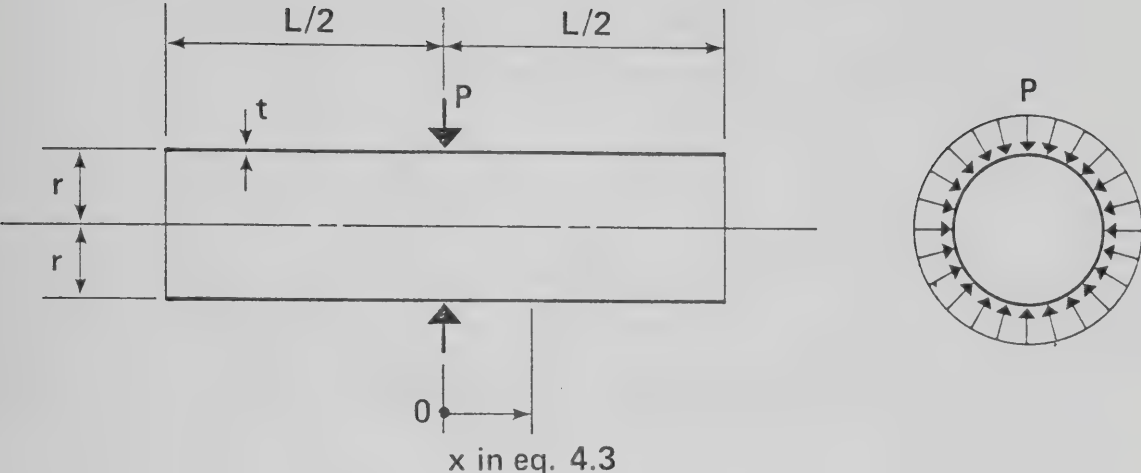


Fig. 4.1 "Pinched Cylinder" Circumferential Line Load

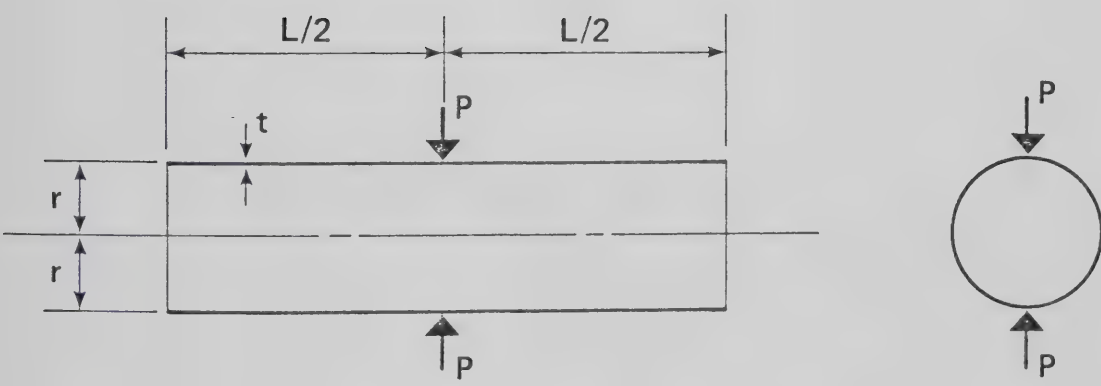


Fig. 4.2 "Pinched Cylinder" Two Concentrated Loads

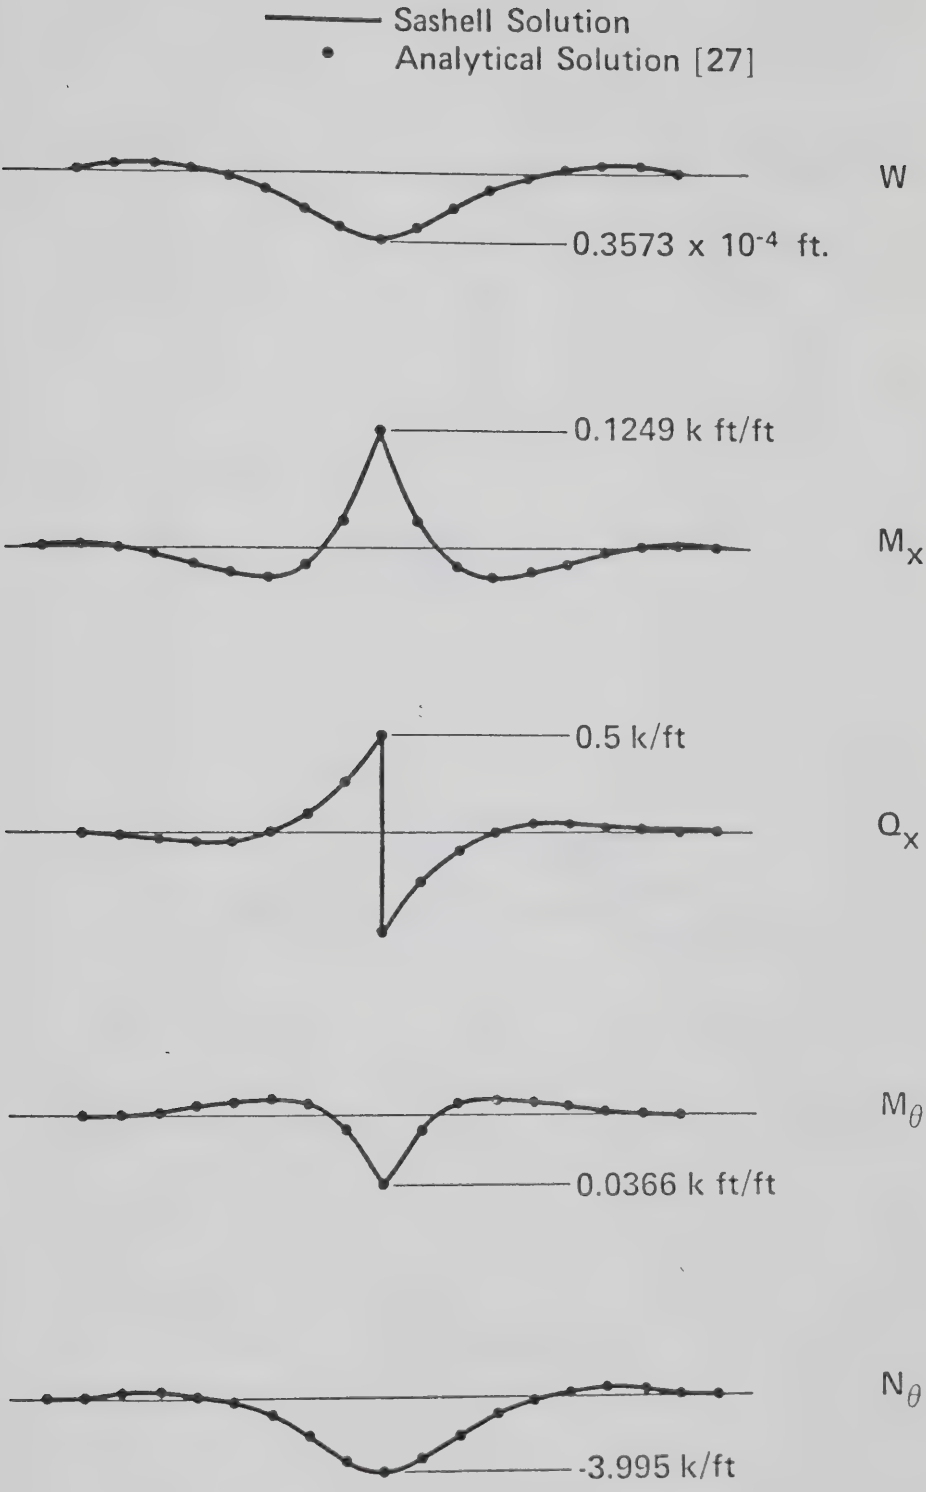


Fig. 4.3

"Pinched Cylinder" Circumferential Line Load Stress Resultants and Radial Displacement

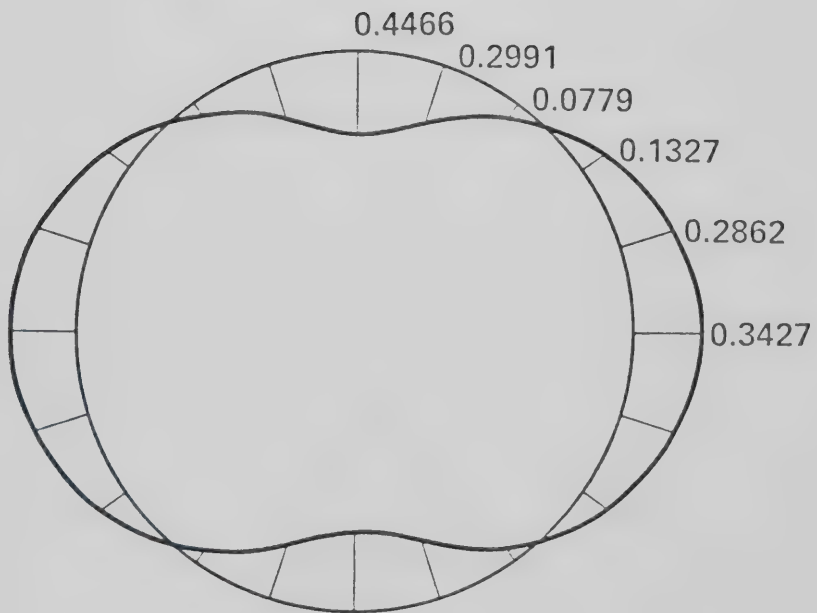
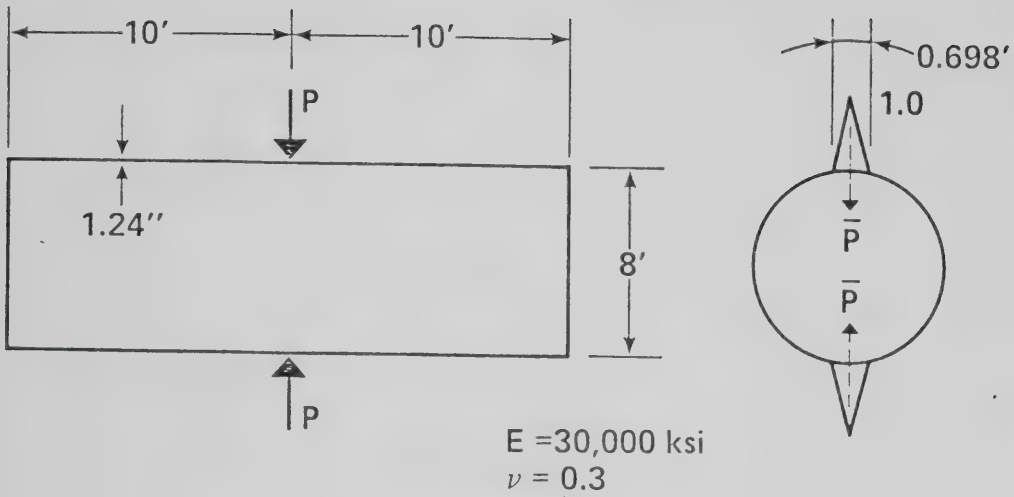


Fig. 4.4.1 "Pinched Cylinder" Two Concentrated Loads Radial Displacement ($r = 4.0 \text{ ft.}$)

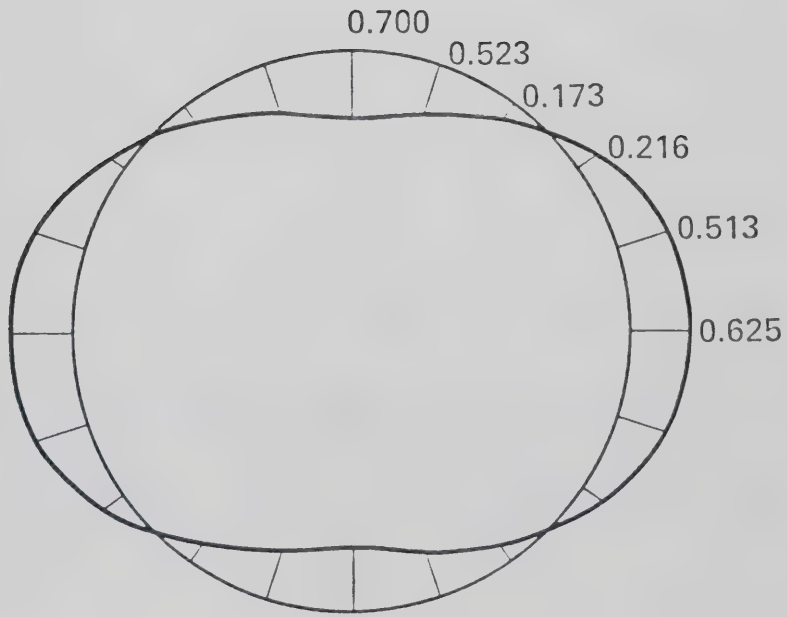
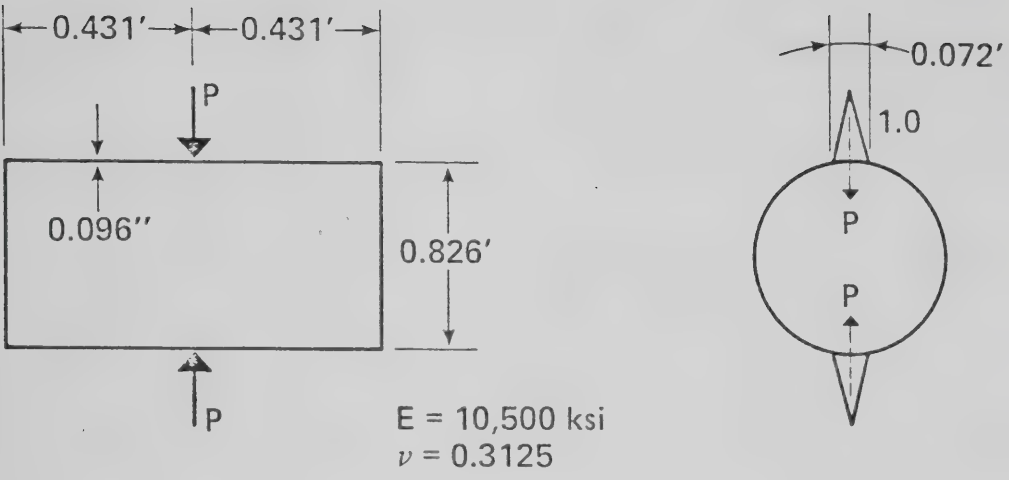


Fig. 4.4.2

"Pinched Cylinder" Two Concentrated Loads Radial Displacement ($r = 0.413 \text{ ft.}$)

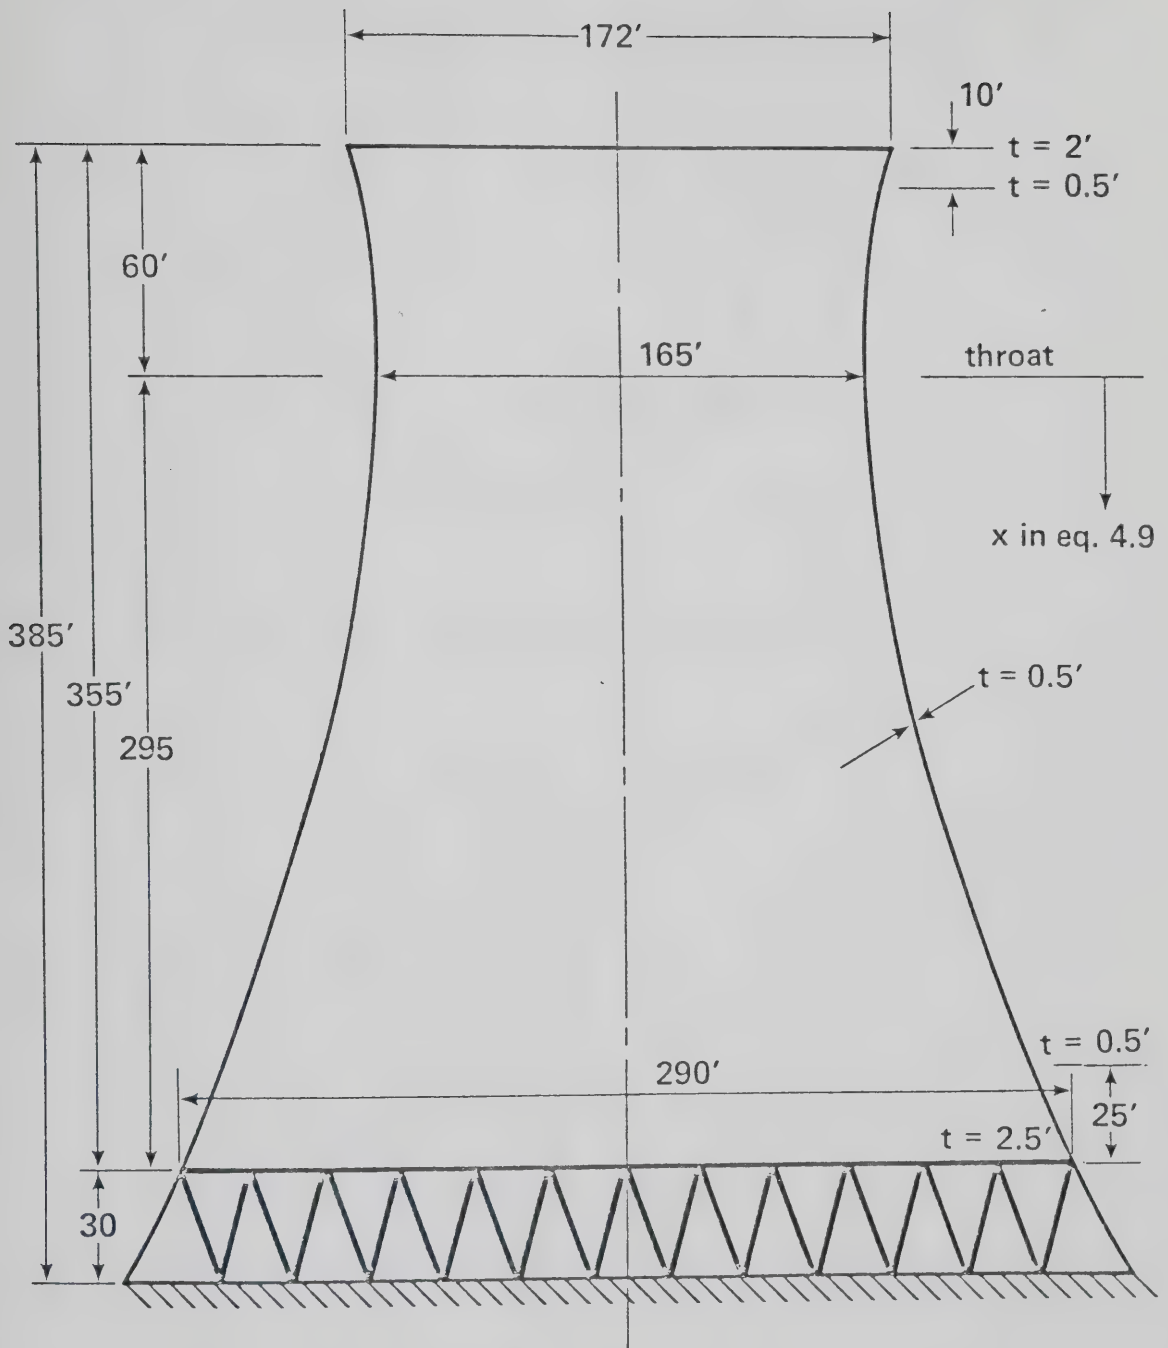


Fig. 4.5 Typical Hyperboloid Natural Draft Cooling Tower

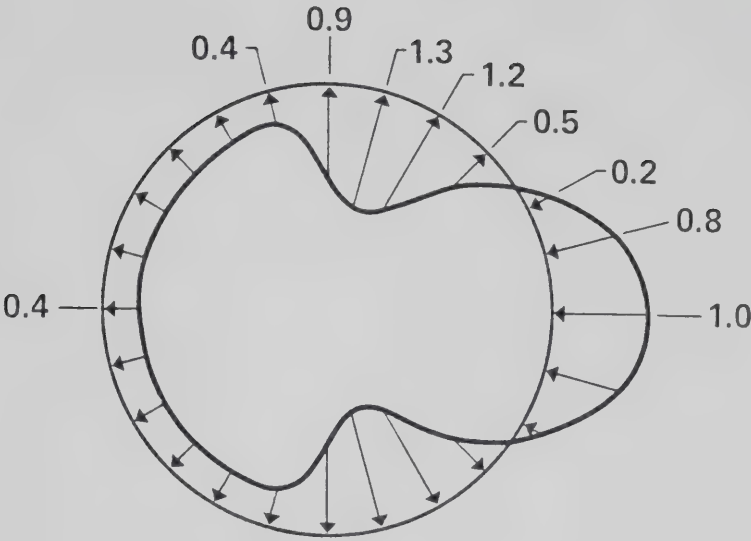


Fig. 4.6.1 Wind Pressure Coefficients C_{θ}

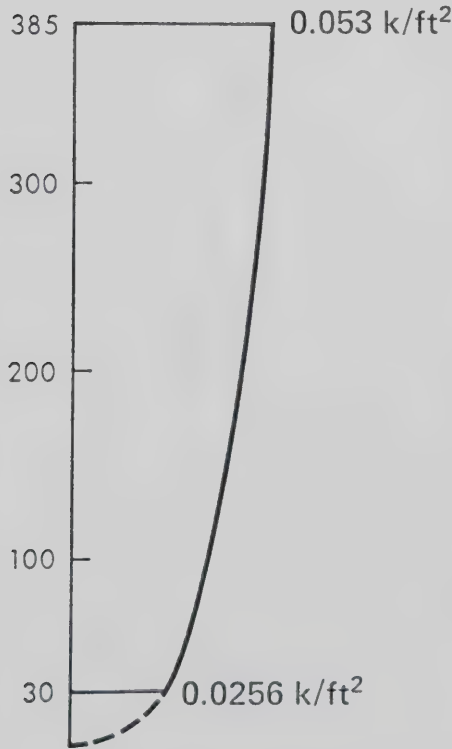


Fig. 4.6.2 Wind Pressure Profile ($\theta = 0$)

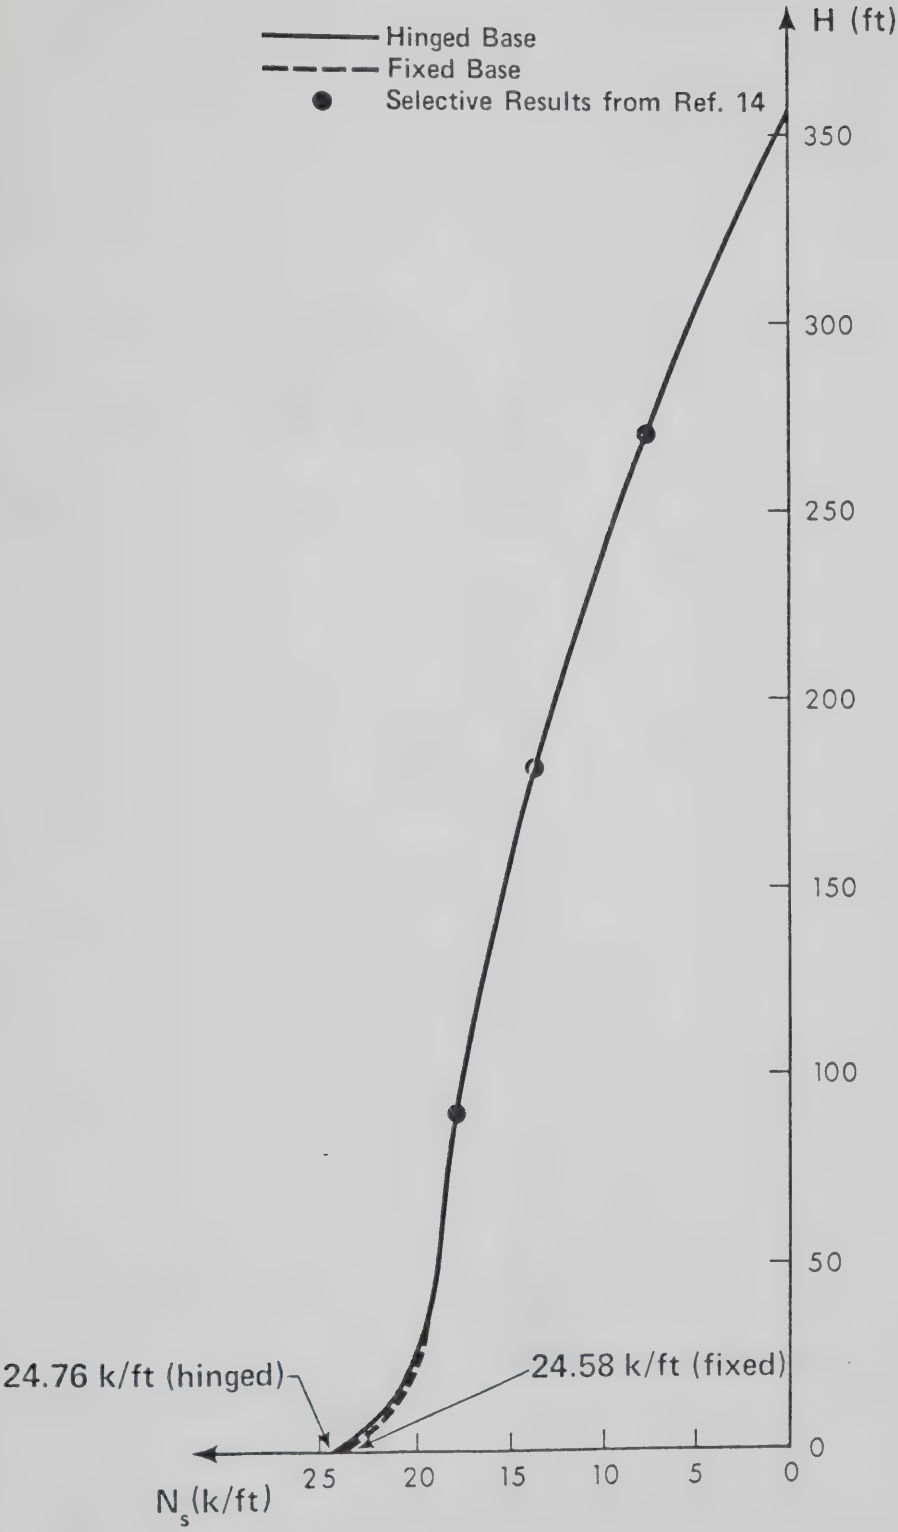


Fig. 4.7.1 Hyperboloid Tower Dead Load Membrane Force N_s

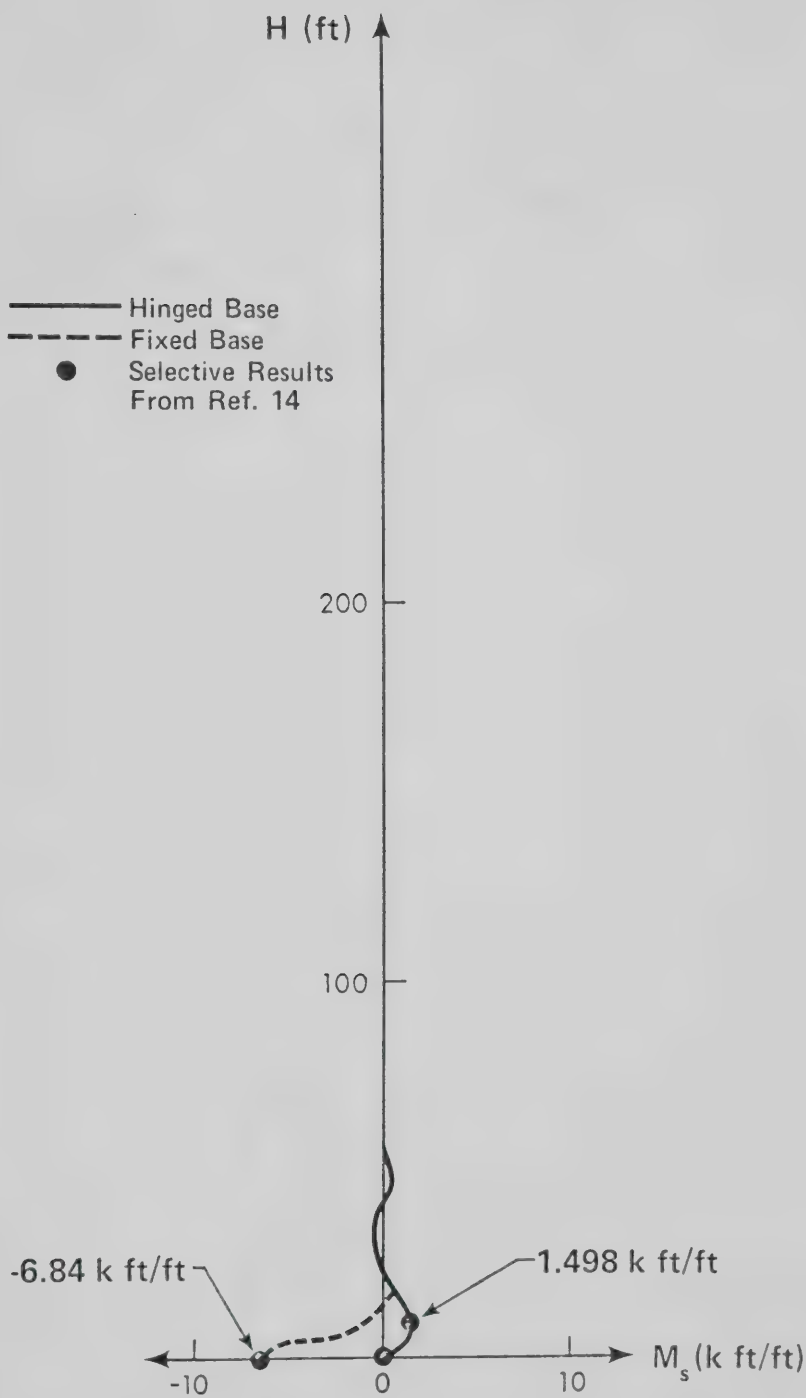


Fig. 4.7.2 Hyperboloid Tower Dead Load Meridional Moment M_s

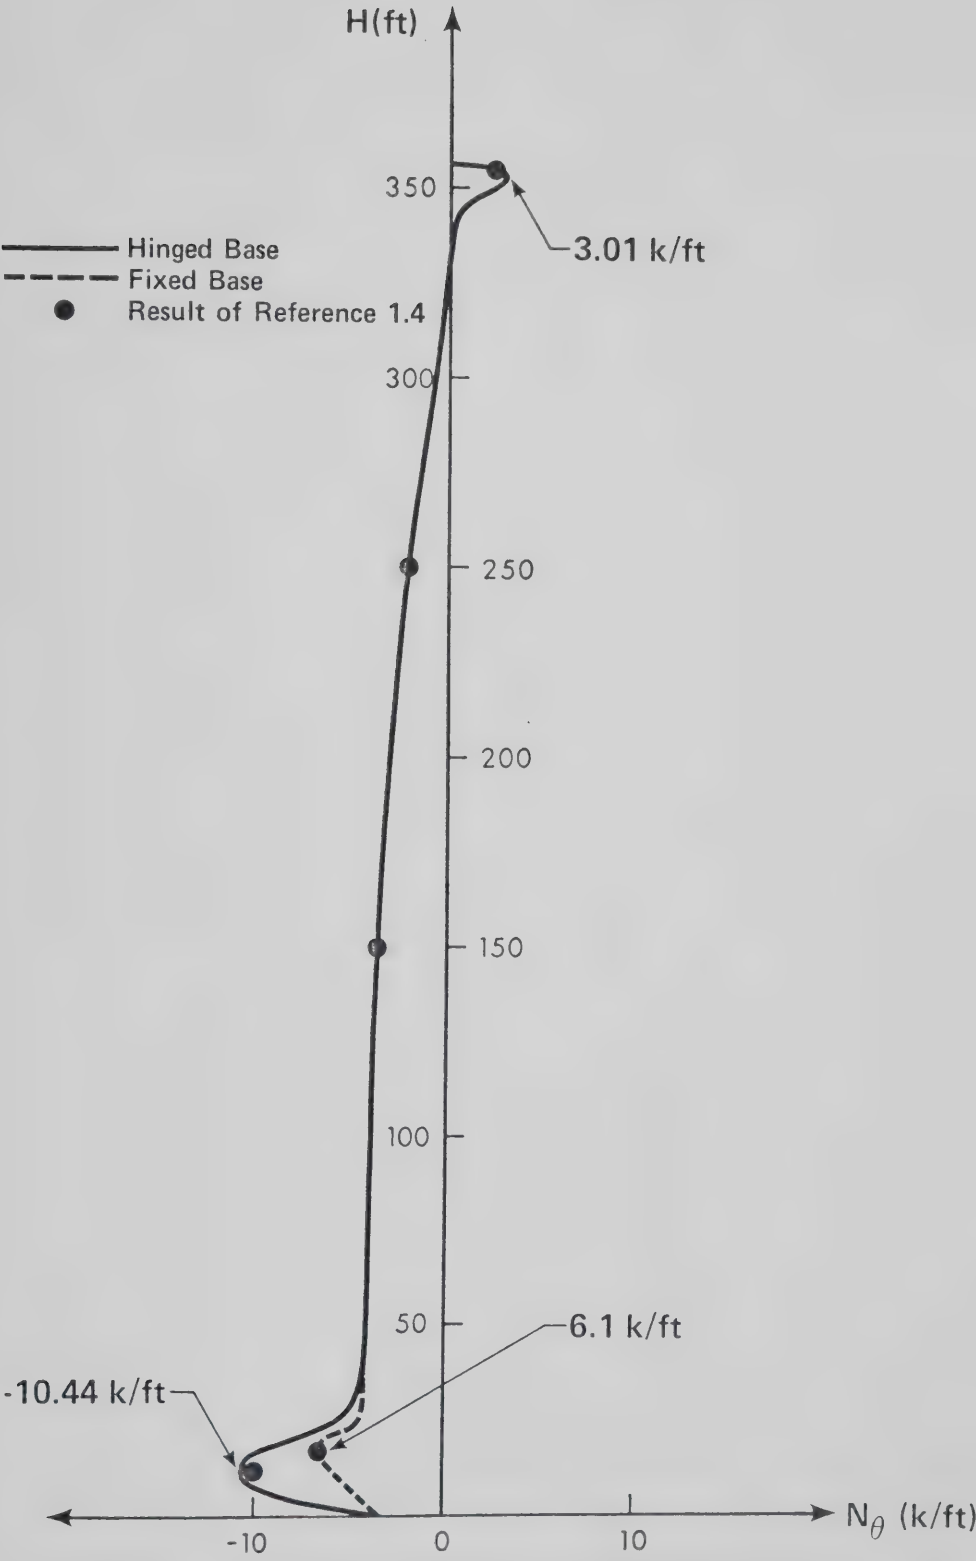


Fig. 4.7.3 Hyperboloid Tower Dead Load Membrane Force N_θ

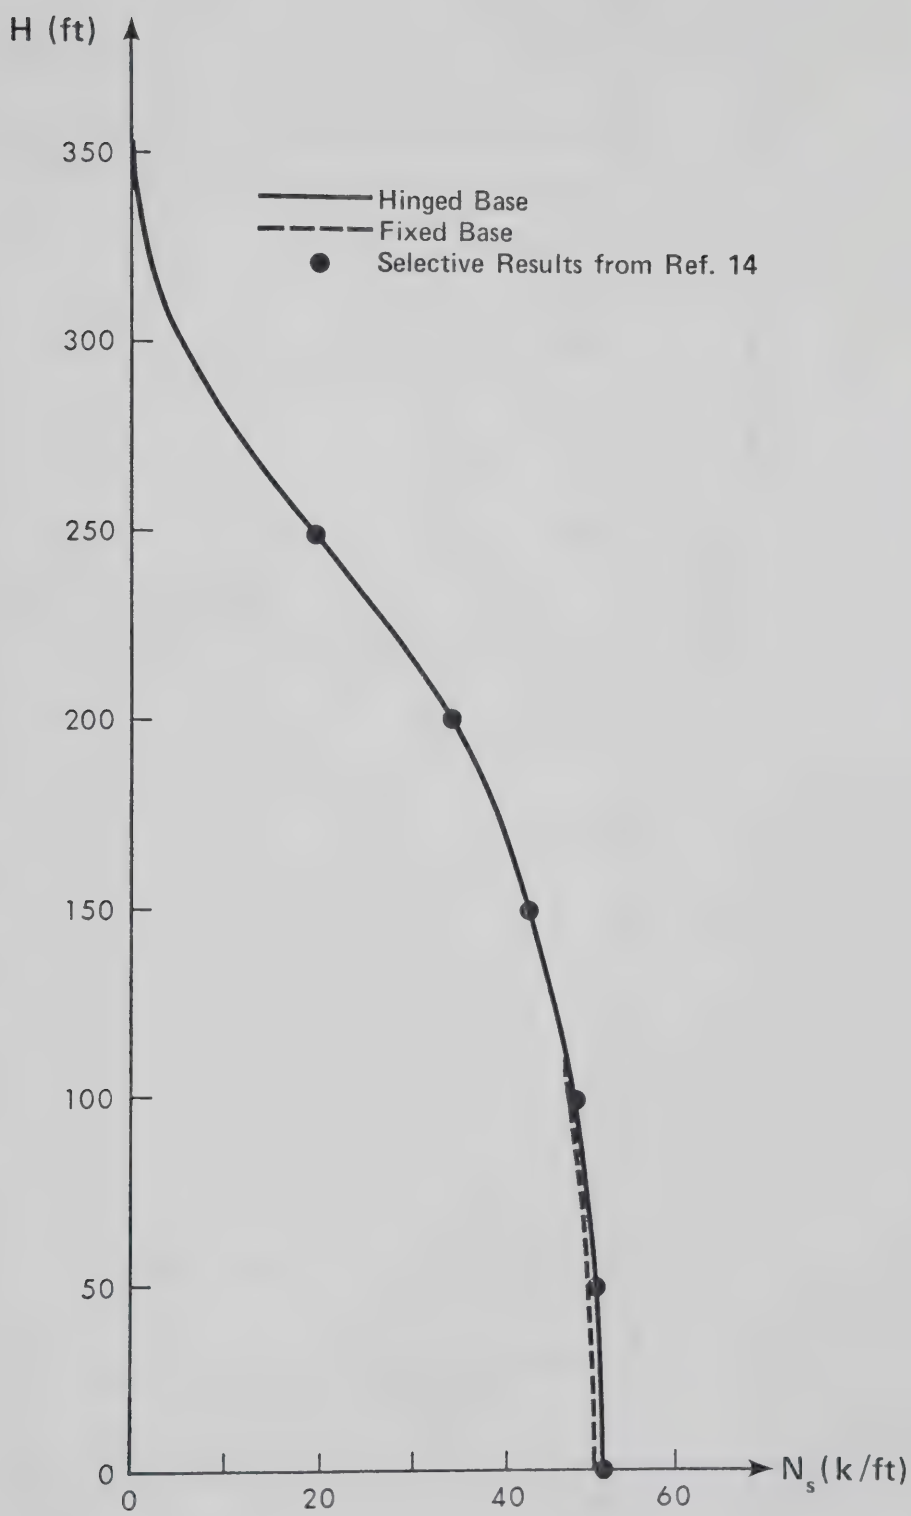


Fig. 4.8.1 Hyperboloid Tower Wind Load Membrane Force N_s ($\theta = 0$)

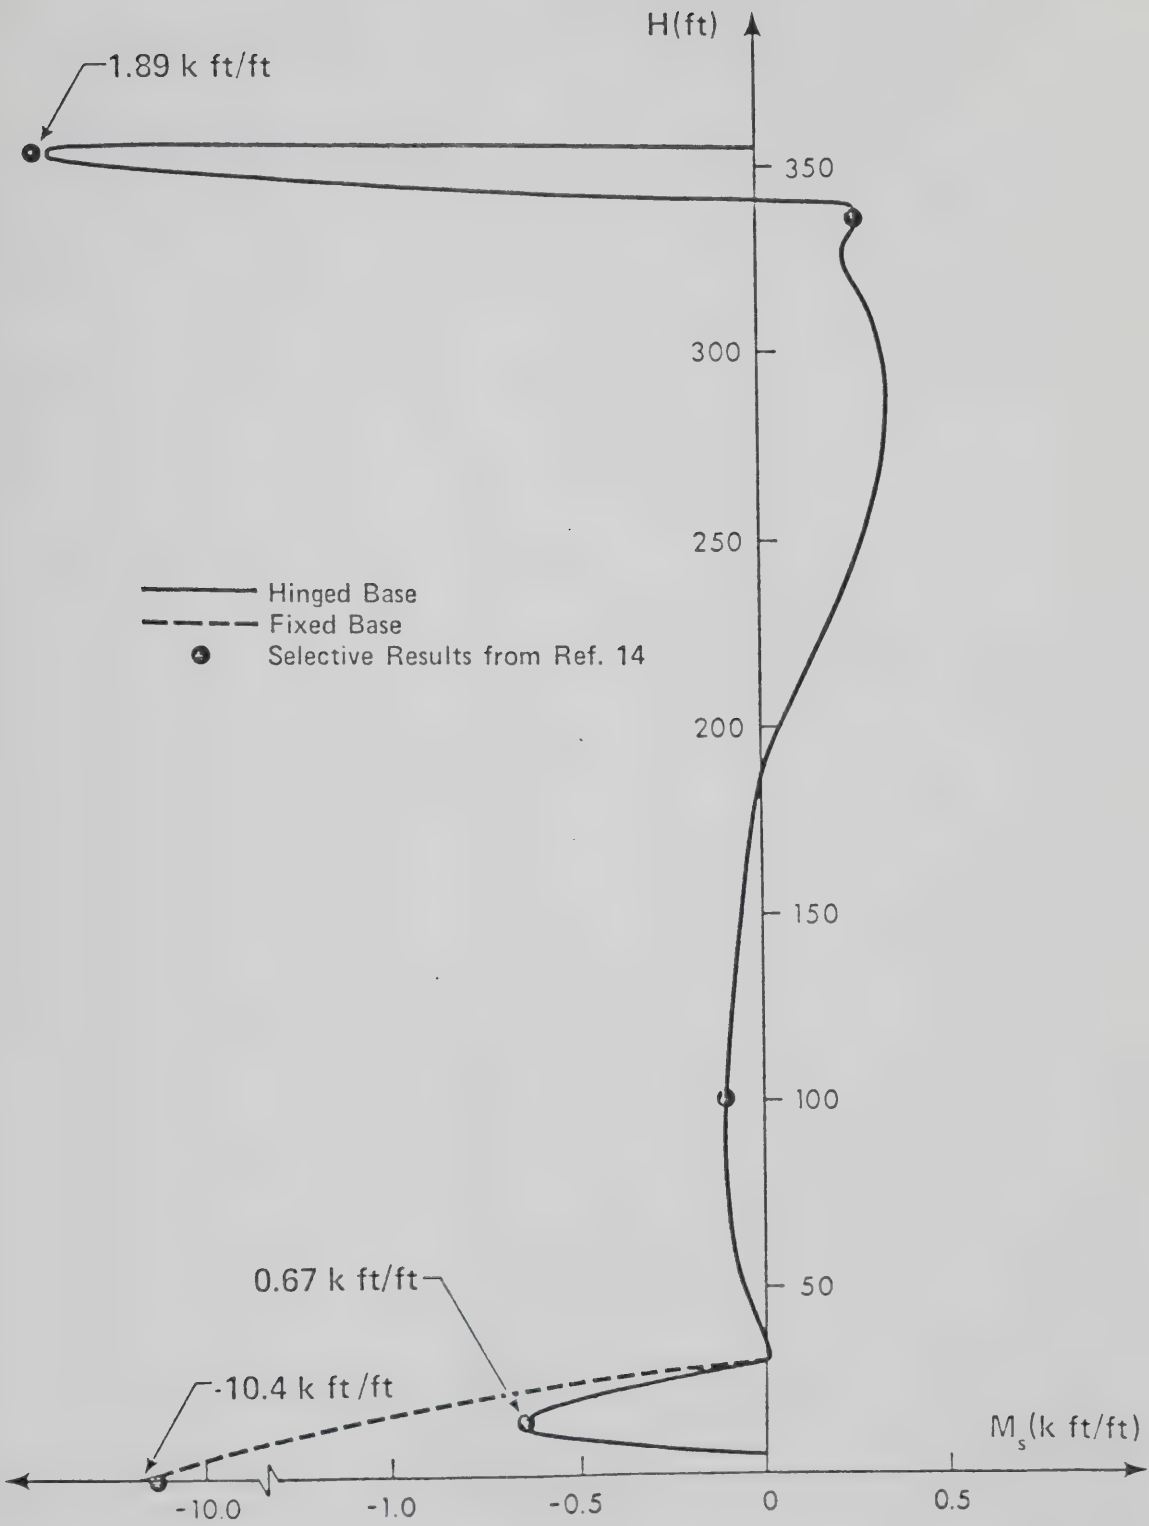


Fig. 4.8.2 Hyperboloid Tower Wind Load Meridional Moment M_s ($\theta = 0$)

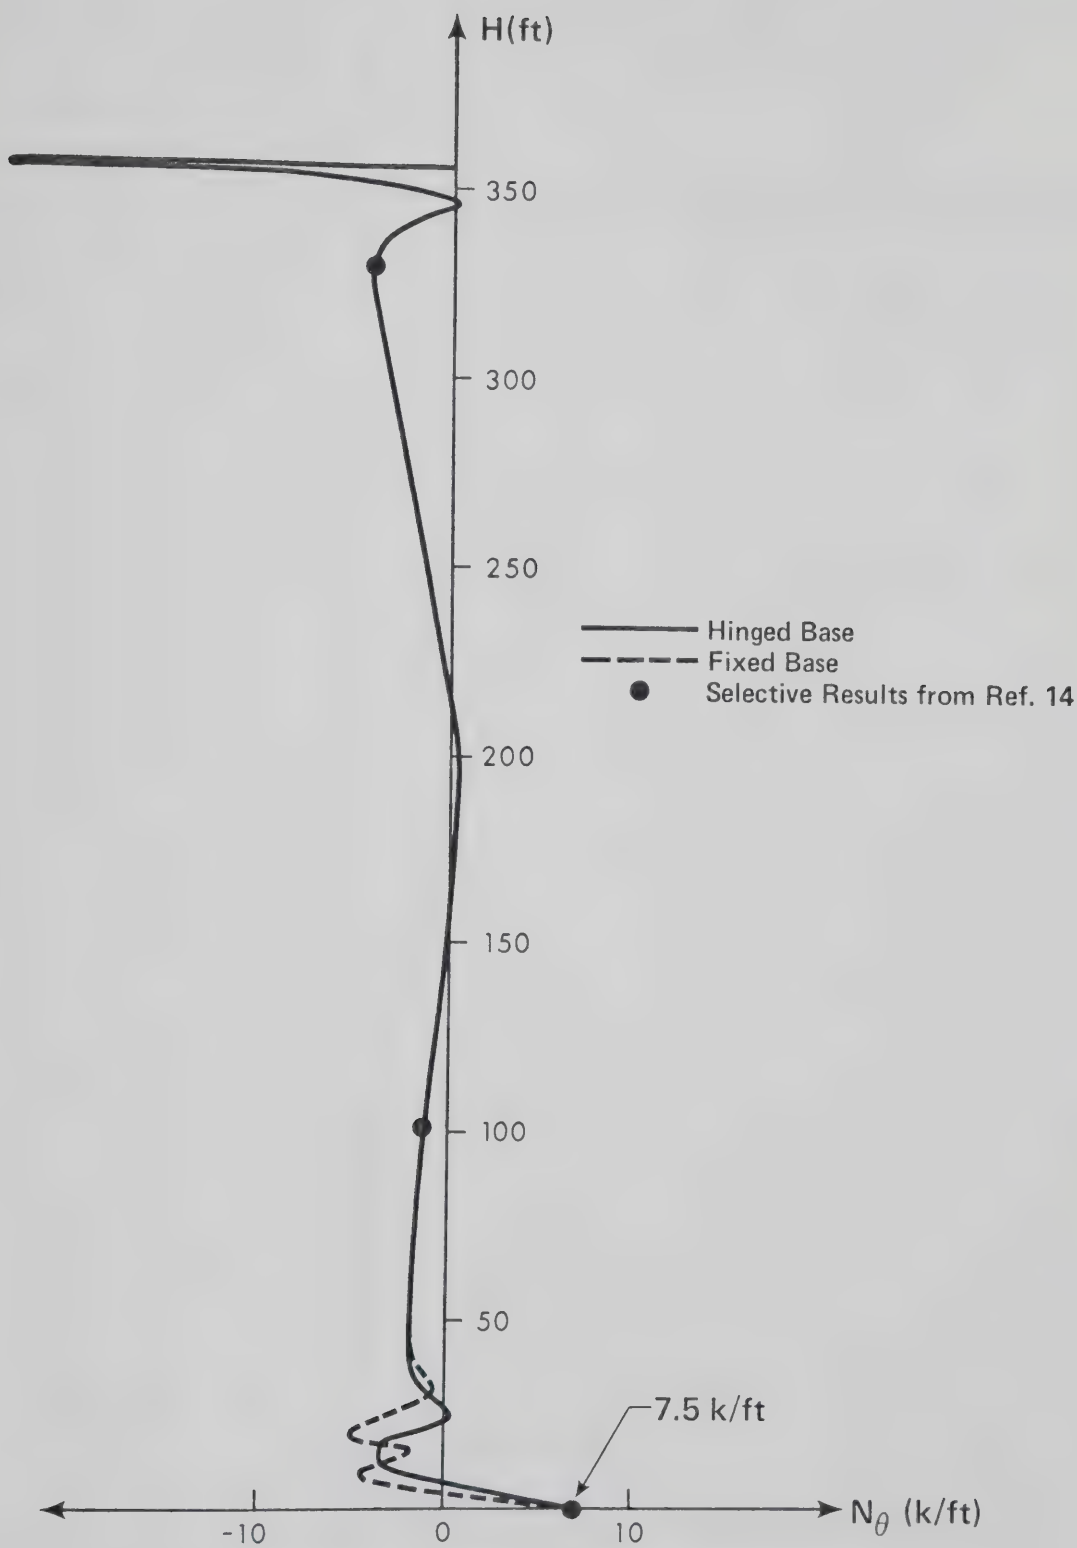


Fig. 4.8.3 Hyperboloid Tower Wind Load Membrane Force N_θ ($\theta = 0$)

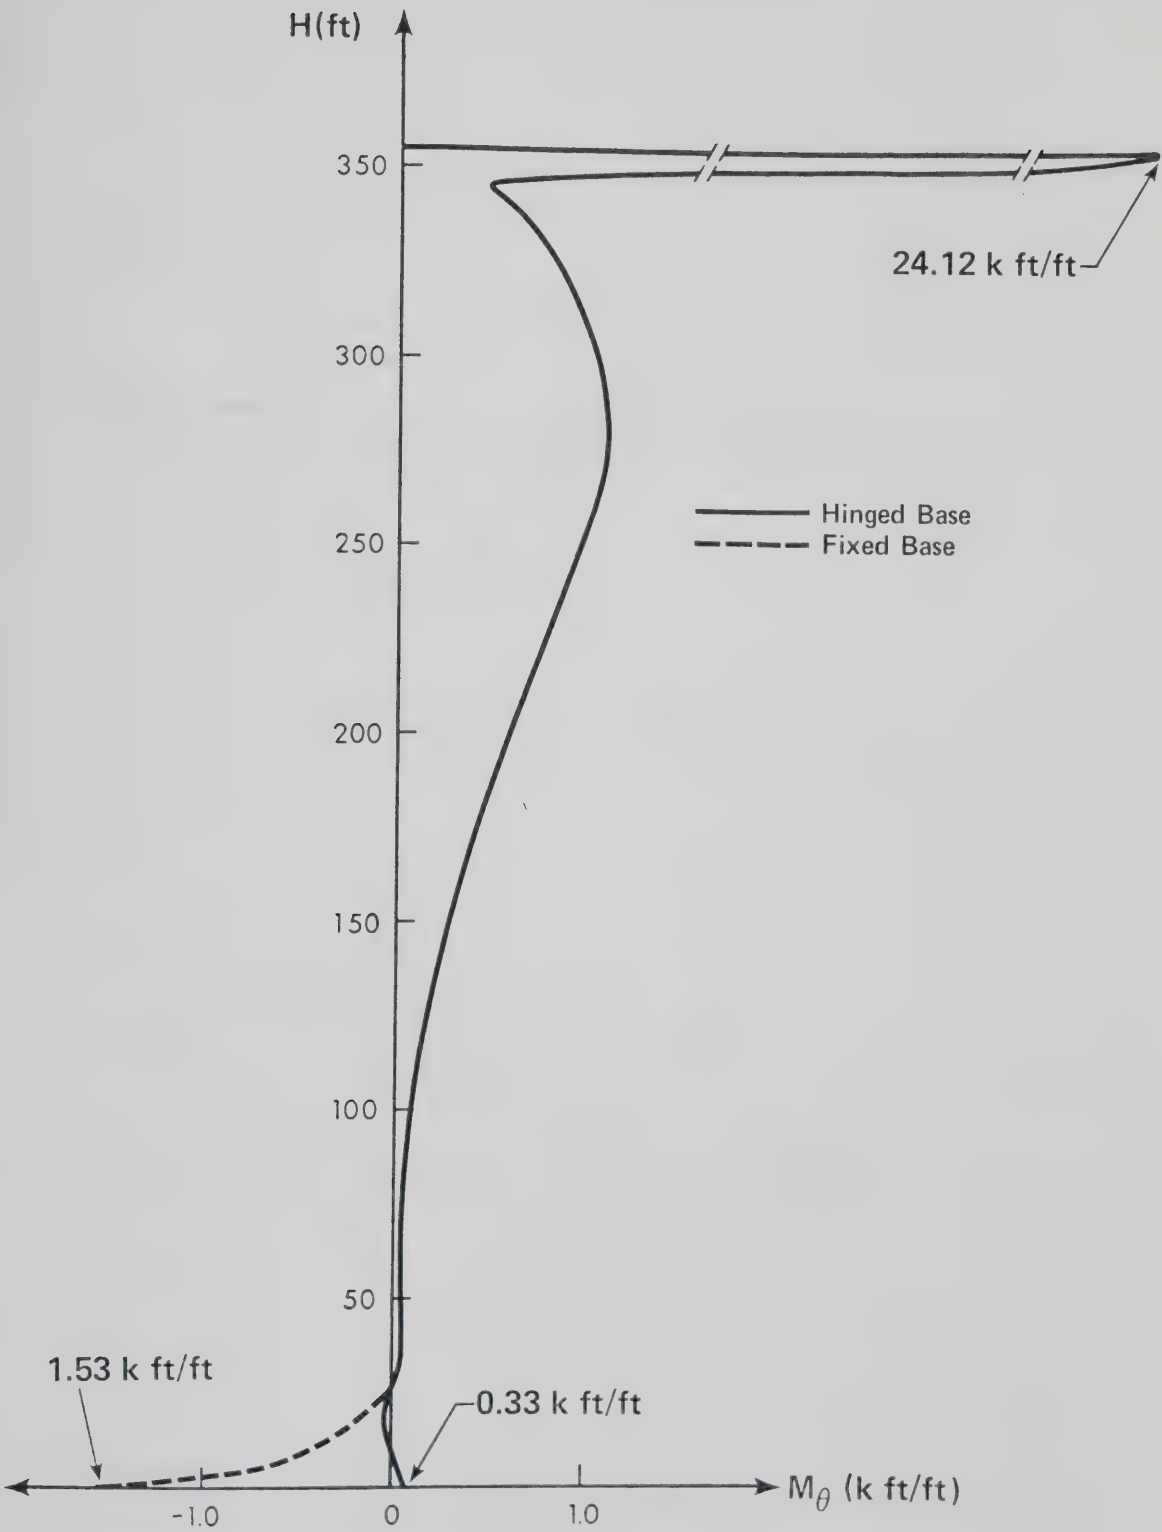


Fig. 4.8.4 Hyperboloid Tower Wind Load Circumferential Moment M_θ ($\theta = 0$)

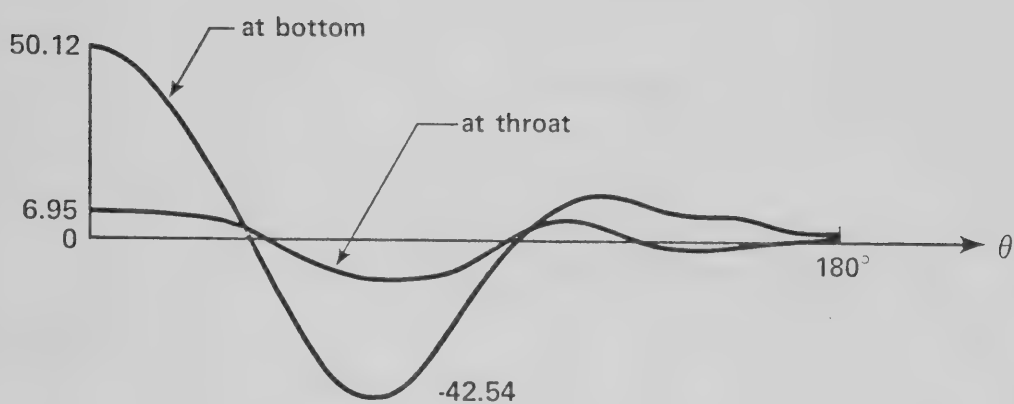


Fig. 4.8.5 Hyperboloid Tower Wind Load Circumferential Variation of N_s

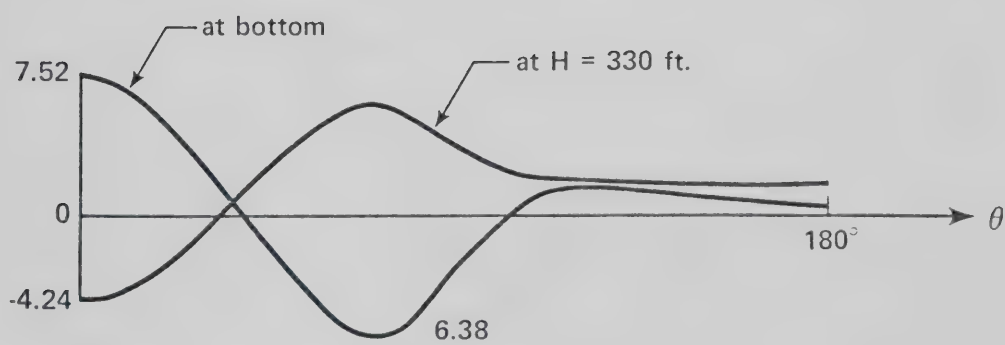


Fig. 4.8.6 Hyperboloid Tower Wind Load Circumferential Variation of N_θ

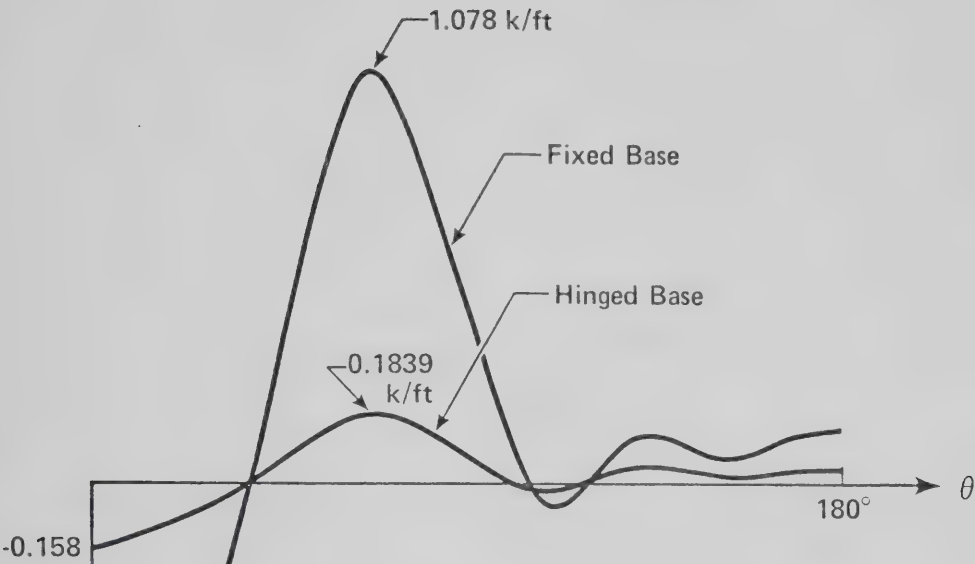


Fig. 4.8.7
Hyperboloid Tower Wind Load Circumferential Variation of S_s

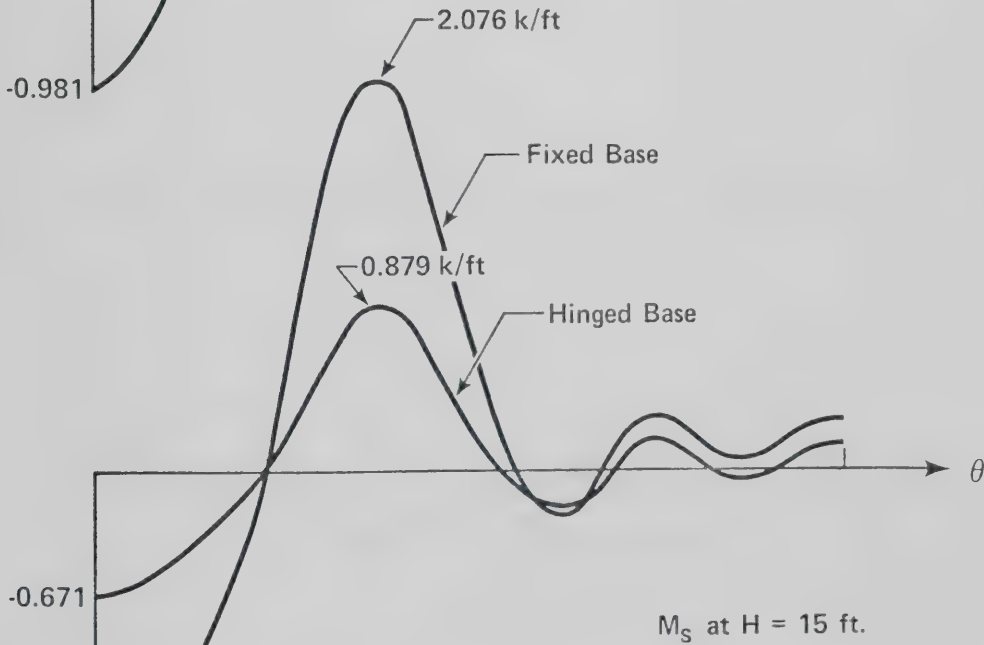


Fig. 4.8.8
Hyperboloid Tower Wind Load Circumferential Variation of M_s

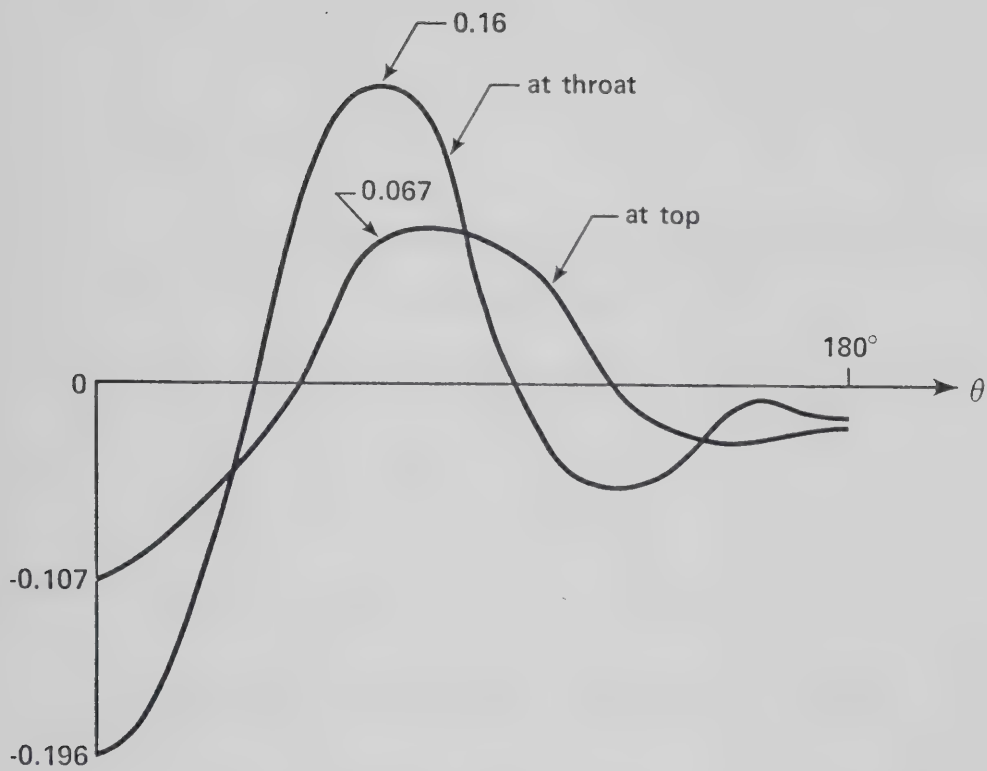


Fig. 4.8.9 Hyperboloid Tower Wind Load Circumferential Variation of W

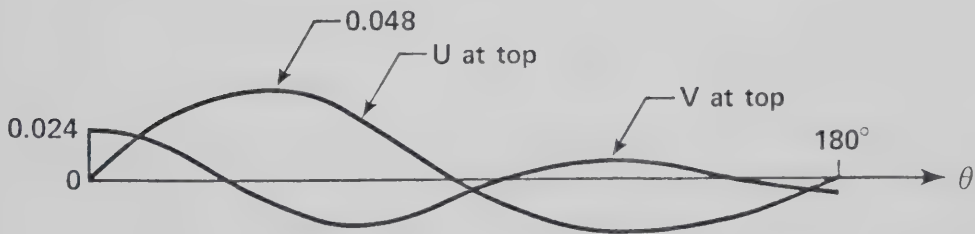


Fig. 4.8.10 Hyperboloid Tower Wind Load Circumferential Variation of V and U

CHAPTER 5

LIMITATIONS

5.1 Introduction

Three factors affect the solution technique presented in this thesis. These are summarized as follows.

- 1) Singularity of the governing equations at the apex.
- 2) Stability of the numerical integration process.
- 3) Convergence of Fourier expansions.

Each factor is discussed separately in the following sections.

5.2 Singularity of the Governing Equations at the Apex

If the shell has a pole (i.e., $r = 0$), coefficients in the governing sets of equations (Eqs. 2.14, 2.18 and 2.20) become singular. This is consistent with classical shell theory. A simple way to handle this situation is to choose the boundary, $s = 0$, not at the pole, but a very short distance away and then impose the boundary conditions at $s = 0$ as follows [6].

- 1) For harmonic number $n = 0$

$$\beta = V = U = S_s = 0$$

- 2) For harmonic number $n = 1$

$$W = M_s = N_s = T_s = 0$$

- 3) For harmonic number $n > 1$

$$W = V = U = M_s = 0$$

5.3 Stability of the Numerical Integration Process

Runge-Kutta fourth order integration method is used, in SASHELL, to integrate the basic set of equations (Eq. 2.24). This method is very well known and has the advantage of being self starting i.e., it needs only the information available at the preceding point. The method can be interpreted as follows:

- 1) The derivative is evaluated at the starting point of the interval.
- 2) The above derivative is used to obtain an approximate ordinate to determine an approximate derivative for the midpoint of the interval.
- 3) The above derivative is used to obtain a second approximation of the derivative at the midpoint of the interval.
- 4) The above derivative is used to obtain an approximate ordinate to determine an approximate derivative for the end point of the interval.
- 5) A weighted average of the above four derivatives is taken to determine a total increment in the function for the whole interval.

Analytically, this can be defined as follows:

$$\begin{aligned}
 Y_{i+1} = Y_i + \frac{\Delta h}{6} \{ & f(Y_i, h_i) + 2f\left(Y_{i+1/2}^*, h_{i+1/2}\right) \\
 & + 2f\left(Y_{i+1/2}^{**}, h_{i+1/2}\right) + f\left(Y_{i+1}^*, h_{i+1}\right) \} \quad 5.1
 \end{aligned}$$

where

$$Y_{i+1/2}^* = Y_i + \frac{\Delta h}{2} f(Y_i, h_i) \quad 5.2.1$$

$$Y_{i+1/2}^{**} = Y_i + \frac{\Delta h}{2} f\left(Y_{i+1/2}^*, h_{i+1/2}\right) \quad 5.2.2$$

$$Y_{i+1}^* = Y_i + \Delta h f\left(Y_{i+1/2}^*, h_{i+1/2}\right) \quad 5.2.3$$

$$h_{i+1/2} = h_i + \frac{\Delta h}{2} \quad 5.2.4$$

$$h_{i+1} = h_i + \Delta h \quad 5.2.5$$

in which $f(Y_i, h_i)$ is the value of the function at point i , and Δh is the step size of the interval.

It has been found [25] that the direct integration methods, when applied to a shell problem, suffer a complete loss of accuracy when the generator of the shell exceeds a critical length. The reason for this phenomenon is explained clearly in Reference 18. The general solution of the governing equations, Eq. 3.18, is of the form

$$\{y_{(b)}\} = [H_{(b)}]\{y_{(a)}\} + \{Q_{(b)}\} \quad 5.3$$

Because of the exponentially decaying behavior of the stresses and displacements, it is observed that the coefficients of $[H]$ increase in magnitude in such a way that if the length of the shell element is increased by any factor n , then these coefficients

increase in magnitude, approximately, exponentially with n . For example, consider an element spans the region $a \leq s \leq b$. For some prescribed edge conditions at "a", we expect the corresponding solution at "b" to become smaller and smaller when the element ab is increased in length. (i.e., $y_{(b)}$ small, $H_{(b)}$ large and $y_{(a)}$ has a prescribed value). The longer the element, the larger $[H_{(b)}]$ and the smaller $\{y_{(b)}\}$. The only way to get a small value for $\{y_{(b)}\}$ is for the elements of $[H_{(b)}]$ to subtract out and that is the reason that at some critical length of the element all significant digits of $[H_{(b)}]$, in Eq. 5.3, are lost and so is the accuracy.

The loss of accuracy cannot be avoided by choosing a fine mesh for the integration. By taking more steps "partial instability" arises [8]. This means that the numerical solution deviates from the actual solution as we take more steps.

In Reference 18, the critical meridian length is limited with a length factor $\lambda L \leq 3 - 5$, where

$$\lambda L = L \sqrt[4]{\frac{3(1 - \gamma^2)}{r^2 h^2}} \quad 5.4$$

in which

L is the length of the meridian of the shell, R is the minimum radius of curvature, and h is the thickness of the shell.

In the author's opinion, this is very conservative limitation. The loss of accuracy, using the computer program SASHELL, does not arise until the length factor λL exceeds 25.

To demonstrate this, Table 5.1 shows some results of the analysis of clamped pressurized cylindrical shells, as obtained by the computer program SASHELL, with various lengths and different number of steps of integration. From the symmetry of the problem, the end moments and the absolute values of the end shears should be equal. It is obvious, from Table 5.1, that the solution is not affected much by the number of steps adopted for the integration and it begins to break when

- 1) λL exceeds 20 and the number of steps is less than 20.
- 2) λL approaches 29 for any number of steps.

As a conservative limitation, the upper bound of λL shall not exceed 25 and the number of points of integration (NP), needed for convergence, is limited as follows:

$$NP \leq 21 \quad \text{for} \quad \lambda L < 20$$

$$NP \leq 31 \quad \text{for} \quad 20 < \lambda L < 25$$

This limitation does not affect the efficiency of this technique. It can be observed from Table 5.1, that the computation time (CPU) required for the analysis is proportional to the number of steps adopted.

5.4 Convergence of Fourier Expansions

The load, when varying with the circumferential coordinates is expanded in a Fourier series. The analysis is

carried out to determine the stresses and displacements everywhere within the structure. When the load is represented "exactly", the solution converges.

Theoretically, the number of harmonics required for an arbitrary periodic function to be represented exactly, by means of Fourier series, is infinity, i.e.,

$$f(\theta) = \sum_{n=0}^{\infty} A_n \cos n\theta + \sum_{n=1}^{\infty} b_n \sin n\theta \quad 5.5$$

However, the load can always be described at a sufficient number of points to satisfy our engineering judgement of representing the actual loading conditions. Therefore, our concern is to examine the convergence of a function known only at a set of discrete points. If these points are equally spaced, say $2N$ points, taken over the interval $0 \leq \theta \leq 2\pi$, the spacing is,

$$\theta_i = \frac{2\pi i}{2N} \quad \text{for } i = 0, 1, 2, \dots, 2N-1 \quad 5.6$$

If now an approximation is assumed in the form

$$f(\theta) \approx \sum_{n=0}^M A_n \cos n\theta + \sum_{n=1}^M B_n \sin n\theta \quad 5.7$$

where the coefficients are to be determined in such a way that the integrated squared error over the interval of length 2π is least, then the requirement is

$$\int_0^{2\pi} \left[f(\theta) - \sum_{n=0}^M A_n \cos n\theta - \sum_{n=1}^M B_n \sin n\theta \right]^2 = \min \quad 5.8$$

Since the function $f(\theta)$ is described only at the points defined by θ_i (Eq. 5.6), we have $2N$ independent data points which are sufficient to determine the coefficients of $2N$ terms of an approximation in the form of Eq. 5.7. When $M \leq N$, Eq. 5.8 can be rewritten as follows

$$\sum_{n=0}^{2N-1} \left[f(\theta_i) - \sum_{n=0}^M A_n \cos n\theta_i - \sum_{n=1}^M B_n \sin n\theta_i \right]^2 = \min \quad 5.9$$

where $f(\theta_i)$ is the value of the function $f(\theta_i)$ at the point i . The solution is obtained when the partial derivatives of the left hand side of Eq. 5.9 with respect to A_n and B_n are equated to zero [15, pg. 446-457]. The coefficients are in the form

$$A_0 = \frac{1}{2N} \sum_{n=0}^{2N-1} f(\theta_i) \quad 5.10.1$$

$$A_n = \frac{1}{N} \sum_{n=0}^{2N-1} f(\theta_i) \cos n\theta_i \quad (n \neq 0, N) \quad 5.10.2$$

$$B_n = \frac{1}{N} \sum_{n=0}^{2N-1} f(\theta_i) \sin n\theta_i \quad 5.10.3$$

The calculation of each coefficient is independent of the calculation of the others and is independent of M as long as $M \leq N$. When $M = N$, the least-squares criterion (Eq. 5.9) becomes equivalent to the requirement that the "best" approximation of the function (Eq. 5.7) is obtained [15].

The loading cases of the examples discussed in Chapter 4 are shown in Fig. 5.1 and 5.2. The effect of the number of harmonics on the loading associated with these problems is considered in the following. Fourier coefficients of the wind pressure load on the hyperboloid tower are included in Table 5.2.1. Since the load is symmetric with respect to $\theta = 0$, the sine coefficients vanish. The results of superimposing the 12 coefficients, using Eq. 5.7, are shown in Table 5.2.2. It can be seen that these values approximate the load function to a very close agreement. Now examining the coefficients shown in Table 5.2.1. The 9th and the subsequent coefficients are small in comparison with the other coefficients. The magnitude of the 9th coefficient is in the same order of the 10th with opposite sign and so for the 11th and 12th. Therefore we expect that the approximation will be reasonably accurate if the series is terminated at the 8th harmonic. The results of an 8 harmonic approximation are shown in Table 5.2.2.

Fourier coefficients of the two concentrated loads of the pinched cylinder problem discussed in Sect. 4.3 are shown in Table 5.3.1. It can be seen that the odd cosine coefficients as well as the sine coefficients vanish for this case of symmetry

with respect to $\theta = 0$ and $\theta = \pi/2$. The approximation with 18 harmonics, for the loading function described at 36 points, represent the load more accurately when compared with the 12 harmonic approximation (Fig. 5.2 and Table 5.3.2). Therefore one can approximate this load by superimposing the results of $n = 0, 2, \dots, 16$.

As a general conclusion, one can consider N harmonics in the expansion of a load described at $2N$ points. A termination of the higher harmonics or exemption of a harmonic number in the series can be decided upon by examining the coefficient of each loading function as a special case.

r = 10 ft E = 5000 ksi ν = .15 h = 0.5 ft λ = 0.5852

	L (ft)	Number of Elements	Number of Points	CPU Time (sec)	λL	M _s (0) (K.ft/ft)	M _s (L) (K.ft/ft)	Q _s (0) (K/ft)	Q _s (L) (K/ft)
1	10	1	11	0.34	15.85	1.442	1.438	-1.676	1.675
2	10	1	15	0.44	5.85	1.442	1.442	-1.676	1.676
3	20	1	21	0.59	11.71	1.430	1.430	-1.675	1.675
4	40	1	21	0.59	23.41	1.451	45.05	-1.697	28.65
5	40	1	31	0.83	23.41	1.427	1.427	-1.672	1.671
6	50	1	21	0.59	29.26	-0.139	-2446.0	0.167	-2173.0
7	50	1	31	0.82	29.26	1.426	1.424	-1.671	1.670
8	50	1	41	1.06	29.26	1.426	1.427	-1.671	1.671
9	50	1	51	1.32	29.26	1.426	1.428	-1.671	1.671
10	50	2	21	1.13	14.63	1.426	1.426	-1.671	1.671
11	60	1	31	0.84	35.11	1.388	121.8	-1.631	-62.74
12	60	1	41	1.08	35.11	1.426	0.876	-1.671	1.795
13	60	1	51	1.31	35.11	1.426	2.367	-1.670	2.271
14	60	1	81	2.10	35.11	1.426	0.511	-1.671	1.235
15	60	2	21	1.12	17.55	1.426	1.426	-1.670	1.670
16	60	2	31	1.60	17.55	1.426	1.426	-1.670	1.670
17	100	1	101	2.50	58.52	- .075	-2.84x10 ⁸	-0.068	5.33x10 ⁹
18	100	2	31	1.61	29.41	1.425	1.422	-1.670	1.668
19	100	3	21	1.68	19.50	1.425	1.425	-1.670	1.670

Table 5.1 Effect of Length and Number of Integration Points on the Accuracy of the Solution

Harmonic Number	Cosine Coefficient
0	0.3833
1	-0.2792
2	-0.6198
3	-0.5093
4	-0.0917
5	0.1179
6	0.0333
7	-0.0447
8	-0.0083
9	0.0093
10	-0.0136
11	0.0060

TABLE 5.2.1
Fourier Coefficients
of Wind Pressure Load

θ	Load Value for 12 Harmonics	Load Value for 8 Harmonics
0	-1.016	-1.010
7.5	-0.955	- .952
15	-0.783	-0.787
22.5	-0.528	-0.535
30	-0.216	-0.219
37.5	0.136	0.141
45	0.516	0.522
52.5	0.888	0.887
60	1.183	1.178
67.5	1.335	1.335
75	1.316	1.319
82.5	1.146	1.144
90	0.883	0.878
97.5	0.610	0.613
105	0.416	0.429
112.5	0.352	0.355
120	0.383	0.366
127.5	0.423	0.406
135	0.416	0.427
142.5	0.387	0.416
150	0.383	0.391
157.5	0.407	0.378
165	0.416	0.388
172.5	0.398	0.409
180	0.383	0.420

TABLE 5.2.2 Effect of Number of
Harmonics on Representing
the Wind Pressure Load

Harmonic Number	Cosine Coefficient
0	0.0555
1	0
2	0.1111
3	0
4	0.1111
5	0
6	0.1111
7	0
8	0.1111
9	0
10	0.1111
11	0
12	0.1111
13	0
14	0.1111
15	0
16	0.1111
17	0

TABLE 5.3.1

Fourier Coefficients
of Two Diametrically
Opposed Concentrated
Loads

θ	Load Value for 18 Harmonics	Load Value for 12 Harmonics
0	0.994	0.611
5	0.635	0.522
10	0.055	0.301
15	-0.207	0.055
20	-0.055	-0.104
25	0.119	-0.131
30	0.055	-0.055
35	-0.079	0.041
40	-0.055	0.085
45	0.055	0.055
50	0.055	-0.012
55	-0.039	-0.061
60	-0.055	-0.055
65	0.026	-0.005
70	0.055	0.045
75	0.015	0.055
80	-0.055	0.019
85	0.005	-0.032
90	0.055	-0.055

TABLE 5.3.2 Effect of Number of
Harmonics on Representing
the Two Concentrated Loads

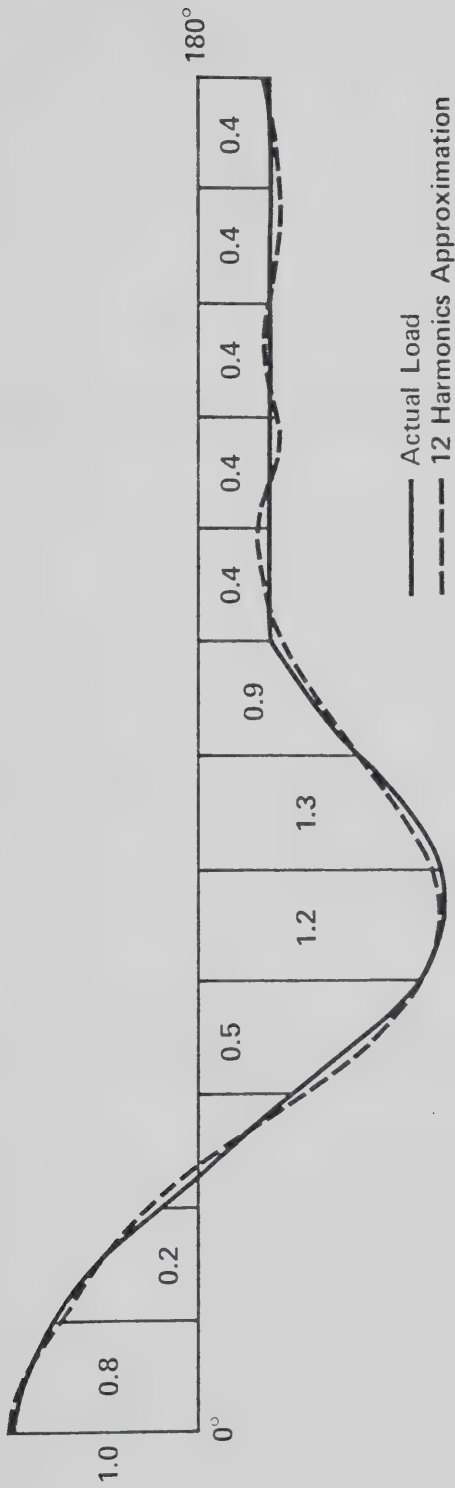


Fig. 5.1 Fourier Approximation for Wind Load

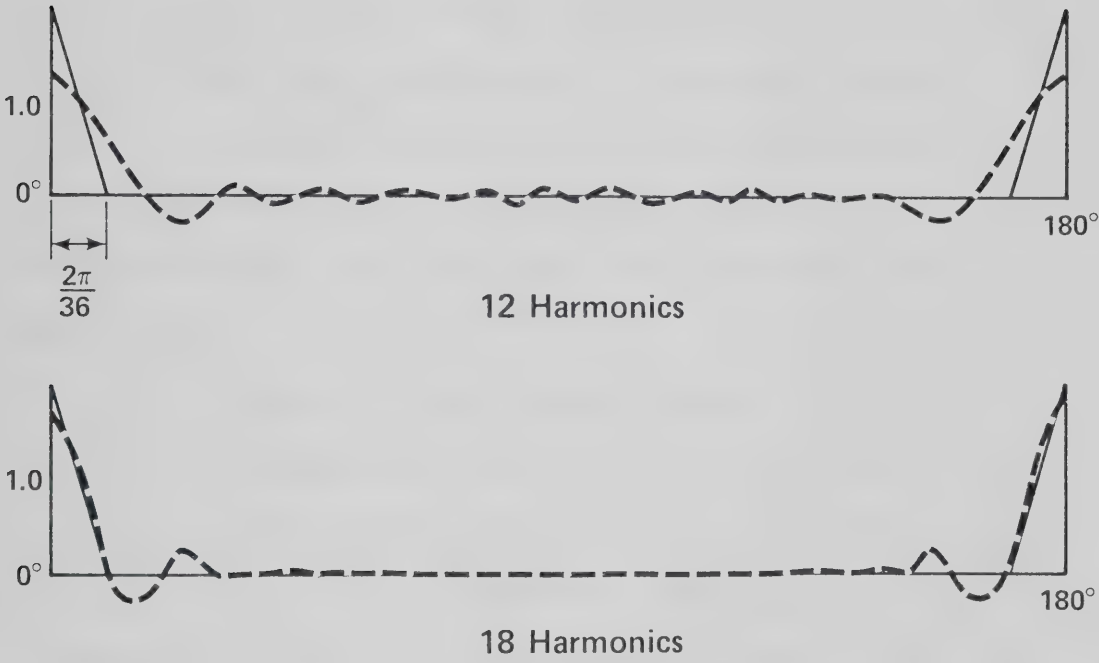


Fig. 5.2 Fourier Approximation for Two Diametrically Opposed Concentrated Loads

CHAPTER 6

SUMMARY AND CONCLUSIONS

In this study, a theory has been generalized. A computer program has been developed for the elastic analysis of axisymmetric segmented shell structure of general geometric configuration. General arbitrary loadings have been considered. Applications for a number of loading cases and elements have been presented.

The reduction of the governing partial differential equations of the classical shell theory to a set of eight first order ordinary differential equations involves only straight forward algebraic manipulations. The classical theory chosen as a foundation for the theory presented herein, Flügge's theory, is considered one of the most accurate theories available in the literature. The approximation in formulating the basic governing equations of this theory are such that the theory may be considered to be exact. The adaptation of the general form of these basic equations allows the geometry of any type of shell element to be considered, without any theoretical approximations which may be suitable for specific dimensions and not for others. Variation of the shell thickness along the meridian can be accounted for with accuracy comparable to that for constant thickness.

The loads, when approximated by means of Fourier series, may be represented with sufficient accuracy by including a number of harmonics, within practical limits. This approximation allows the consideration of general arbitrary types of loadings in a simple manner.

The excellent agreement between the results of the problems presented in this thesis and the results of other known solutions, analytical or numerical, demonstrate the accuracy of the solution technique and the reliability of the numerical integration process used.

It may be concluded that the solution technique presented in this study is simple and general for the elastic analysis of shells of revolution. The accuracy is consistent with a good shell theory. The geometric limitations are of no importance from the practical point of view.

Further development, by applying this method to the study of free vibration and elastic buckling criteria of shells of revolution is possible.

REFERENCES

1. ACI-ASCE Committee 334, *Concrete Shell Design and Construction, Design and Construction of Reinforced Concrete Cooling Tower Shells*, Practice and Commentary Draft 1974.
2. Ashwell, D.G., Gallagher, R.H., *Finite Elements for Thin Shells and Curved Members*, John Wiley & Sons, New York, 1976.
3. Baker, E.H., Kovalsky, L., Rish, F.L., *Structural Analysis of Shells*, McGraw-Hill Book Company Inc., New York, 1972.
4. Billington, D.P., *Thin Shell Concrete Structures*, McGraw-Hill Book Company Inc., New York, 1965.
5. Bogner, F.K., Fox, R.L. and Schmit, L.A., *A Cylindrical Shell Discrete Element*, A.I.A.A. Journal, Vol. 5, No. 4, April 1967, pp. 745-749.
6. Budiansky, B. and Radkowski, P.P., *Numerical Analysis of Unsymmetrical Bending of Shells of Revolution*, A.I.A.A. Journal, Vol. 1, No. 8, August 1963, pp. 1833-1842.
7. Cantin, G.M. and Clough, R.W., *Curved Cylindrical Shell Finite Element*, A.I.A.A. Journal, Vol. 6, No. 6, June 1968, pp. 1057-1062.
8. Dorn, S.W., *Numerical Methods with Fortran IV Case Studies*, John Wiley & Sons, Inc., New York, 1972.
9. Dunham, R.S. and Nickell, R.E., *Finite Element Analysis of Axisymmetric Solids with Arbitrary Loadings*, Structural Engineering Report No. 67-6, University of California, Berkeley, June 1967.
10. Flügge, W., *Stresses in Shells*, 2nd Ed., Springer-Verlag, New York - Berlin, 1973.
11. Gallagher, R.H., *The Development and Evaluation of Matrix Methods for Thin Shell Structural Analysis*, Ph.D. Thesis, State University of New York, Buffalo, New York, 1966.

12. Goldberg, J.E., Bogdanoff, J.L. and Alspaugh, D.W., *Stresses in Spherical Domes Under Arbitrary Loading Including Thermal and Shrinkage Effects*, Non-Classical Shell Problems, Proceedings of Symposium, Warsaw, North Holland Publishing Co., Amsterdam, September 1963.
13. Grafton, P.E. and Strome, D.R., *Analysis of Axisymmetrical Shells by the Direct Stiffness Method*, A.I.A.A. Journal, Vol. 1, No. 10, October 1963, pp. 2342-2347.
14. Gurfinkel, G. and Wolser, A., *Analysis and Design of Hyperbolic Cooling Towers*, Journal of the Power Division, Vol. 98, No. P01, ASCE, June 1972, pp. 133-152.
15. Hildebrand, F.B., *Introduction to Numerical Analysis*, 2nd Ed., McGraw-Hill Inc., New York, 1974.
16. Iyer, S.H. and Simmonds, S.H., *Stiffness Influence Coefficients for Non-Axisymmetrical Loading on Closed Cylindrical Shells*, Structural Engineering Report, No. 31, The University of Alberta, Edmonton, October 1970.
17. Iyer, S.H. and Simmonds, S.H., *Wind Loading on Conical Shells*, Proceedings of the International Association of Shells Structure, I.A.S.S., Calgary, Canada, July 1972.
18. Kalnins, A., *Analysis of Shells of Revolution Subjected to Symmetrical and Non-Symmetrical Loads*, Journal of Applied Mechanics, Vol. 31, September 1964, pp. 467-476.
19. Kempner, J., *Remarks on Donnell's Equations*, Journal of Applied Mechanics, Vol. 22, No. 1, March 1955.
20. Meyer, R.R. and Harmon, M.B., *Conical Segment Method for Analyzing Open Crown Shells of Revolution for Edge Loading*, A.I.A.A. Journal, Vol. 1, No. 4, April 1963, pp. 886-891.
21. Murray, D.W., Rohardt, A.M. and Simmonds, S.H., *A Classical Flexibility Analysis for Gentilly Type Containment Structures*, Structural Engineering Report No. 63, The University of Alberta, Edmonton, June 1977.
22. Percy, J.H., Pian, T.H., Klein, S. and Norvaratna, D.R., *Application of the Matrix Displacement Method to Linear Elastic Analysis of Shells of Revolution*, A.I.A.A. Journal, Vol. 3, No. 11, November 1965, pp. 2138-2145.

23. Pestel, C.E., Leckie, F.A., *Matrix Methods in Elasto-Mechanics*, McGraw-Hill Book Company, New York, 1963.
24. Rizkalla, S.H., *An Investigation of Segmentally Constructed Hyperboloid Natural Draft Cooling Tower*, Ph.D. Thesis, North Carolina State University, Raleigh, 1976.
25. Sepetoski, W.K., Pearson, C.E., Dingwell, I.W. and Adkins, A.W., *A Digital Computer Program for a General Axially Symmetric Thin Shell Problem*, Journal of Applied Mechanics, Vol. 29, Transaction ASME, Vol. 84, Series E, 1962, pp. 655-661.
26. Soare, M., *Application of Finite Difference Equations to Shell Analysis*, Pergamon Press, New York, 1967.
27. Timoshenko, S. and Woinowsky-Krieger, S., *Theory of Plates and Shells*, 2nd Ed. McGraw-Hill Book Company, 1959.

APPENDIX A

SHELL THEORY

This appendix presents the analytical development of the basic equations, used in this study, as given by Flügge [10].

A.1 Geometry of Shells

The geometry of a shell is defined by specifying the form of the middle surface and the thickness of the shell at each point. The surface of a shell of revolution is generated by the rotation of a plane curve about an axis in its plane. This generating curve is called the "meridian". The intersection of the surface with planes perpendicular to the axis of revolution are "parallel circles". Two coordinates s , θ are required to describe any point on the middle surface of the shell:

- a) s measures the distance to the point along the meridian from the intersection of the middle surface with the axis of rotation, or from a datum parallel circle.
- b) θ is the angular "distance" of the point from a datum generator.

A third coordinate z is required to measure the distance along a normal to the middle surface.

The radii of curvature of a shell of revolution are:

- a) r is the radius of curvature of parallel circles
- b) r_1 is the radius of curvature of meridian

- c) r_2 is the length of the normal between any point on the middle surface and the axis of revolution.

The following fundamental geometrical relations can clearly be seen in Fig. A.1

$$r = r_2 \sin\phi \quad \text{A.1.1}$$

$$ds = r_1 d\phi \quad \text{A.1.2}$$

$$dr = ds \cos\phi \quad \text{A.1.3}$$

$$dx = ds \sin\phi \quad \text{A.1.4}$$

where ϕ represents the angular distance of the point under consideration from the axis of rotation.

From Eqs. A.1 one can write

$$\frac{dr}{ds} = \cos\phi \quad \text{A.2.1}$$

$$\frac{dr_2}{ds} = \frac{r_1 - r_2}{r_1} \cot\phi \quad \text{A.2.2}$$

For simplicity the derivatives with respect to s and θ will be indicated by dots and primes respectively, i.e.,

$$\frac{\partial}{\partial s} () \equiv ()^\cdot \quad \text{A.3.1}$$

$$\frac{\partial}{\partial \theta} () \equiv ()' \quad \text{A.3.2}$$

A.2 Equations of Equilibrium

If a shell element is cut out by two meridians and two parallel circles, each pair infinitely close as seen in Fig. A.2, the element is stressed by ten stress resultant components which must be in equilibrium with the external applied load. These stress resultants are:

N_s, N_θ = normal in-plane forces per meridional and circumferential unit length, respectively.

$N_{s\theta}, N_{\theta s}$ = in-plane shear forces per meridional and circumferential unit length, respectively.

Q_s, Q_θ = transverse shear forces per meridional and circumferential unit lengths, respectively.

M_s, M_θ = meridional and circumferential moments per unit length, respectively.

$M_{s\theta}, M_{\theta s}$ = circumferential and meridional twisting moments per unit length, respectively.

The sign convention for the forces is shown in Fig. A.2

Referring to the three orthogonal axis s, θ, z , one can obtain six equations of equilibrium

$$\sum N_i = 0 \quad \text{A.4.1}$$

$$\sum M_i = 0 \quad \text{A.4.2}$$

where $\sum N_i$ is the sum of the forces in the i direction
($i = s, \theta, z$).

ΣM_i is the sum of the moments about the i axis
 $(i = s, \theta, z)$

The six equilibrium equations in terms of the ten stress resultants are

$$r_1(rN_s)^{\bullet} + r_1N'_{\theta s} - r_1N_{\theta} \cos\phi - r Q_s + rr_1 P_s = 0 \quad A.5.1$$

$$r_1(rN_{s\theta})^{\bullet} + r_1N'_{\theta} + r_1 N_{\theta s} \cos\phi - r_1Q_{\theta} \sin\phi + rr_1P_{\theta} = 0 \quad A.5.2$$

$$r_1 N_{\theta} \sin\phi + rN_s + r_1 Q'_{\theta} + r_1(rQ_s)^{\bullet} - rr_1 P_z = 0 \quad A.5.3$$

$$r_1(rM_s)^{\bullet} + r_1M'_{\theta s} - r_1 M_{\theta} \cos\phi - rr_1 Q_s = 0 \quad A.5.4$$

$$r_1(rM_{s\theta})^{\bullet} + r_1M'_{\theta} + r_1 M_{\theta s} \cos\phi - rr_1 Q_{\theta} = 0 \quad A.5.5$$

$$rr_1 N_{\theta s} - rr_1N_{s\theta} - r_1 M_{\theta s} \sin\phi + r M_{s\theta} = 0 \quad A.5.6$$

where P_s, P_{θ}, P_z are the resolved components of the external applied load in the s, θ, z , respectively. If the subscript s , in the above equations, is replaced by ϕ , and the relations

$$\frac{1}{r_1} \frac{\partial}{\partial \phi} () = ()^{\bullet} \quad A.6$$

is observed. The above set of equations (Eqs. A.5) can be reduced to the equilibrium equations in Reference 10, pg. 318. Six

equations of equilibrium are not enough to determine the ten stress resultants. The shell element is four times internally statically indeterminate and therefore, an analysis of the deformation of the shell is required in order to obtain the solution.

A.3 Strain-Displacement Relations

The displacement vector of a point lying on the middle surface of an element may be described by its three orthogonal components, defined as:

- W = the displacement component in the radial direction, positive when it points away from the centre of curvature.
- V = the displacement component in the meridional direction, positive in the direction of increasing the coordinate s.
- U = the displacement component in the direction of the tangent to the parallel circle, positive in the direction of increasing the coordinate θ .

In addition, the auxiliary variable β , which represents the angle by which an element of the meridian rotates during deformation may be expressed in terms of the displacement components, Fig. A.3, as [10].

$$\beta = -W' + \frac{V}{r_1} \quad \text{A.7.1}$$

By differentiation, the change in slope of the meridian due to deformation, is

$$\beta^{\bullet} = -W^{\bullet\bullet} + \frac{r_1 V^{\bullet} - r_1^{\bullet} V}{r_1^2} \quad \text{A.7.2}$$

Referring to Fig. A.4, one can obtain the relationship between the strains and the displacement components of a point on the middle surface.

The meridional strain is

$$\begin{aligned} \epsilon_s &= \frac{\text{Elongation of the line element } ds}{ds} \\ &= \frac{W}{r_1} + V^{\bullet} \end{aligned} \quad \text{A.8.1}$$

The hoop strain is

$$\begin{aligned} \epsilon_{\theta} &= \frac{\text{Elongation of the line element } rd\theta}{rd\theta} \\ &= \frac{U' + V \cos\phi + W \sin\phi}{r} \end{aligned} \quad \text{A.8.2}$$

The shear strain, which is the change of the right angle between the two line elements ds and $rd\theta$ (Fig. A.4.3), is equivalent to

$$\begin{aligned} \gamma_{s\theta} &= \gamma_1 + \gamma_2 = \\ &= \frac{V'}{r} + U^{\bullet} + \frac{U}{r} \cos\phi \end{aligned} \quad \text{A.8.3}$$

Since the displacement is assumed to be very small in comparison with the principal radii of curvature, all products of two displacement components have been dropped in deriving the foregoing equations.

One may use the preceding equations to express the relationship between the strains and the displacement components of an arbitrary point at a distance z from the middle surface by simply replacing W, V, U with the displacement components of this point W_z, V_z, U_z , and replacing the radii r_1, r_2 with $r_1 + z$ and $r_2 + z$, respectively.

Then

$$\epsilon_s = \frac{W_z}{r_1 + z} + V'_z \quad \text{A.9.1}$$

$$\epsilon_\theta = U'_z + \frac{V_z \cos\phi + W_z \sin\phi}{(r_2 + z) \sin\phi} \quad \text{A.9.2}$$

$$\gamma_{s\theta} = U'_z - \frac{U_z \cos\phi - V'_z}{(r_2 + z) \sin\phi} \quad \text{A.9.3}$$

By introducing the assumption that lines normal to the middle surface before deformation remain normal after deformation, it can clearly be seen from Fig. A.5 that

$$W_z = W \quad \text{A.10.1}$$

$$V_z = V \frac{r_1 + z}{r_1} + W'_z \quad \text{A.10.2}$$

$$U_z = U \frac{r_2 + z}{r_2} + W'_z \frac{z}{r} \quad \text{A.10.3}$$

Therefore, the strains at a distance z from the middle surface in terms of the displacements W, V, U at the middle surface can be obtained by substituting Eqs. A.10 into Eqs. A.9 to obtain

$$\begin{aligned}\varepsilon_s &= \frac{1}{r_1 + z} W + \frac{r_1 z}{r_1 + z} W' - \frac{r_1 z}{r_1 + z} W'' \\ &+ V' - \frac{r_1 z}{r_1(r_1 + z)} V\end{aligned}\quad \text{A.11.1}$$

$$\begin{aligned}\varepsilon_\theta &= \frac{1}{r_2 + z} W - \frac{z \cot \phi}{r_2 + z} W' - \frac{z}{r \sin \phi (r_2 + z)} W'' \\ &+ \frac{\cot \phi (r_1 + z)}{r_1(r_2 + z)} V + \frac{1}{r} U'\end{aligned}\quad \text{A.11.2}$$

$$\begin{aligned}\gamma_{s\theta} &= \frac{r_1(r_2 + z)}{r_2(r_1 + z)} U' - \frac{r_1(r_2 + z)}{r_2^2(r_1 + z)} \cot \phi U \\ &+ \frac{(r_2 + z)}{r_1 \sin \phi (r_2 + z)} V' - \frac{z}{\sin \phi} \left(\frac{1}{r_2 + z} + \frac{r_1}{r_2(r_1 + z)} \right) W'' \\ &+ \frac{\cot \phi}{r_2 \sin \phi} \left(\frac{z}{r_2 + z} + \frac{r_1 z}{r_2(r_1 + z)} \right) W'\end{aligned}\quad \text{A.11.3}$$

A.4 Stress-Strain Relations

Hooke's law relates the strains to the corresponding stresses in linearized form, as long as the stresses remain within the elastic limit. If T is the change in temperature measured from arbitrary level. Hooke's law may be written, in index notation, as

$$E\varepsilon_i = \sigma_i - \nu(\sigma_j + \sigma_k) + E\alpha T \quad \text{A.12.1}$$

$$G\gamma_{ij} = \tau_{ij} \quad \text{A.12.2}$$

where

i, j, t take in turns the direction s, θ, z

σ_i is the normal stress in the i direction

τ_{ij} is the shearing stress in the i plane and
 j direction

$$G = \frac{E}{2(1 + \nu)} \quad \text{A.13}$$

The modulus of elasticity, E , Poisson's ratio, ν , the coefficient of thermal expansion, α , and thus the shear modulus, G , are the material constants.

As in the theory of plates, except in the immediate vicinity of concentrated forces, the stresses in z direction are small in comparison with the stresses in s, θ directions and their influence in Hooke's law may be neglected, i.e., it is assumed that

$$\sigma_z = \gamma_{sz} = \gamma_{\theta z} = 0 \quad \text{A.14}$$

Therefore, the stress-strain relations can be written as

$$\sigma_s = \frac{E}{1 - \nu^2} \left[\epsilon_s + \nu \epsilon_\theta - (1 + \nu) \alpha T \right] \quad \text{A.15.1}$$

$$\sigma_\theta = \frac{E}{1 - \nu^2} \left[\epsilon_\theta + \nu \epsilon_s - (1 + \nu) \alpha T \right] \quad \text{A.15.2}$$

$$\tau_{s\theta} = \frac{E}{2(1+\nu)} \gamma_{s\theta} \quad \text{A.15.3}$$

A.5 Elastic Law

The internal stress resultants can be determined by integrating the stresses through the shell thickness (Fig. A.6).

They are defined as

$$N_s = \int_{-t/2}^{t/2} \sigma_s \frac{r_2 + z}{r_2} dz \quad \text{A.16.1}$$

$$N_\theta = \int_{-t/2}^{t/2} \sigma_\theta \frac{r_1 + z}{r_1} dz \quad \text{A.16.2}$$

$$N_{s\theta} = \int_{-t/2}^{t/2} \tau_{s\theta} \frac{r_1 + z}{r_2} dz \quad \text{A.16.3}$$

$$N_{\theta s} = \int_{-t/2}^{t/2} \tau_{\theta s} \frac{r_1 + z}{r_1} dz \quad \text{A.16.4}$$

$$M_s = \int_{-t/2}^{t/2} \sigma_s \frac{r_2 + z}{r_2} z dz \quad \text{A.16.5}$$

$$M_\theta = - \int_{-t/2}^{t/2} \sigma_\theta \frac{r_1 + z}{r_1} z dz \quad \text{A.16.6}$$

$$M_{s\theta} = \int_{-t/2}^{t/2} \tau_{s\theta} \frac{r_2 + z}{r_2} z dz \quad A.16.7$$

$$M_{\theta s} = \int_{-t/2}^{t/2} \tau_{\theta s} \frac{r_1 + z}{r_1} z dz \quad A.16.8$$

It should be noted that the expressions for Q_s , Q_θ have been omitted as they are equal to the integral of the shearing stresses in z direction. Also the minus sign in these expressions correspond to the positive directions assumed for the stress resultants as shown in Fig. A.6.

The expressions for σ_s , σ_θ , $\tau_{s\theta}$ (Eqs. A.15) can be entered into Eqs. A.16. Then Eqs. A.11 are substituted for the displacements and the integration with respect to z is performed. The results in the stress-resultant-displacement relationships.

$$\begin{aligned} N_s = D \left[V^* + \frac{W}{r_1} + \nu \frac{U' + V \cos\phi + W \sin\phi}{r} \right] \\ + \frac{K}{r_1^2} \frac{r_2 - r_1}{r_2} \left[\left(\frac{V}{r_1} - W^* \right) r_1 + r_1 W^* + \frac{W}{r_1} \right] \\ - (1 + \nu) \alpha D T_{O_2} \end{aligned} \quad A.17.1$$

$$\begin{aligned} N_\theta = D \left[\frac{U' + V \cos\phi + W \sin\phi}{r} + \nu \left(V^* + \frac{W}{r_1} \right) \right] \\ - \frac{K}{r r_1} \frac{r_2 - r_1}{r_2} \left[\frac{V}{r_1} \left(\frac{r_1 - r_2}{r_2} \right) \cos\phi + \frac{W \sin\phi}{r_2} \right. \\ \left. + \frac{W'^*}{r} + W^* \cos\phi \right] - (1 + \nu) \alpha D T_{O_1} \end{aligned} \quad A.17.2$$

$$\begin{aligned}
 N_{s\theta} = & D \left(\frac{1-\nu}{2} \right) \left[U^{\bullet} + \frac{V' - U \cos\phi}{r} \right] \\
 & + \frac{K}{r_1^2} \left(\frac{1-\nu}{2} \right) \frac{r_2 - r_1}{r_2} \left[U^{\bullet} \left(\frac{r_2 - r_1}{r_2} \right) \right. \\
 & \left. + U \frac{r_1 - r_2}{r_2} \frac{\cot\phi}{r_2} + W'^{\bullet} \frac{r_1}{r} - W' \frac{r_1 \cos\phi}{r^2} \right] \quad A.17.3
 \end{aligned}$$

$$\begin{aligned}
 N_{\theta s} = & D \left(\frac{1-\nu}{2} \right) \left[U^{\bullet} + \frac{V' - U \cos\phi}{r} \right] \\
 & + \frac{K}{rr_1} \left(\frac{1-\nu}{2} \right) \frac{r_2 - r_1}{r_2} \left[V' \frac{r_2 - r_1}{r_1 r_2} - W'^{\bullet} + \frac{W' \cos\phi}{r} \right] \quad A.17.4
 \end{aligned}$$

$$\begin{aligned}
 M_s = & K \left[W^{\bullet\bullet} - W^{\bullet} \frac{r^{\bullet}_1}{r_1} - W \frac{r_1 - r_2}{r_2} \frac{1}{r_1^2} - \frac{V^{\bullet}}{r_2} + \nu \frac{r^{\bullet}_1}{r_1^2} \right. \\
 & \left. + \nu \frac{W'^{\bullet\bullet}}{r^2} + \nu \frac{W^{\bullet} \cos\phi}{r} - \nu \frac{U'}{rr_2} - \nu \frac{V \cos\phi}{rr_1} \right] \\
 & + (1 + \nu) \propto K T_{12} \quad A.17.5
 \end{aligned}$$

$$\begin{aligned}
 M_{\theta} = & K \left[\frac{W'^{\bullet\bullet}}{r^2} + \frac{W^{\bullet} \cos\phi}{r} - \frac{W}{r_2^2} \frac{r_2 - r_1}{r_1} - \frac{U'}{rr_1} \right. \\
 & \left. - \frac{V \cos\phi}{rr_1} \frac{2r_2 - r_1}{r_2} + \nu W^{\bullet\bullet} - \nu W^{\bullet} \frac{r_1^{\bullet}}{r_1} \right. \\
 & \left. - \nu \frac{V^{\bullet}}{r_1} + \nu \frac{V r_1^{\bullet}}{r_1^2} \right] + (1 + \nu) \propto K T_{11} \quad A.17.6
 \end{aligned}$$

$$M_{s\theta} = K \frac{1 - \nu}{2} \left[\frac{2W'^{\bullet}}{r} - \frac{2W'}{r^2} \cos\phi - \frac{U^{\bullet}}{r_2} \frac{2r_1 - r_2}{r_2} + \frac{U}{r_2^2} \frac{2r_1 - r_2}{r_1} \cot\phi - \frac{V'}{rr_1} \right] \quad A.17.7$$

$$M_{\theta s} = K \frac{1 - \nu}{2} \left[\frac{2W'^{\bullet}}{r} - \frac{2W'}{r^2} \cos\phi - \frac{U^{\bullet}}{r_2} + \frac{U \cot\phi}{r_2^2} - \frac{V'}{rr_1} \frac{2r_2 - r_1}{r_2} \right] \quad A.17.8$$

Where the extensional rigidity, D, is defined as

$$D = \frac{Et}{1 - \nu^2} \quad A.18.1$$

and the flexural rigidity, K, is defined as

$$K = \frac{Et^3}{12(1 - \nu^2)} \quad A.18.2$$

The temperature terms T_{ok} and T_{1k} ($k = 1, 2$) are defined as follows:

$$T_{ok} = \frac{1}{t} \int_{-t/2}^{t/2} T dz + \frac{1}{tr_k} \int_{-t/2}^{t/2} Tz dz \quad A.19.1$$

$$T_{1k} = \frac{12}{t^3} \int_{-t/2}^{t/2} Tz dz + \frac{12}{t^3 r_k} \int_{-t/2}^{t/2} Tz^2 dz \quad A.19.2$$

If a linear variation of the temperature T through the thickness is assumed, Eqs. A.19 can be integrated by parts to yield

$$T_{ok} = \left\{ \frac{T^o + T^i}{2} + (T^o - T^i) \frac{t}{12r_k} \right\} \quad A.20.1$$

$$T_{1k} = \left\{ \frac{T^o - T^i}{t} + \frac{T^o + T^i}{2r_k} \right\} \quad A.20.2$$

in which T^o and T^i are the temperature measured at the outer and inner face of the shell respectively. If the term t/r_k is neglected when compared with unity, the subscript k disappears from Eqs. A.20 and T_o , T_1 can be defined as the average temperature measured on the middle surface and the temperature gradient respectively.

By substituting Eq. A.6 into Eqs. A.17 and changing the subscript s to ϕ , Eqs. A.17 reduce to the elastic law in Reference 10, pg. 322.

Eqs. A.5 and A.17 are the governing equations for a shell of revolution. The sixth equation of equilibrium (Eq. A.5.6) is identically satisfied if $r_1 = r_2$. Therefore, the five remaining equations of equilibrium (Eqs. A.5) and the eight equations of the elastic law (Eqs. A.17) are 13 equations in 13 unknowns (the three displacement components and ten stress resultants). Theoretically, one can solve for the stresses and displacements at any point in the shell using these equations.

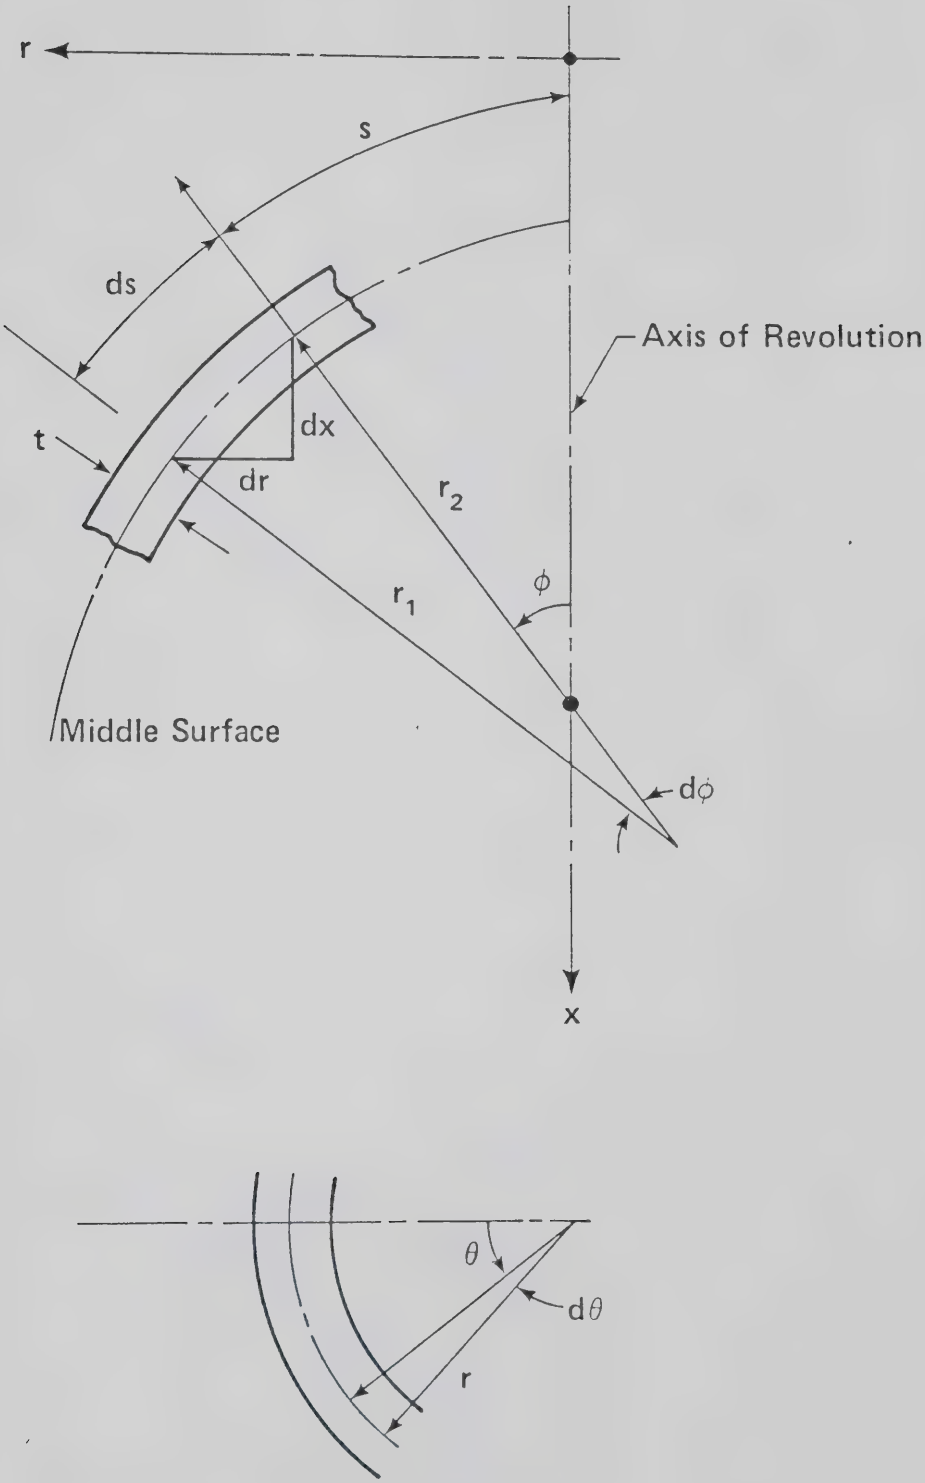


Fig. A.1 Meridian and Parallel Circle of a Shell of Revolution

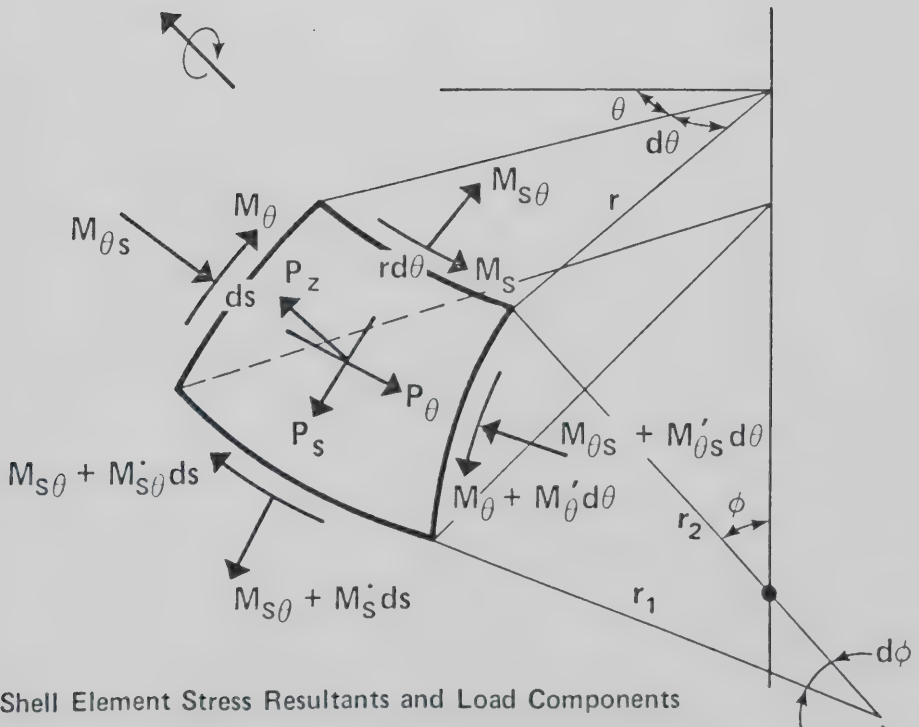
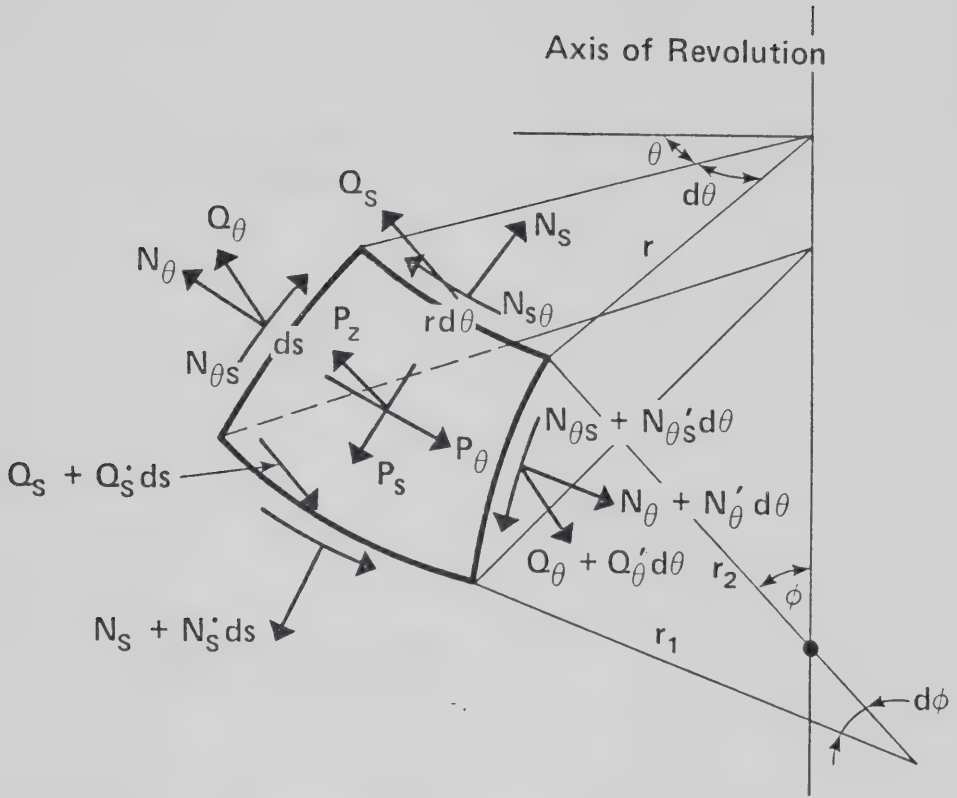


Fig. A.2 Shell Element Stress Resultants and Load Components

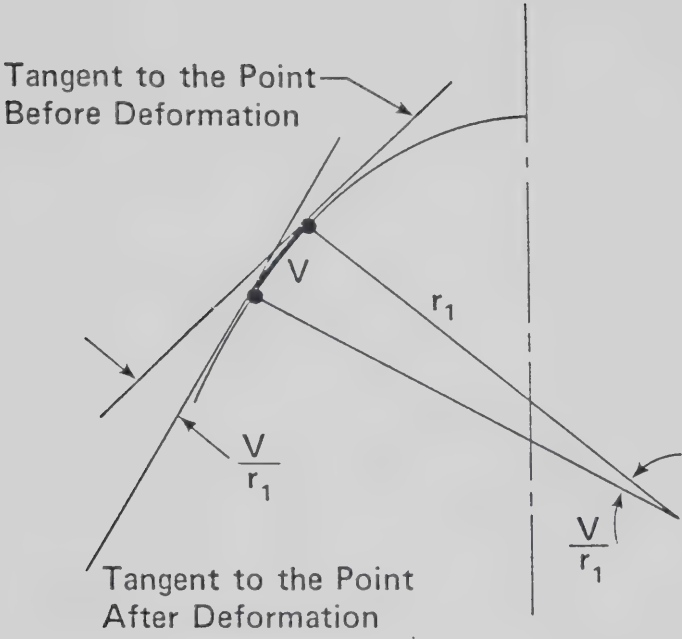


Fig. A.3.1 Meridional Rotation Due to Displacement V

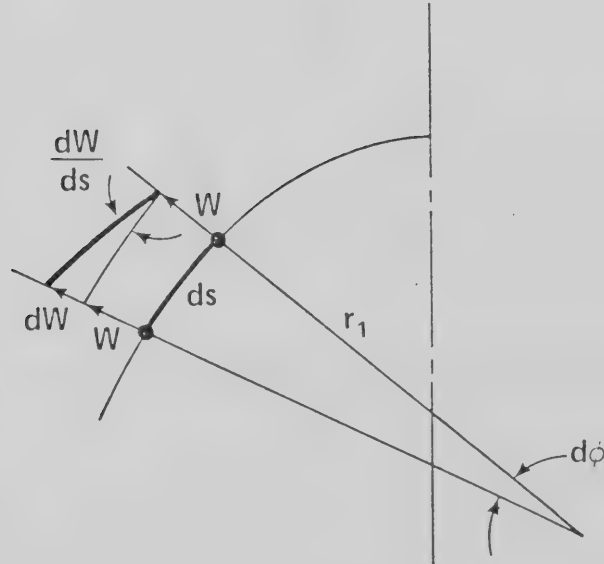


Fig. A.3.2 Meridional Rotation Due to Displacement W

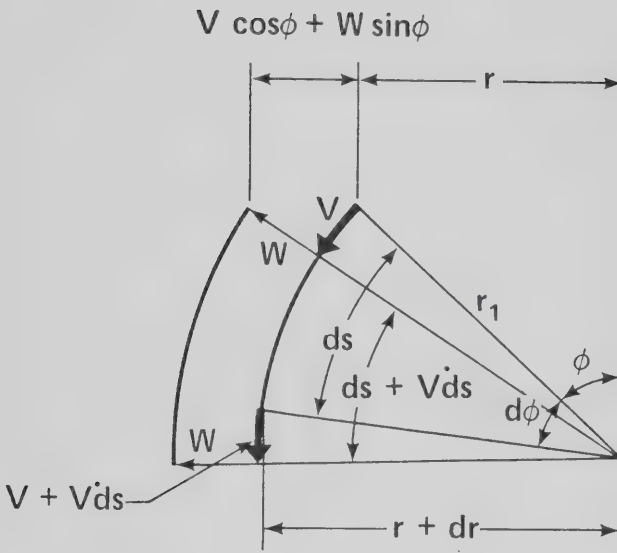


Fig. A.4.1 Meridian of a Shell Before and After Deformation

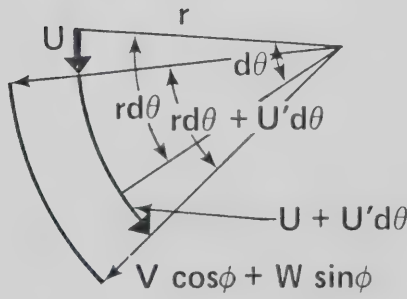


Fig. A.4.2 Parallel Circle Before and After Deformation



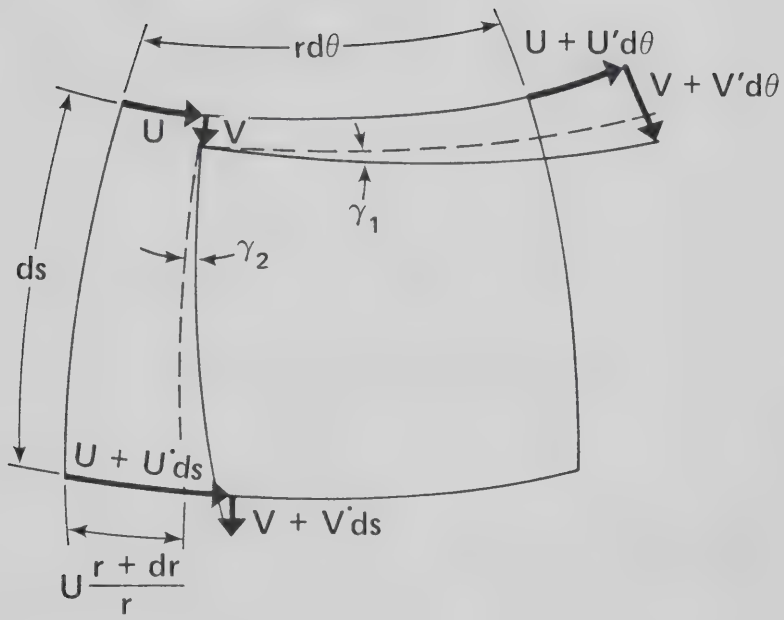


Fig. A.4.3 Change of the Right Angle Between Line Elements After Deformation

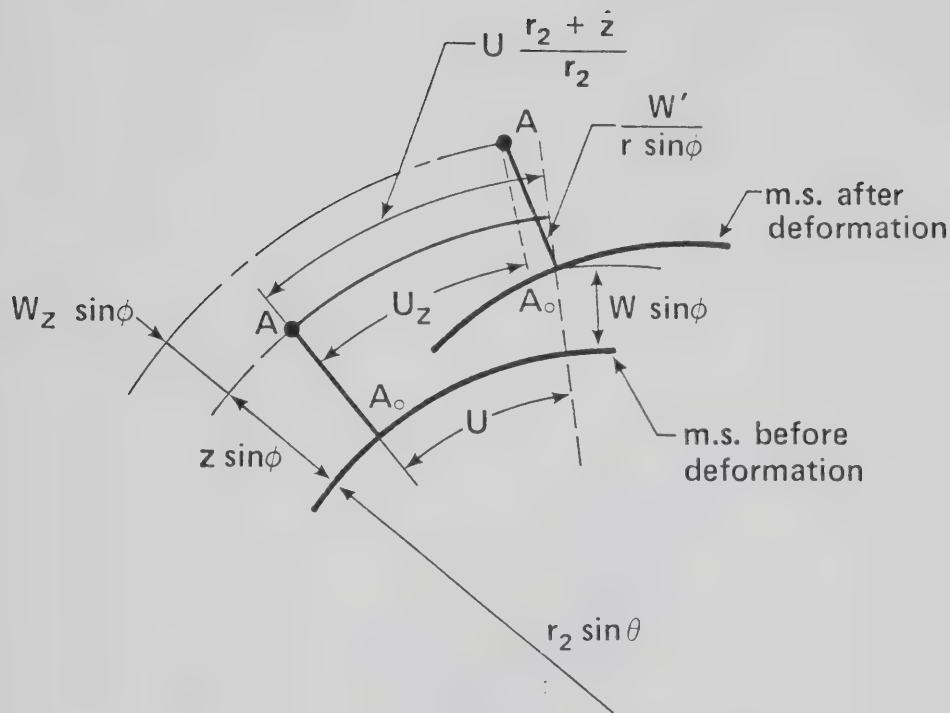

(a) Plane of Parallel Circle

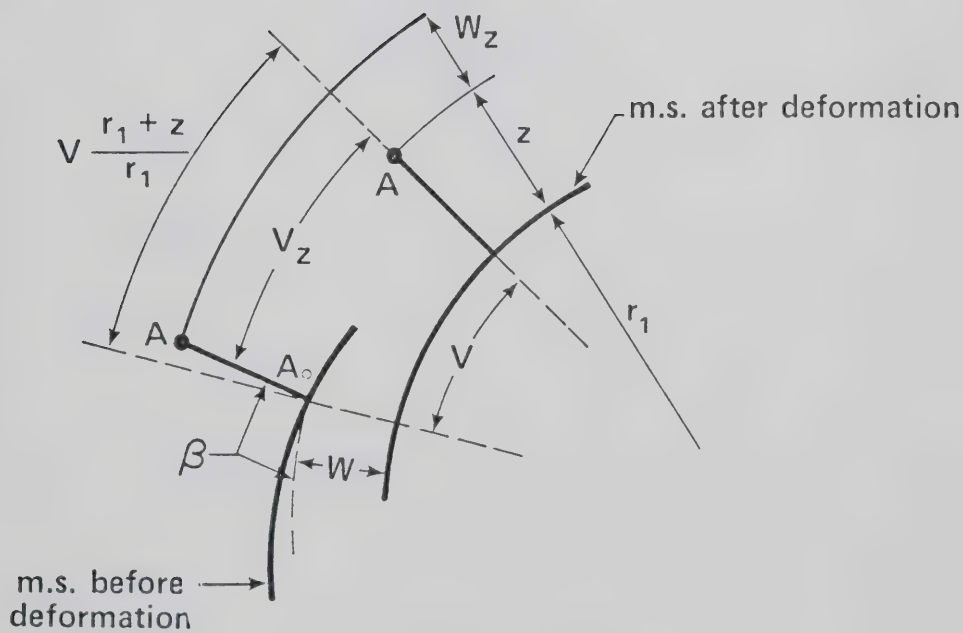

(b) Meridian

Fig. A.5 Relation Between Displacement of Two Points on Line Normal to the Middle Surface

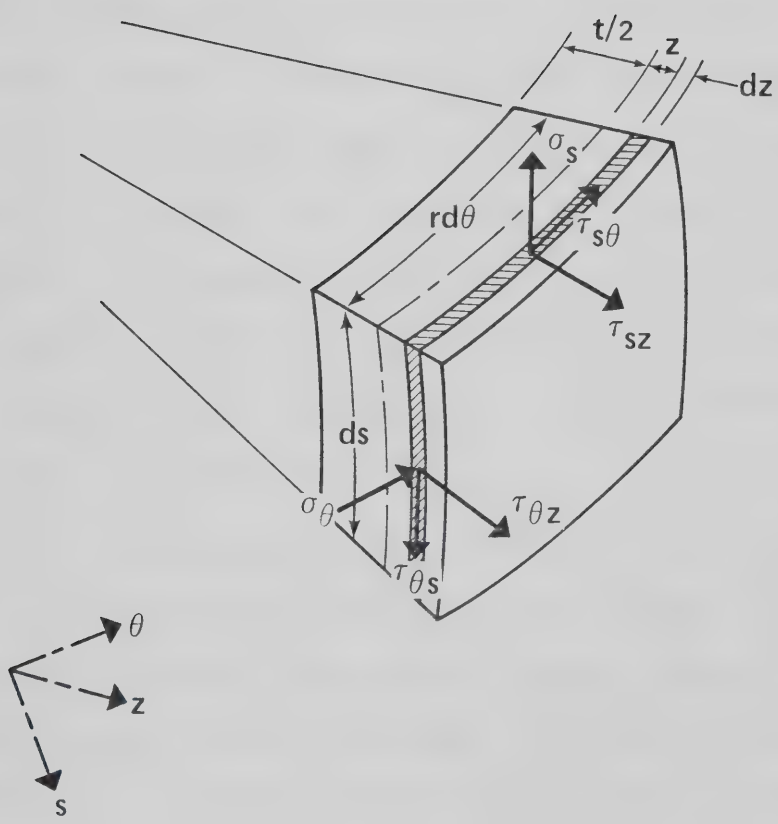


Fig. A.6 Stresses Acting on a Shell Element

APPENDIX B

USER'S MANUAL FOR PROGRAM SASHELL

Program SASHELL computes stress resultants and displacements for axisymmetric branched segmented shell structures due to their own weight, external applied loads and differential temperature variation (along the meridian or circumference).

In the present stage of development, the program is capable of analysing five types of shells of revolution of variable thickness. These are cylinders, circular plates, spheres, cones and hyperboloids of revolution. Loadings may be symmetric or non-axisymmetric with respect to the collatitude coordinate and may vary along the meridian.

The analysis procedure is based on the theory presented in this thesis and the program logic flow outlined in Sect. 4.2. A complete listing of the program is given in Appendix C. Input of the problems discussed in Chapter 4 and output of the pinched cylinder for a concentrated line load are given in Appendix D.

The input to SASHELL consists of several types of input cards. Certain card types may be repeated as required.

A typical explanation of a card type consists of the card type, a descriptive name indicating the nature of the data being entered and the format for the data on that card. This is followed by a symbolic line of input which, in turn, is followed by definitions of the input variables.

Limitations on SASHELL, due to the dimensions of the arrays in the program, are outlined following the explanation of the input cards.

TYPE 1: TITLE CARD (Format 10A8)

80			
AN IDENTIFIER STRING			

One card which contains any title for the problem

TYPE 2: ANALYSIS CONTROL CARD (Format 4I4,F7.0)

4		8		12		16		23
IPRINT		NP		NPCR		LDC		BETA

IPRINT : Print control parameter

If IPRINT = 0, the output will contain an echo check of the completed data. The loadings will be expanded in Fourier series, if required for the analysis, and the coefficients will be printed out.

If IPRINT = 1, the output will contain the echo check of the input data and the final results.

If IPRINT = 2, the output will contain the echo check of the input data, the results of the analysis for each harmonic and the superimposed final results.

If IPRINT = 3, full output including intermediate values will be printed out. (Used for checking purposes only.)

- NP : Number of points along the element meridian for which the Runge-Kutta integration process is used.
NP should not be specified less than 21 (see Limitations).
- NPCR : Number of the circumferential points at which the final results are required.
If the loads are symmetric or antisymmetric with respect to the meridian passing through $\theta = 0$, NPCR is the number of points along half the circumference $(0, \pi)$. If the loads vary randomly in the circumferential direction, NPCR is the number of points along the full circumference of the element $(0, 2\pi)$.
If the loads are constants in the circumferential direction (symmetric), NPCR is equal to one.
- LDC : Dead load control parameter.
If LDC = 0, dead load is excluded from the analysis.
If LDC = 1, dead load is evaluated and superimposed on the external applied loadings.
- BETA : Maximum element length coefficient. BETA should not exceed 25 (see Limitations).

TYPE 3: STRUCTURE DATA CARD

(Format 2I3,4F12.0)

3		6		18		30		42		54	
NE		NJ		EG		PUG		GAMG		TKG	

- NE : Number of elements
- NJ : Number of junctions between elements (nodes).

EG : Global modulus of elasticity.
 PUG : Global Poisson's ratio.
 GAMG : Global specific weight.
 TKG : Global coefficient of thermal expansion

NOTE: If the structure consists of elements of different materials, the global properties are to be omitted and the structural data card specifies the number of elements and nodes only.

TYPE 4: NODAL DATA CARDS (format I4,2F10.0,4I4)

One card is required for each node.

4	14	24	28	32	36	40
I	XCOOR(I)	RCOOR(I)	IDF(I,1)	IDF(I,2)	IDF(I,3)	IDF(I,4)

I : Node number

XCOOR(I) : Global X coordinate of node I along the axis of revolution directed downward from the top of the structure.

RCOOR(I) : Radius of the parallel circle passing through node I.
 RCOOR(I) should not be specified as zero (see Limitations).

IDF(I,J) : Identification of the jth degree of freedom at node I.
 J = 1,4 for the rotation of the meridian (β), the radial displacement component (W), the meridional displacement component (V) and the circumferential displacement component (U), respectively. When

IDF(I,J) = 0, the corresponding degree of freedom is not restrained.

When IDF(I,J) = 1, the corresponding degree of freedom is restrained.

TYPE 5: ELEMENT DATA CARDS

Two cards are required for each element.

First card Format (5I6,4F10.0)

6	12	18	24	30	40	50	60	70
I	IT(I)	NC(I,1)	NC(I,2)	NIP(I)	TH(I,1)	TH(I,2)	EC(I,1)	EC(I,2)

I : Element number

IT(I) : Element type

If IT(I) = 1, element I is a cylinder

If IT(I) = 2, element I is a cone or a circular plate.

If IT(I) = 3, element I is a sphere of which $r_1 = r_2$.

If IT(I) = 4, element I is a sphere of which $r_1 \neq r_2$.

If IT(I) = 5, element I is a hyperboloid of revolution.

NC(I,1) : Node number at the top of element I.

NC(I,2) : Node number at the bottom of element I.

NIP(I) : Integer to indicate the number of intermediate points in the element at which the final results are not required. The number of equally spaced points at which the final results will be printed out are

$\frac{NP-1}{NIP(I)} + 1$. A value of NP-1 will be assigned to NIP(I) when input is zero.

TH(I,1) : Element thickness at the top.

TH(I,2) : Element thickness at the bottom.

EC(I,1) : Eccentricity of the top node from the middle surface of the element at the top.

EC(I,2) : Eccentricity of the bottom node from the middle surface of the element at the bottom.

NOTE: The eccentricity is defined such that the radius of the parallel circle passes through the middle surface of the element is

$$r_{\text{midsurface}} = r_{\text{node}} - EC(I,J)$$

Thus, EC(I,J) is positive when directed inward from the node to the middle surface of the element.

Second card (Format 7F10.0)

10	20	30	40	50	60	70
HPCN(1,I)	HPCN(2,I)	HPCN(3,I)	GAMA(I)	E(I)	PU(I)	TCOEF(I)

HPCN(1,I) : Radius of curvature of the meridian for spherical element of type 4 (i.e., $r_1 \neq r_2$), or throat radius of a hyperboloid element (type 5). For elements other than of type 4 and type 5, HPCN(1,I) is 0.0.

HPCN(2,I) : Angle in degrees measured from the axis of revolution to the top edge of the spherical element of type 4, or hyperboloid constant in which the ratio $\frac{HPCN(2,I)}{HPCN(1,I)}$

equals to the slope of the asymptotes of the hyperbola. For elements other than of type 4 and 5, $HPCN(2,I)$ is 0.0.

$HPCH(3,I)$: Angle in degrees measured from the axis of revolution to the top edge of the spherical element of type 4, or global X coordinate of the throat of the hyperboloid element. $HPCH(3,I)$ is equal to 0.0 for elements other than of type 4 and 5.

$GAMA(I)$: Element specific weight. Specified if different from the global specific weight, otherwise $GAMA(I) = 0.0$ or blank.

$E(I)$: Element modulus of elasticity. Specified if different from the global modulus of elasticity, otherwise $E(I) = 0.0$ or blank.

$PU(I)$: Element Poisson's ratio. Specified if different from the global Poisson's ratio, otherwise $PU(I) = 0.0$ or blank.

$TCOEF(I)$: Element coefficient of thermal expansion. Specified if different from the global coefficient otherwise $TCOEF(I) = 0.0$ or blank.

NOTE: For a segmented structure which does not include spherical or hyperboloid elements and for which the other elements of which the structure consists have the same material properties, this card is a blank card.

TYPE 6: LOADING SPECIFICATION CARD (Format (6I5))

	5	10	15	20	25	30
NEL	NJL	NHL	NTL	NHPL	NHIN	

NEL : Number of externally loaded elements in the structure.

NJL : Number of loaded nodes in the structure.

NHL : Maximum number of harmonics required for the analysis including the zero harmonic (i.e., NHL = maximum harmonic number +1).

NTL : Loading type character.

If NTL = 0, loading is symmetric and the analysis is required for the zero harmonic only.

If NTL = 1, loading is non-axisymmetric in the circumferential direction, input is provided at a number of discrete points along the circumference of the shell, and the analysis is required for the cosine coefficients of Fourier series only (i.e., loading is symmetric with respect to a meridian passes through $\theta = \text{constant}$).

If NTL = 2, loading is non-axisymmetric in the circumferential direction, input is provided at a number of discrete points along the circumference of the shell, and the analysis is required for both cosine and sine coefficients of Fourier series.

If NTL = 3, loading is nonaxisymmetric along the

along the circumferential direction and input directly as cosine coefficients of Fourier expansion only.

- NHPL : Number of points along the circumference of the shell at which the loads values are described. These points are defined such that the circumferential coordinate is $\frac{2\pi i}{\text{NHPL}}$ where $i = 0, 1, 2, \dots, \text{NHPL} - 1$.
- NHIN : Integer which defines the increment in the harmonics, starting from the zero harmonic, to be specified when the analysis is required for a harmonic number $(0, \text{NHIN}, 2 \text{ NHIN}, \dots, \text{NHL} - 1)$. The program sets $\text{NHIN} = 1$ when it is specified as zero or blank.

NOTE: If the load is described at NHPL points, NHL can be specified as $\frac{\text{NHPL}}{2}$ and NHIN can be set equal to one. When $\text{IPRINT} = 0$, the Fourier coefficients of the input load are obtained with the echo check of the input data. Then, the user may decide, upon examining these coefficients, on the final values of NHL and NHIN (see Chapter 5, Sect. 5.2.3).

TYPE 7: ELEMENT LOADING CONTROL INPUT CARDS (Format 6I5)

One card for each loaded element

5	10	15	20	25	30
LL(I)	ILOAD (LL(I), K), K = 1,5				

- I : Integer takes the value of 1 to NEL

LL(I) : Number of the loaded element.

ILOAD(LL(I),K)

: Identifier for loading type on the element LL(I)
in the order:

ILOAD(*,1) for loading in the direction tangent
to the meridian (s).

ILOAD(*,2) for loading in the direction tangent
to the parallel circle (θ).

ILOAD(*,3) for loading in the direction perpendicular
to the tangent to the meridian (z).

ILOAD(*,4) for temperature at the shell exterior face.

ILOAD(*,5) for temperature at the shell interior face.

If ILOAD(*,K) = 0, no load of type K is applied.

If ILOAD(*,K) = 1, the applied load of type K is
constant along the meridian and to be specified at
one end of the element only.

If ILOAD(*,K) = 2, the applied load of type K varies
linearly along the meridian and is to be specified
at the two ends of the element.

If ILOAD(*,K) = 3, the applied load of type K
varies as a second degree function along the meridian
and is to be specified at the two ends of the element.

NOTE: Element loads are input in the element local coordinates.

W(I) : Magnitude of the load, at the points defined by $\frac{2\pi i}{\text{NHPL}}$ ($i = 0, 1, 2, \dots, \text{NHPL}-1$) along the circumference of the element, and for which Fourier expansion is required.

TYPE 8-C ELEMENT LOADING FOURIER COEFFICIENTS CARDS

(Format 8F10.0)

This type is required if NTL is equal to 4. Number of cards required, for each loaded element, is equal to $\frac{\text{NHL}}{8}$ for, and input in the order consistent with, each non-zero term in the corresponding row in ILOAD array.

10	20	30	40	50	60	70	80
AL(K)							
, K = 1, NHL							

AL(K) : Cosine coefficients of Fourier expansion for Harmonics 0, 1, 2, ..., NHL-1.

TYPE 9: NODAL LOADING CONTROL INPUT CARDS (Format I5)

One card for each loaded node (NJL cards)

5
J

J : Number of loaded node.

TYPE 10: NODAL LOADING CARDS

This type of card depends upon NTL and is classified as TYPE 10-A, TYPE 10-B and TYPE 10-C for NTL equal to 0, 1 or 2, and 3, respectively.

TYPE 10-A: NODAL SYMMETRICAL LOADING CARDS (Format (4F10.0))

This type is required if NTL is equal to zero. One card is required for each loaded node.

10	20	30	40
ANJL (II,1) , II = 1,4			

ANJL(II,1): Magnitude of the nodal load, in the global structure coordinates, in the following order.

II = 1, meridional couple, M_s , positive when rotating in the clockwise direction.

II = 2, force normal to the tangent to meridian at the corresponding node, S_s , positive in the outward direction from the axis of revolution.

II = 3, force in the direction tangent to the meridian, N_s , positive when directed downward parallel to the axis of revolution.

II = 4, force in the direction tangent to the parallel circle, T_s , positive when directed in the anticlockwise rotating direction around the structure.

NOTE: The sign convention of the nodal loads as defined above is equivalent to the stiffness matrix sign convention as described in Sect. 3.7.

W(I) : Magnitude of the nodal load, at the points defined by $\frac{2\pi i}{\text{NHPL}}$ ($i = 0, 1, 2, \dots, \text{NHPL} - 1$) along the circumference of the nodal circle, and for which Fourier expansion is required.

TYPE 10-C: NODAL LOADING FOURIER COEFFICIENTS CARDS

This type is required if NTL is equal to 3 and NJL is greater than 0. It consists of the following cards, for each loaded node:

- (1) Asymmetric nodal load control input card of the same type described in TYPE 10-B.

4	8	12	20
KLD(K) , K = 1, 4			

- (2) Nodal loading magnitude card (Format 8F10.0)
 Number of cards required is equal to $\frac{\text{NHL}}{8}$ for, and input in the order consistent with, each non-zero term in KLD.

10	20	30	40	50	60	70	80
AL (N), N = 1, NHL							

AL(N) : Cosine coefficients of FOURIER expansion for harmonics 0, 1, 2, ... NHL - 1.

LIMITATIONS

Number of elements NE	✗ 20
Number of nodes NJ	✗ 21
Number of integration points NP	✗ 51
Number of circumferential points NPCR	✗ 11
Number of harmonics NHL	✗ 20
Number of circumferential points at which loadings is specified NHPL	✗ 40
Full band width NHB	✗ 80
Total number of Fourier coefficients in the problem for elements loading, associated with either cosine or sine factor and defined by NHL x NEL	✗ 200
Total number of Fourier coefficients in the problem for nodal loadings, associated with both cosine and sine factor and defined by 8 x NHL x NJL	✗ 200
Number of points in a non-axisymmetrically loaded structure at which the final results are required, and which can be calculated as	

$$\sum_{i=1}^{NE} NS_i \times \left\{ \frac{(NP-1)}{NIP_i} + 1 \right\} \quad \text{✗ 200}$$

where NS_i = number of segments into which element i is subdivided and can be obtained by $\frac{L}{BETA} \sqrt{3(1 - \nu^2)/r^2 t^2}$ in which, L , is the element length, r , is the element radius, t , is the element thickness and ν is Poisson's ratio.

The above limitations are due to the dimension statements in the program SASHELL as listed in Appendix C. The dimension of the corresponding arrays may be modified to change these limitations.

Limitations on the theory employed in SASHELL are as follows (see Chapter 5).

- 1) RCOOR should not be specified as zero.
- 2) The length factor coefficient BETA should not be specified greater than 25.
- 3) The number of points of integration NP should not be less than 21 when BETA is specified less than 20, and not less than 31 when BETA is greater than 20 and less than 25.

APPENDIX C
PROGRAM LISTING

[illegible]


```

1  PR(2)=GEO(K1,2)
2  TRA(1)=GEO(KO,3)
3  TRA(2)=GEO(K1,3)
4  PR(3)=GEO(KO,4)
5  PR(4)=GEO(K1,4)
6  ST(1)=GEO(KO,5)
7  ST(2)=GEO(K1,5)
8  ST(3)=GEO(KO,6)
9  ST(4)=GEO(K1,6)
10  ZT(1)=GEO(KO,7)
11  ZT(2)=GEO(K1,7)
12  ZT(3)=GEO(KO,8)
13  ZT(4)=GEO(K1,8)
14  ZT(5)=GEO(KO,9)
15  ZT(6)=GEO(K1,9)
16  ZT(7)=GEO(KO,10)
17  ZT(8)=GEO(K1,10)
18  ZT(9)=GEO(KO,11)
19  ZT(10)=GEO(K1,11)
20  ZT(11)=GEO(KO,12)
21  ZT(12)=GEO(K1,12)
22  ZT(13)=GEO(KO,13)
23  ZT(14)=GEO(K1,13)
24  ZT(15)=GEO(KO,14)
25  ZT(16)=GEO(K1,14)
26  ZT(17)=GEO(KO,15)
27  ZT(18)=GEO(K1,15)
28  ZT(19)=GEO(KO,16)
29  ZT(20)=GEO(K1,16)
30  ZT(21)=GEO(KO,17)
31  ZT(22)=GEO(K1,17)
32  ZT(23)=GEO(KO,18)
33  ZT(24)=GEO(K1,18)
34  ZT(25)=GEO(KO,19)
35  ZT(26)=GEO(K1,19)
36  ZT(27)=GEO(KO,20)
37  ZT(28)=GEO(K1,20)
38  ZT(29)=GEO(KO,21)
39  ZT(30)=GEO(K1,21)
40  ZT(31)=GEO(KO,22)
41  ZT(32)=GEO(K1,22)
42  ZT(33)=GEO(KO,23)
43  ZT(34)=GEO(K1,23)
44  ZT(35)=GEO(KO,24)
45  ZT(36)=GEO(K1,24)
46  ZT(37)=GEO(KO,25)
47  ZT(38)=GEO(K1,25)
48  ZT(39)=GEO(KO,26)
49  ZT(40)=GEO(K1,26)
50  ZT(41)=GEO(KO,27)
51  ZT(42)=GEO(K1,27)
52  ZT(43)=GEO(KO,28)
53  ZT(44)=GEO(K1,28)
54  ZT(45)=GEO(KO,29)
55  ZT(46)=GEO(K1,29)
56  ZT(47)=GEO(KO,30)
57  ZT(48)=GEO(K1,30)
58  ZT(49)=GEO(KO,31)
59  ZT(50)=GEO(K1,31)
60  ZT(51)=GEO(KO,32)
61  ZT(52)=GEO(K1,32)
62  ZT(53)=GEO(KO,33)
63  ZT(54)=GEO(K1,33)
64  ZT(55)=GEO(KO,34)
65  ZT(56)=GEO(K1,34)
66  ZT(57)=GEO(KO,35)
67  ZT(58)=GEO(K1,35)
68  ZT(59)=GEO(KO,36)
69  ZT(60)=GEO(K1,36)
70  ZT(61)=GEO(KO,37)
71  ZT(62)=GEO(K1,37)
72  ZT(63)=GEO(KO,38)
73  ZT(64)=GEO(K1,38)
74  ZT(65)=GEO(KO,39)
75  ZT(66)=GEO(K1,39)
76  ZT(67)=GEO(KO,40)
77  ZT(68)=GEO(K1,40)
78  ZT(69)=GEO(KO,41)
79  ZT(70)=GEO(K1,41)
80  ZT(71)=GEO(KO,42)
81  ZT(72)=GEO(K1,42)
82  ZT(73)=GEO(KO,43)
83  ZT(74)=GEO(K1,43)
84  ZT(75)=GEO(KO,44)
85  ZT(76)=GEO(K1,44)
86  ZT(77)=GEO(KO,45)
87  ZT(78)=GEO(K1,45)
88  ZT(79)=GEO(KO,46)
89  ZT(80)=GEO(K1,46)
90  ZT(81)=GEO(KO,47)
91  ZT(82)=GEO(K1,47)
92  ZT(83)=GEO(KO,48)
93  ZT(84)=GEO(K1,48)
94  ZT(85)=GEO(KO,49)
95  ZT(86)=GEO(K1,49)
96  ZT(87)=GEO(KO,50)
97  ZT(88)=GEO(K1,50)
98  ZT(89)=GEO(KO,51)
99  ZT(90)=GEO(K1,51)
100 ZT(91)=GEO(KO,52)
101 ZT(92)=GEO(K1,52)
102 ZT(93)=GEO(KO,53)
103 ZT(94)=GEO(K1,53)
104 ZT(95)=GEO(KO,54)
105 ZT(96)=GEO(K1,54)
106 ZT(97)=GEO(KO,55)
107 ZT(98)=GEO(K1,55)
108 ZT(99)=GEO(KO,56)
109 ZT(100)=GEO(K1,56)
110 ZT(101)=GEO(KO,57)
111 ZT(102)=GEO(K1,57)
112 ZT(103)=GEO(KO,58)
113 ZT(104)=GEO(K1,58)
114 ZT(105)=GEO(KO,59)
115 ZT(106)=GEO(K1,59)
116 ZT(107)=GEO(KO,60)
117 ZT(108)=GEO(K1,60)
118 ZT(109)=GEO(KO,61)
119 ZT(110)=GEO(K1,61)
120 ZT(111)=GEO(KO,62)
121 ZT(112)=GEO(K1,62)
122 ZT(113)=GEO(KO,63)
123 ZT(114)=GEO(K1,63)
124 ZT(115)=GEO(KO,64)
125 ZT(116)=GEO(K1,64)
126 ZT(117)=GEO(KO,65)
127 ZT(118)=GEO(K1,65)
128 ZT(119)=GEO(KO,66)
129 ZT(120)=GEO(K1,66)
130 ZT(121)=GEO(KO,67)
131 ZT(122)=GEO(K1,67)
132 ZT(123)=GEO(KO,68)
133 ZT(124)=GEO(K1,68)
134 ZT(125)=GEO(KO,69)
135 ZT(126)=GEO(K1,69)
136 ZT(127)=GEO(KO,70)
137 ZT(128)=GEO(K1,70)
138 ZT(129)=GEO(KO,71)
139 ZT(130)=GEO(K1,71)
140 ZT(131)=GEO(KO,72)
141 ZT(132)=GEO(K1,72)
142 ZT(133)=GEO(KO,73)
143 ZT(134)=GEO(K1,73)
144 ZT(135)=GEO(KO,74)
145 ZT(136)=GEO(K1,74)
146 ZT(137)=GEO(KO,75)
147 ZT(138)=GEO(K1,75)
148 ZT(139)=GEO(KO,76)
149 ZT(140)=GEO(K1,76)
150 ZT(141)=GEO(KO,77)
151 ZT(142)=GEO(K1,77)
152 ZT(143)=GEO(KO,78)
153 ZT(144)=GEO(K1,78)
154 ZT(145)=GEO(KO,79)
155 ZT(146)=GEO(K1,79)
156 ZT(147)=GEO(KO,80)
157 ZT(148)=GEO(K1,80)
158 ZT(149)=GEO(KO,81)
159 ZT(150)=GEO(K1,81)
160 ZT(151)=GEO(KO,82)
161 ZT(152)=GEO(K1,82)
162 ZT(153)=GEO(KO,83)
163 ZT(154)=GEO(K1,83)
164 ZT(155)=GEO(KO,84)
165 ZT(156)=GEO(K1,84)
166 ZT(157)=GEO(KO,85)
167 ZT(158)=GEO(K1,85)
168 ZT(159)=GEO(KO,86)
169 ZT(160)=GEO(K1,86)
170 ZT(161)=GEO(KO,87)
171 ZT(162)=GEO(K1,87)
172 ZT(163)=GEO(KO,88)
173 ZT(164)=GEO(K1,88)
174 ZT(165)=GEO(KO,89)
175 ZT(166)=GEO(K1,89)
176 ZT(167)=GEO(KO,90)
177 ZT(168)=GEO(K1,90)
178 ZT(169)=GEO(KO,91)
179 ZT(170)=GEO(K1,91)
180 ZT(171)=GEO(KO,92)
181 ZT(172)=GEO(K1,92)
182 ZT(173)=GEO(KO,93)
183 ZT(174)=GEO(K1,93)
184 ZT(175)=GEO(KO,94)
185 ZT(176)=GEO(K1,94)
186 ZT(177)=GEO(KO,95)
187 ZT(178)=GEO(K1,95)
188 ZT(179)=GEO(KO,96)
189 ZT(180)=GEO(K1,96)
190 ZT(181)=GEO(KO,97)
191 ZT(182)=GEO(K1,97)
192 ZT(183)=GEO(KO,98)
193 ZT(184)=GEO(K1,98)
194 ZT(185)=GEO(KO,99)
195 ZT(186)=GEO(K1,99)
196 ZT(187)=GEO(KO,100)
197 ZT(188)=GEO(K1,100)
198 ZT(189)=GEO(KO,101)
199 ZT(190)=GEO(K1,101)
200 ZT(191)=GEO(KO,102)
201 ZT(192)=GEO(K1,102)
202 ZT(193)=GEO(KO,103)
203 ZT(194)=GEO(K1,103)
204 ZT(195)=GEO(KO,104)
205 ZT(196)=GEO(K1,104)
206 ZT(197)=GEO(KO,105)
207 ZT(198)=GEO(K1,105)
208 ZT(199)=GEO(KO,106)
209 ZT(200)=GEO(K1,106)
210 ZT(201)=GEO(KO,107)
211 ZT(202)=GEO(K1,107)
212 ZT(203)=GEO(KO,108)
213 ZT(204)=GEO(K1,108)
214 ZT(205)=GEO(KO,109)
215 ZT(206)=GEO(K1,109)
216 ZT(207)=GEO(KO,110)
217 ZT(208)=GEO(K1,110)
218 ZT(209)=GEO(KO,111)
219 ZT(210)=GEO(K1,111)
220 ZT(211)=GEO(KO,112)
221 ZT(212)=GEO(K1,112)
222 ZT(213)=GEO(KO,113)
223 ZT(2
```

```

421 IF(X.NE.L1) GO TO 56
422 PHR=PHR(L)
423 CALL GLTSR(I,PRINT,L,LT,NH,NP,PHR,SM,FS,FS)
424 56 CONTINUE
425 58 CONTINUE
426 C
427 C ASSEMBLE SEG. STP. MATRIX INTO *ASPP STP. *ASPPA
428 C
429 C
430 CALL STORE(I,K,NDOF,NP,LT,NHD,IDCO,SM,FS,SS,SHS)
431 100 CONTINUE
432 200 CONTINUE
433 RETURN
434 END
435 C
436 C
437 C SUBROUTINE STORE(I,K,NDOF,NP,LT,NHB,IDCO,SM,FS,SS,SHS)
438 C
439 C
440 IMPLICIT REAL*8(A-H,O-Z)
441 DIMENSION IDCO(20,10,2),SX(8,6),FS(6,2),SS(200,60),
442 * SHS(200,2),MH(8)
443 L1=IDCO(L,K,1)
444 L2=IDCO(L,K,2)
445 J1=(L1-1)*NDOF
446 J2=(L2-1)*NDOF
447 DO 60 JJ=1,NDOF
448 JJ=JJ+NDOF
449 MH(JJ)=J1+JJ
450 MH(J2)=J2+JJ
451 CONTINUE
452 DO 61 J=1,NP
453 JJ=MH(J)
454 DO 61 I=1,NP
455 LL=MH(I)-JJ+NB
456 SS(JJ,LL)=SS(JJ,LL)+SH(J,I)
457 CONTINUE
458 C
459 C ASSEMBLE RIGHT HAND SIDE VECTOR
460 C
461 DO 62 I=1,NT
462 DO 62 J=1,NDOF
463 JA=J1+J
464 JB=J2+J
465 JN=J+NDOF
466 SHS(JA,LL)=SHS(JA,LL)-FS(J,I)
467 SHS(JB,LL)=SHS(JB,LL)-FS(JN,I)
468 CONTINUE
469 RETURN
470 END
471 C
472 C
473 C SUBROUTINE BOUNDC(NB,NJ,NDOF,LT,NHB,NED,NC,ACON,EDF,
474 * DSP,SS,RHS)
475 C
476 C
477 IMPLICIT REAL*8(A-H,O-Z)
478 DIMENSION NC(20,2),ACON(20,2),IDF(21,6),DTP(21,4),
479 * SS(200,80),RHS(200,2)
480 NB=NB+1

```


[illegible]


```

1 0 14.0)
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167
168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217
218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245
246
247
248
249
250
251
252
253
254
255
256
257
258
259
260
261
262
263
264
265
266
267
268
269
270
271
272
273
274
275
276
277
278
279
280
281
282
283
284
285
286
287
288
289
290
291
292
293
294
295
296
297
298
299
300
301
302
303
304
305
306
307
308
309
310
311
312
313
314
315
316
317
318
319
320
321
322
323
324
325
326
327
328
329
330
331
332
333
334
335
336
337
338
339
340
341
342
343
344
345
346
347
348
349
350
351
352
353
354
355
356
357
358
359
360
361
362
363
364
365
366
367
368
369
370
371
372
373
374
375
376
377
378
379
380
381
382
383
384
385
386
387
388
389
390
391
392
393
394
395
396
397
398
399
400
401
402
403
404
405
406
407
408
409
410
411
412
413
414
415
416
417
418
419
420
421
422
423
424
425
426
427
428
429
430
431
432
433
434
435
436
437
438
439
440
441
442
443
444
445
446
447
448
449
450
451
452
453
454
455
456
457
458
459
460
461
462
463
464
465
466
467
468
469
470
471
472
473
474
475
476
477
478
479
480
481
482
483
484
485
486
487
488
489
490
491
492
493
494
495
496
497
498
499
500
501
502
503
504
505
506
507
508
509
510
511
512
513
514
515
516
517
518
519
520
521
522
523
524
525
526
527
528
529
530
531
532
533
534
535
536
537
538
539
540
541
542
543
544
545
546
547
548
549
550
551
552
553
554
555
556
557
558
559
560
561
562
563
564
565
566
567
568
569
570
571
572
573
574
575
576
577
578
579
580
581
582
583
584
585
586
587
588
589
590
591
592
593
594
595
596
597
598
599
600
601
602
603
604
605
606
607
608
609
610
611
612
613
614
615
616
617
618
619
620
621
622
623
624
625
626
627
628
629
630
631
632
633
634
635
636
637
638
639
640
641
642
643
644
645
646
647
648
649
650
651
652
653
654
655
656
657
658
659
660
661
662
663
664
665
666
667
668
669
670
671
672
673
674
675
676
677
678
679
680
681
682
683
684
685
686
687
688
689
690
691
692
693
694
695
696
697
698
699
700
701
702
703
704
705
706
707
708
709
710
711
712
713
714
715
716
717
718
719
720
721
722
723
724
725
726
727
728
729
730
731
732
733
734
735
736
737
738
739
740
741
742
743
744
745
746
747
748
749
750
751
752
753
754
755
756
757
758
759
760
761
762
763
764
765
766
767
768
769
770
771
772
773
774
775
776
777
778
779
780
781
782
783
784
785
786
787
788
789
790
791
792
793
794
795
796
797
798
799
800
801
802
803
804
805
806
807
808
809
810
811
812
813
814
815
816
817
818
819
820
821
822
823
824
825
826
827
828
829
830
831
832
833
834
835
836
837
838
839
840
841
842
843
844
845
846
847
848
849
850
851
852
853
854
855
856
857
858
859
860
861
862
863
864
865
866
867
868
869
870
871
872
873
874
875
876
877
878
879
880
881
882
883
884
885
886
887
888
889
890
891
892
893
894
895
896
897
898
899
900
901
902
903
904
905
906
907
908
909
910
911
912
913
914
915
916
917
918
919
920
921
922
923
924
925
926
927
928
929
930
931
932
933
934
935
936
937
938
939
940
941
942
943
944
945
946
947
948
949
950
951
952
953
954
955
956
957
958
959
960
961
962
963
964
965
966
967
968
969
970
971
972
973
974
975
976
977
978
979
980
981
982
983
984
985
986
987
988
989
990
991
992
993
994
995
996
997
998
999
1000
1001
1002
1003
1004
1005
1006
1007
1008
1009
1010
1011
1012
1013
1014
1015
1016
1017
1018
1019
1020
1021
1022
1023
1024
1025
1026
1027
1028
1029
1030
1031
1032
1033
1034
1035
1036
1037
1038
10
```

[illegible]


```

361 K2=K1+1
362 READ(5,1100) (ACEL(KK),KK=K1,K2)
363 J=0
364 WRITE(6,2101) L,K,KL
365 DO 15 KK=K1,K2
366 J=J+1
367 WRITE(6,2103) L,K,KL
368 WRITE(6,2102) J,ACEL(KK)
369 CONTINUE
370 DO 20 CONTINUE
371 C
372 GO TO 200
373 CONTINUE
374 KL=ACEL/2
375 KL=K1+1
376 DO 30 I=1,NEL
377 L=I*(I+1)
378 DO 40 KK=1,5
379 ACCEL(KK)=L/2
380 IF (K2.EQ.0) GO TO 30
381 DO 40 J=1,NHPL
382 IF (K1.EQ.1) READ(J,GT.1) GO TO 28
383 IF (K1.EQ.2) GO TO 23
384 IF (K1.EQ.3) GO TO 23
385 READ(5,1400) (N(KK),KK=1,NHPL)
386 CALL FORN1(N,KL,ML,AL,BL)
387 IF (K1.EQ.3) READ(6,1400) (AL(JJ),JJ=1,NHL)
388 CONTINUE
389 K1=K1+1
390 K2=K2+1
391 K3=0
392 IF (K.EQ.2) GO TO 24
393 DO 35 KK=K1,K2
394 ACCEL(KK)=AL(K3)
395 IF (K1.EQ.1) GO TO 27
396 K3=0
397 DO 36 KK=K1,K2
398 ACCEL(KK)=BL(K3)
399 GO TO 27
400 C
401 DO 35 KK=K1,K2
402 ACCEL(KK)=AL(K3)
403 IF (K1.EQ.1) GO TO 27
404 K3=0
405 DO 36 KK=K1,K2
406 ACCEL(KK)=BL(K3)
407 CONTINUE
408 ACCEL(KK)=BL(K3)
409 CONTINUE
410 WRITE(6,2102) J,ACEL(KK),KK=K1,K2
411 IF (K1.EQ.1) GO TO 40
412 WRITE(6,2202) J,(BCEL(KK),KK=K1,K2)
413 CONTINUE
414 DO 30 CONTINUE
415 C
416 CONTINUE
417 IF (K1.EQ.2) RETURN
418 WRITE(6,2101)
419 DO 150 I=1,NJ
420 IACEL(I)=0

```

```

1021 DO 155 I=1,NJL
1022 READ(5,2700) J
1023 IACEL(I)=1
1024 CONTINUE
1025 IF (N1L.NE.0) GO TO 171
1026 N34=N3*4
1027 DO 151 J=1,NJ4
1028 IACEL(J,1)=0.0
1029 DO 170 I=1,NJ
1030 IF (IACEL(I).EQ.0) GO TO 170
1031 IACEL(I)=4
1032 I1=IACEL-3
1033 N=1
1034 NH=0
1035 READ(5,1600) (ANJL(I1,N),I1=1,N,NH)
1036 WRITE(6,2700) I
1037 WRITE(6,2720) NH,(ANJL(I1,N),I1=1,N,NH)
1038 CONTINUE
1039 RETURN
1040 171 NL=NHPL/2
1041 NL=NL-1
1042 N38=N3*8
1043 DO 210 N=1,NHL
1044 DO 210 J=1,N38
1045 IACEL(J,N)=0.0
1046 DO 250 I=1,NJ
1047 IF (IACEL(I).EQ.0) GO TO 250
1048 READ(5,1650) (KLD(S),K=1,4)
1049 INB=I*8
1050 IN=IN*7
1051 DO 180 K=1,4
1052 IF (KLD(K).EQ.0) GO TO 180
1053 IF (N1L.EQ.3) GO TO 160
1054 READ(5,1400) (N(KK),KK=1,NHPL)
1055 CALL FORN1(N,KL,ML,AL,BL)
1056 IF (N1L.EQ.3) READ(5,1400) (AL(KK),KK=1,NHL)
1057 DO 180 N=1,NHL
1058 IF (K.EQ.4) GO TO 181
1059 K1=I1+N*4-1
1060 K2=K1+4
1061 GO TO 182
1062 K1=I1+N*4-1
1063 K1=K2+4
1064 ANJL(K1,N)=AL(N)
1065 IF (N1L.EQ.3) GO TO 180
1066 ANJL(K2,N)=BL(N)
1067 CONTINUE
1068 WRITE(6,2700) I
1069 DO 190 N=1,NHL
1070 NH=N+1
1071 WRITE(6,2720) NH,(ANJL(K,N),K=1,N,NH)
1072 CONTINUE
1073 DO 250 CONTINUE
1074 RETURN
1075 C
1076 C
1077 C
1078 C
1079 C
1080 C
1001 FORMAT(6I5)
1100 FORMAT(2F10.0)
1400 FORMAT(12F10.0)

```


[illegible]

```

1621 F(J1,K)=F(J1,K)+B*F(J3,K)
1622 F(J3,K)=F(J3,K)*C
1623
1624
1625
1626
1627
1628
1629
1630
1631
1632
1633
1634
1635
1636
1637
1638
1639
1640
1641
1642
1643
1644
1645
1646
1647
1648
1649
1650
1651
1652
1653
1654
1655
1656
1657
1658
1659
1660
1661
1662
1663
1664
1665
1666
1667
1668
1669
1670
1671
1672
1673
1674
1675
1676
1677
1678
1679
1680
1681
1682
1683
1684
1685
1686
1687
1688
1689
1690
1691
1692
1693
1694
1695
1696
1697
1698
1699
1700
1701
1702
1703
1704
1705
1706
1707
1708
1709
1710
1711
1712
1713
1714
1715
1716
1717
1718
1719
1720
1721
1722
1723
1724
1725
1726
1727
1728
1729
1730
1731
1732
1733
1734
1735
1736
1737
1738
1739
1740
1741
1742
1743
1744
1745
1746
1747
1748
1749
1750
1751
1752
1753
1754
1755
1756
1757
1758
1759
1760
1761
1762
1763
1764
1765
1766
1767
1768
1769
1770
1771
1772
1773
1774
1775
1776
1777
1778
1779
1780
1781
1782
1783
1784
1785
1786
1787
1788
1789
1790
1791
1792
1793
1794
1795
1796
1797
1798
1799
1800
1801
1802
1803
1804
1805
1806
1807
1808
1809
1810
1811
1812
1813
1814
1815
1816
1817
1818
1819
1820
1821
1822
1823
1824
1825
1826
1827
1828
1829
1830
1831
1832
1833
1834
1835
1836
1837
1838
1839
1840
1841
1842
1843
1844
1845
1846
1847
1848
1849
1850
1851
1852
1853
1854
1855
1856
1857
1858
1859
1860
1861
1862
1863
1864
1865
1866
1867
1868
1869
1870
1871
1872
1873
1874
1875
1876
1877
1878
1879
1880
1881
1882
1883
1884
1885
1886
1887
1888
1889
1890
1891
1892
1893
1894
1895
1896
1897
1898
1899
1900
1901
1902
1903
1904
1905
1906
1907
1908
1909
1910
1911
1912
1913
1914
1915
1916
1917
1918
1919
1920
1921
1922
1923
1924
1925
1926
1927
1928
1929
1930
1931
1932
1933
1934
1935
1936
1937
1938
1939
1940
1941
1942
1943
1944
1945
1946
1947
1948
1949
1950
1951
1952
1953
1954
1955
1956
1957
1958
1959
1960
1961
1962
1963
1964
1965
1966
1967
1968
1969
1970
1971
1972
1973
1974
1975
1976
1977
1978
1979
1980
1981
1982
1983
1984
1985
1986
1987
1988
1989
1990
1991
1992
1993
1994
1995
1996
1997
1998
1999
2000
2001
2002
2003
2004
2005
2006
2007
2008
2009
2010
2011
2012
2013
2014
2015
2016
2017
2018
2019
2020
2021
2022
2023
2024
2025
2026
2027
2028
2029
2030
2031
2032
2033
2034
2035
2036
2037
2038
2039
2040
2041
2042
2043
2044
2045
2046
2047
2048
2049
2050
2051
2052
2053
2054
2055
2056
2057
2058
2059
2060
2061
2062
2063
2064
2065
2066
2067
2068
2069
2070
2071
2072
2073
2074
2075
2076
2077
2078
2079
2080
2081
2082
2083
2084
2085
2086
2087
2088
2089
2090
2091
2092
2093
2094
2095
2096
2097
2098
2099
2100
2101
2102
2103
2104
2105
2106
2107
2108
2109
2110
2111
2112
2113
2114
2115
2116
2117
2118
2119
2120
2121
2122
2123
2124
2125
2126
2127
2128
2129
2130
2131
2132
2133
2134
2135
2136
2137
2138
2139
2140
2141
2142
2143
2144
2145
2146
2147
2148
2149
2150
2151
2152
2153
2154
2155
2156
2157
2158
2159
2160
2161
2162
2163
2164
2165
2166
2167
2168
2169
2170
2171
2172
2173
2174
2175
2176
2177
2178
2179
2180
2181
2182
2183
2184
2185
2186
2187
2188
2189
2190
2191
2192
2193
2194
2195
2196
2197
2198
2199
2200
2201
2202
2203
2204
2205
2206
2207
2208
2209
2210
2211
2212
2213
2214
2215
2216
2217
2218
2219
2220
2221
2222
2223
2224
2225
2226
2227
2228
2229
2230
2231
2232
2233
2234
2235
2236
2237
2238
2239
2240
2241
2242
2243
2244
2245
2246
2247
2248
2249
2250
2251
2252
2253
2254
2255
2256
2257
2258
2259
2260
2261
2262
2263
2264
2265
2266
2267
2268
2269
2270
2271
2272
2273
2274
2275
2276
2277
2278
2279
2280
2281
2282
2283
2284
2285
2286
2287
2288
2289
2290
2291
2292
2293
2294
2295
2296
2297
2298
2299
2300
2301
2302
2303
2304
2305
2306
2307
2308
2309
2310
2311
2312
2313
2314
2315
2316
2317
2318
2319
2320
2321
2322
2323
2324
2325
2326
2327
2328
2329
2330
2331
2332
2333
2334
2335
2336
2337
2338
2339
2340
2341
2342
2343
2344
2345
2346
2347
2348
2349
2350
2351
2352
2353
2354
2355
2356
2357
2358
2359
2360
2361
2362
2363
2364
2365
2366
2367
2368
2369
2370
2371
2372
2373
2374
2375
2376
2377
2378
2379
2380
2381
2382
2383
2384
2385
2386
2387
2388
2389
2390
2391
2392
2393
2394
2395
2396
2397
2398
2399
2400
2401
2402
2403
2404
2405
2406
2407
2408
2409
2410
2411
2412
2413
2414
2415
2416
2417
2418
2419
2420
2421
2422
2423
2424
2425
2426
2427
2428
2429
2430
2431
2432
2433

```



```

1801 DO 41 I=1,11
1802   1  EX(I)=EXP(I,I)*IX(I)
1803   CALL PLUGGE(I,I,IX,IX,N5,X15,X35,PK,E,U,TK,R2,SA)
1804   CALL KPROD(SA,TEP,TDEP,8,10,NF,NP1,LT)
1805   DO 6 K=1,LT
1806     DO 7 I=1,NF
1807       EX(I,K)=SJ*TDPP(I,K)
1808     DO 7 K=1,LT
1809     DO 7 I=1,NF
1810     TEP(I,K)=VI(I,K)*BK(I,K)/2.
1811   CALL KPROD(SA,TEP,TDEP,8,10,NF,NP1,LT)
1812   DO 8 K=1,LT
1813     DO 8 I=1,NF
1814     EX(I,K)=SJ*TDPP(I,K)
1815     DO 8 K=1,LT
1816     DO 8 I=1,NF
1817     TEP(I,K)=VI(I,K)+CX(I,K)
1818   CALL KPROD(SA,TEP,TDEP,8,10,NF,NP1,LT)
1819   DO 9 K=1,LT
1820     DO 9 I=1,NF
1821     EX(I,K)=SJ*TDPP(I,K)
1822     DO 9 K=1,LT
1823     DO 9 I=1,NF
1824     TEP(I,K)=VI(I,K)+CX(I,K)
1825   CALL KPROD(SA,TEP,TDEP,8,10,NF,NP1,LT)
1826   DO 10 K=1,LT
1827     DO 10 I=1,NF
1828     EX(I,K)=SJ*TDPP(I,K)
1829     DO 10 K=1,LT
1830     DO 10 I=1,NF
1831     TEP(I,K)=VI(I,K)+CX(I,K)
1832   CALL KPROD(SA,TEP,TDEP,8,10,NF,NP1,LT)
1833   DO 11 K=1,LT
1834     DO 11 I=1,NF
1835     EX(I,K)=SJ*TDPP(I,K)
1836     DO 11 K=1,LT
1837     DO 11 I=1,NF
1838     TEP(I,K)=VI(I,K)+CX(I,K)
1839   CALL KPROD(SA,TEP,TDEP,8,10,NF,NP1,LT)
1840   DO 12 K=1,LT
1841     DO 12 I=1,NF
1842     EX(I,K)=SJ*TDPP(I,K)
1843     DO 12 K=1,LT
1844     DO 12 I=1,NF
1845     TEP(I,K)=VI(I,K)+CX(I,K)
1846   CALL KPROD(SA,TEP,TDEP,8,10,NF,NP1,LT)
1847   DO 13 K=1,LT
1848     DO 13 I=1,NF
1849     EX(I,K)=SJ*TDPP(I,K)
1850     DO 13 K=1,LT
1851     DO 13 I=1,NF
1852     TEP(I,K)=VI(I,K)+CX(I,K)
1853   CALL KPROD(SA,TEP,TDEP,8,10,NF,NP1,LT)
1854   DO 14 K=1,LT
1855     DO 14 I=1,NF
1856     EX(I,K)=SJ*TDPP(I,K)
1857     DO 14 K=1,LT
1858     DO 14 I=1,NF
1859     TEP(I,K)=VI(I,K)+CX(I,K)
1860   CALL KPROD(SA,TEP,TDEP,8,10,NF,NP1,LT)
1861   DO 15 K=1,LT
1862     DO 15 I=1,NF
1863     EX(I,K)=SJ*TDPP(I,K)
1864     DO 15 K=1,LT
1865     DO 15 I=1,NF
1866     TEP(I,K)=VI(I,K)+CX(I,K)
1867   CALL KPROD(SA,TEP,TDEP,8,10,NF,NP1,LT)
1868   DO 16 K=1,LT
1869     DO 16 I=1,NF
1870     EX(I,K)=SJ*TDPP(I,K)
1871     DO 16 K=1,LT
1872     DO 16 I=1,NF
1873     TEP(I,K)=VI(I,K)+CX(I,K)
1874   CALL KPROD(SA,TEP,TDEP,8,10,NF,NP1,LT)
1875   DO 17 K=1,LT
1876     DO 17 I=1,NF
1877     EX(I,K)=SJ*TDPP(I,K)
1878     DO 17 K=1,LT
1879     DO 17 I=1,NF
1880     TEP(I,K)=VI(I,K)+CX(I,K)
1881   CALL KPROD(SA,TEP,TDEP,8,10,NF,NP1,LT)
1882   DO 18 K=1,LT
1883     DO 18 I=1,NF
1884     EX(I,K)=SJ*TDPP(I,K)
1885     DO 18 K=1,LT
1886     DO 18 I=1,NF
1887     TEP(I,K)=VI(I,K)+CX(I,K)
1888   CALL KPROD(SA,TEP,TDEP,8,10,NF,NP1,LT)
1889   DO 19 K=1,LT
1890     DO 19 I=1,NF
1891     EX(I,K)=SJ*TDPP(I,K)
1892     DO 19 K=1,LT
1893     DO 19 I=1,NF
1894     TEP(I,K)=VI(I,K)+CX(I,K)
1895   CALL KPROD(SA,TEP,TDEP,8,10,NF,NP1,LT)
1896   DO 20 K=1,LT
1897     DO 20 I=1,NF
1898     EX(I,K)=SJ*TDPP(I,K)
1899     DO 20 K=1,LT
1900     DO 20 I=1,NF
1901     TEP(I,K)=VI(I,K)+CX(I,K)
1902   CALL KPROD(SA,TEP,TDEP,8,10,NF,NP1,LT)
1903   DO 21 K=1,LT
1904     DO 21 I=1,NF
1905     EX(I,K)=SJ*TDPP(I,K)
1906     DO 21 K=1,LT
1907     DO 21 I=1,NF
1908     TEP(I,K)=VI(I,K)+CX(I,K)
1909   CALL KPROD(SA,TEP,TDEP,8,10,NF,NP1,LT)
1910   DO 22 K=1,LT
1911     DO 22 I=1,NF
1912     EX(I,K)=SJ*TDPP(I,K)
1913     DO 22 K=1,LT
1914     DO 22 I=1,NF
1915     TEP(I,K)=VI(I,K)+CX(I,K)
1916   CALL KPROD(SA,TEP,TDEP,8,10,NF,NP1,LT)
1917   DO 23 K=1,LT
1918     DO 23 I=1,NF
1919     EX(I,K)=SJ*TDPP(I,K)
1920     DO 23 K=1,LT
1921     DO 23 I=1,NF
1922     TEP(I,K)=VI(I,K)+CX(I,K)
1923   CALL KPROD(SA,TEP,TDEP,8,10,NF,NP1,LT)
1924   DO 24 K=1,LT
1925     DO 24 I=1,NF
1926     EX(I,K)=SJ*TDPP(I,K)
1927     DO 24 K=1,LT
1928     DO 24 I=1,NF
1929     TEP(I,K)=VI(I,K)+CX(I,K)
1930   CALL KPROD(SA,TEP,TDEP,8,10,NF,NP1,LT)
1931   DO 25 K=1,LT
1932     DO 25 I=1,NF
1933     EX(I,K)=SJ*TDPP(I,K)
1934     DO 25 K=1,LT
1935     DO 25 I=1,NF
1936     TEP(I,K)=VI(I,K)+CX(I,K)
1937   CALL KPROD(SA,TEP,TDEP,8,10,NF,NP1,LT)
1938   DO 26 K=1,LT
1939     DO 26 I=1,NF
1940     EX(I,K)=SJ*TDPP(I,K)
1941     DO 26 K=1,LT
1942     DO 26 I=1,NF
1943     TEP(I,K)=VI(I,K)+CX(I,K)
1944   CALL KPROD(SA,TEP,TDEP,8,10,NF,NP1,LT)
1945   DO 27 K=1,LT
1946     DO 27 I=1,NF
1947     EX(I,K)=SJ*TDPP(I,K)
1948     DO 27 K=1,LT
1949     DO 27 I=1,NF
1950     TEP(I,K)=VI(I,K)+CX(I,K)
1951   CALL KPROD(SA,TEP,TDEP,8,10,NF,NP1,LT)
1952   DO 28 K=1,LT
1953     DO 28 I=1,NF
1954     EX(I,K)=SJ*TDPP(I,K)
1955     DO 28 K=1,LT
1956     DO 28 I=1,NF
1957     TEP(I,K)=VI(I,K)+CX(I,K)
1958   CALL KPROD(SA,TEP,TDEP,8,10,NF,NP1,LT)
1959   DO 29 K=1,LT
1960     DO 29 I=1,NF
1961     EX(I,K)=SJ*TDPP(I,K)
1962     DO 29 K=1,LT
1963     DO 29 I=1,NF
1964     TEP(I,K)=VI(I,K)+CX(I,K)
1965   CALL KPROD(SA,TEP,TDEP,8,10,NF,NP1,LT)
1966   DO 30 K=1,LT
1967     DO 30 I=1,NF
1968     EX(I,K)=SJ*TDPP(I,K)
1969     DO 30 K=1,LT
1970     DO 30 I=1,NF
1971     TEP(I,K)=VI(I,K)+CX(I,K)
1972   CALL KPROD(SA,TEP,TDEP,8,10,NF,NP1,LT)
1973   DO 31 K=1,LT
1974     DO 31 I=1,NF
1975     EX(I,K)=SJ*TDPP(I,K)
1976     DO 31 K=1,LT
1977     DO 31 I=1,NF
1978     TEP(I,K)=VI(I,K)+CX(I,K)
1979   CALL KPROD(SA,TEP,TDEP,8,10,NF,NP1,LT)
1980   DO 32 K=1,LT
1981     DO 32 I=1,NF
1982     EX(I,K)=SJ*TDPP(I,K)
1983     DO 32 K=1,LT
1984     DO 32 I=1,NF
1985     TEP(I,K)=VI(I,K)+CX(I,K)
1986   CALL KPROD(SA,TEP,TDEP,8,10,NF,NP1,LT)
1987   DO 33 K=1,LT
1988     DO 33 I=1,NF
1989     EX(I,K)=SJ*TDPP(I,K)
1990     DO 33 K=1,LT
1991     DO 33 I=1,NF
1992     TEP(I,K)=VI(I,K)+CX(I,K)
1993   CALL KPROD(SA,TEP,TDEP,8,10,NF,NP1,LT)
1994   DO 34 K=1,LT
1995     DO 34 I=1,NF
1996     EX(I,K)=SJ*TDPP(I,K)
1997     DO 34 K=1,LT
1998     DO 34 I=1,NF
1999     TEP(I,K)=VI(I,K)+CX(I,K)
2000   CALL KPROD(SA,TEP,TDEP,8,10,NF,NP1,LT)
2001   DO 35 K=1,LT
2002     DO 35 I=1,NF
2003     EX(I,K)=SJ*TDPP(I,K)
2004     DO 35 K=1,LT
2005     DO 35 I=1,NF
2006     TEP(I,K)=VI(I,K)+CX(I,K)
2007   CALL KPROD(SA,TEP,TDEP,8,10,NF,NP1,LT)
2008   DO 36 K=1,LT
2009     DO 36 I=1,NF
2010     EX(I,K)=SJ*TDPP(I,K)
2011     DO 36 K=1,LT
2012     DO 36 I=1,NF
2013     TEP(I,K)=VI(I,K)+CX(I,K)
2014   CALL KPROD(SA,TEP,TDEP,8,10,NF,NP1,LT)
2015   DO 37 K=1,LT
2016     DO 37 I=1,NF
2017     EX(I,K)=SJ*TDPP(I,K)
2018     DO 37 K=1,LT
2019     DO 37 I=1,NF
2020     TEP(I,K)=VI(I,K)+CX(I,K)
2021   CALL KPROD(SA,TEP,TDEP,8,10,NF,NP1,LT)
2022   DO 38 K=1,LT
2023     DO 38 I=1,NF
2024     EX(I,K)=SJ*TDPP(I,K)
2025     DO 38 K=1,LT
2026     DO 38 I=1,NF
2027     TEP(I,K)=VI(I,K)+CX(I,K)
20
```


APPENDIX D

DATA FILES AND SAMPLE OUTPUT

OF EXAMPLE APPLICATIONS

NATURAL DRAFT HYPERBOLOID COOLING TOWER; WIND LOAD :

1,2198,0,25.0,
 5,6,4000.0,15,15,0.0,
 170.0,35.77,
 2,10.0,54.74,
 3,116.67,85.62,
 4,223.33,105.7,
 5,330.0,136.8,
 6,355.0,145.0,0,1,1,1,
 1,3,1,2,2,2,0,0,3,
 82.5,204.1,60.0,0.0,
 2,3,2,3,2,0,5,0,3,
 82.5,204.1,60.0,0.0,
 3,3,3,4,2,0,5,0,3,
 82.5,204.1,60.0,0.0,
 4,3,4,5,2,0,5,0,5,
 82.5,204.1,60.0,0.0,
 5,3,3,6,2,0,5,2,5,
 82.5,204.1,60.0,0.0,
 5,0,8,2,24,1,
 1,0,0,2,0,0,
 2,0,0,2,0,0,
 3,0,0,2,0,0,
 4,0,0,2,0,0,
 5,0,0,2,0,0,
 -.0530,-.0424,-.0105,.0265,.0636,.0689,.0477,.0212,
 .0212,.0212,.0212,.0212,.0212,.0212,.0212,.0212,
 .0212,.0212,.0477,.0689,.0636,.0265,-.0105,-.0424,
 -.0526,-.0421,-.0105,.0263,.0632,.0684,.0474,.0210,
 .0210,.0210,.0210,.0210,.0210,.0210,.0210,.0210,
 .0210,.0210,.0474,.0684,.0632,.0263,-.0105,-.0421,
 -.0526,-.0421,-.0105,.0263,.0632,.0684,.0474,.0210,
 .0210,.0210,.0210,.0210,.0210,.0210,.0210,.0210,
 .0210,.0210,.0474,.0684,.0632,.0263,-.0105,-.0421,
 -.0478,-.0383,-.0096,.0239,.0574,.0622,.0430,.0191,
 .0191,.0191,.0191,.0191,.0191,.0191,.0191,.0191,
 .0191,.0191,.0430,.0622,.0574,.0239,-.0096,-.0383,
 -.0478,-.0383,-.0096,.0239,.0574,.0622,.0430,.0191,
 .0191,.0191,.0191,.0191,.0191,.0191,.0191,.0191,
 .0191,.0191,.0430,.0622,.0574,.0239,-.0096,-.0383,
 -.0414,-.0331,-.0083,.0207,.0497,.0538,.0372,.0165,
 .0165,.0165,.0165,.0165,.0165,.0165,.0165,.0165,
 .0165,.0165,.0372,.0538,.0497,.0207,-.0083,-.0331,
 -.0414,-.0331,-.0083,.0207,.0497,.0538,.0372,.0165,
 .0165,.0165,.0165,.0165,.0165,.0165,.0165,.0165,
 .0165,.0165,.0372,.0538,.0497,.0207,-.0083,-.0331,
 -.0304,-.0243,-.0061,.0152,.0365,.0395,.0273,.0122,
 .0122,.0122,.0122,.0122,.0122,.0122,.0122,.0122,
 .0122,.0122,.0273,.0395,.0365,.0152,-.0061,-.0243,
 -.0304,-.0243,-.0061,.0152,.0365,.0395,.0273,.0122,
 .0122,.0122,.0122,.0122,.0122,.0122,.0122,.0122,
 .0122,.0122,.0273,.0395,.0365,.0152,-.0061,-.0243,
 -.0256,-.0203,-.0051,.0127,.0307,.0332,.0233,.0102,
 .0102,.0102,.0102,.0102,.0102,.0102,.0102,.0102,
 .0102,.0102,.0233,.0332,.0307,.0127,-.0051,-.0203,


```

1  NATURAL DRAFT HYPERBOLOID COOLING TOWER; DEAD LOAD
2  2,21,1,1,25.0,
3  3,4,576000.0,.15,.15,0.0,
4  1,0,0,86.0,
5  2,10.0,84.94,
6  3,330.0,136.81,
7  4,355.0,145.0,0,1,1,1,
8  1,5,1,2,1,2.0,0.5,
9  82.5,204.1,60.0,0.0,
10 2,5,2,3,1,0.5,0.5,
11 82.5,204.1,60.0,0.0,
12 3,5,3,4,1,0.5,2.5,
13 82.5,204.1,60.0,0.0,
14 0,0,0,0,
15 PINCHED CYLINDER "LINE CIRCUMFERENTIAL LOAD"
16 2,41,1,0,25.0,
17 2,3,4320000.,.3,.15,
18 1,0,0,4.0,1,1,1,1,
19 2,10.0,4.,0,0,0,0,
20 3,20.0,4.,1,1,1,1,
21 1,1,1,2,1,0.1033,
22 0.0,
23 2,1,2,3,1,0.1033,
24 0.0,
25 0,1,0,0,0,0,
26 2,
27 0.0,-1.0,0.0,0.0,
28 PINCHED CYLINDER "2 CONCENTRATED LOADS"
29 2,41,1,0,25.0,
30 2,3,4320000.,.3,.15,
31 1,0,0,4.0,1,1,1,1,
32 2,10.0,4.,0,0,0,0,
33 3,20.0,4.,1,1,1,1,
34 1,1,1,2,1,0.1033,
35 0.0,
36 2,1,2,3,1,0.1033,
37 0.0,
38 0,1,18,2,36,2,
39 2,
40 0,1,0,0,
41 -1.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,
42 0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,
43 0.0,0.0,-1.0,0.0,0.0,0.0,0.0,0.0,0.0,
44 0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,

```


THICKENED CYLINDER *LINE LIFECOMPENSENTIAL LOAD*

*** ANALYSIS DATA ***

ANALYSIS
N = 41
M = 1
P = 0
P/A = 25.000

*** STRUCTURAL DATA ***

NUMBER OF ELEMENTS = 2
NUMBER OF JOINTS = 3
ELEMENT MODULUS OF ELASTICITY = 0.4320E+07
ELEMENT DENSITY = 0.3000E+00
ELEMENT THERMAL EXPANSION = 0.1500E+00
ELEMENT THERMAL COEFFICIENT = 0.0

*** MESH DATA ***

NO	EXCOR	RCORR	R	W	V	U
1	0.0	4.0000	1	1	1	1
2	10.0000	4.0000	0	0	0	0
3	20.0000	4.0000	1	1	1	1

*** ELEMENT DATA ***

EL	IN	TH	EN	NP1	TH1	TH2	EC1	EC2	HP1	HP2	HP3	UNW	FR	E	TCORF
1	1	1	2	1	0.1033	0.1033	0.0	0.0	0.0	0.0	0.0	0.15000.3000	0.4320E+07	0.0	
2	1	1	2	3	0.1033	0.1033	0.0	0.0	0.0	0.0	0.0	0.15000.3000	0.4320E+07	0.0	

*** LOADING CALCULATIONS ***

NUMBER OF JOINTS ELEMENTS = 0
NUMBER OF JOINTS JOINTS = 1
NUMBER OF JOINTS TO FIT = 1
NUMBER OF JOINTS TO FIT = 0
NUMBER OF JOINTS TO FIT = 0
NUMBER OF JOINTS TO FIT = 0
NUMBER OF JOINTS TO FIT = 1

STREET LIGHTS

J. JUNE

*** CONNECTIVITY ARRAY ***

ELEMENT	SEGMENT	TOP NODE	BOT NODE
1	1	1	2
1	1	1	3

COORDINATE SYSTEM
ELEMENT ***

1

1

```

NUMBER OF EQUATIONS = 12
NUMBER OF FULL BAND WITH = 15

```

INITIAL LOADS ASSEMBLED IN RHS LT= 1

0.0		0.0
0.0		0.0
0.0	-0.100000E+01	0.0
0.0		0.0

*** DISPLACEMENT AT NOISE

[illegible][illegible]

[illegible]

DISPLACEMENT		R				W				V				U			
										</							

PRIMARY STRESS RESULTANTS					TS	
	MS	SS	NS			
175						
176						
177						
178						
179						
180						
181						
182						
183						
184						
185						
186						
187						
188						
189						
190						
191						
192						
193						
194						
195						
196						
197						
198						
199						
200						
201						
202						
203						
204						
205						
206						
207						
208						
209						
210						
211						
212						
213						
214						
215						
216						
217						
218						
219						
220						
221						
222						
223						
224						
225						
226						
227						
228						
229						
230						
231						
232						
233						
234						
235						
236						
237						
238						
239						
240						
241						
242						
243						
244						
245						
246						
247						
248						
249						
250						
251						
252						
253						
254						
255						
256						
257						
258						
259						
260						
261						
262						
263						
264						
265						
266						
267						
268						
269						
270						
271						
272						
273						
274						
275						
276						
277						
278						
279						
280						
281						
282						
283						
284						
285						
286						
287						
288						
289						
290						
291						
292						
293						
294						
295						
296						
297						
298						
299						
300						
301						
302						
303						
304						
305						
306						
307						
308						
309						
310						
311						
312						
313						
314						
315						
316						
317						
318						
319						
320						
321						
322						
323						
324						
325						
326						
327						
328						
329						
330						
331						
332						
333						
334						
335						
336						
337						
338						
339						
340						
341						
342						
343						
344						
345						
346						
347						
348						
349						
350						
351						
352						
353						
354						
355						
356						
357						
358						
359						
360						
361						
362						
363						
364						
365						
366						
367						
368						
369						
370						
371						
372						
373						
374						
375						
376						
377						
378						
379						
380						
381						
382						
383						
384						
385						
386						
387						
388						
389						
390						
391						
392						
393						
394						
395						
396						
397						
398						
399						
400						
401						
402						
403						
404						
405						
406						
407						
408						
409						
410						
411						
412						
413						
414						
415						
416						
417						
418						
419						
420						
421						
422						
423						
424						
425						
426						
427						
428						
429						
430						
431						
432						
433						
434						
435						
436						
437						
438						
439						
440						
441						
442						
443						
444						
445						
446						
447						
448						
449						
450						
451						
452						
453						
454						
455						
456						
457						
458						
459						
460						
461						
462						
463						
464						
465						
466						
467						
468						
469						
470						
471						
472						
473						
474						
475						
476						
477						
478						
479						
480						
481						
482						
483						
484						
485						
486						
487						
488						
489						
490						
491						
492						
493						
494						
495						
496						
497						
498						
499						
500						
501						
502						
503						
504						
505						
506						
507						
508						
509						
510						
511						
512						
513						

SECONDARY STRESS RESULTANTS					
	MT	MTS	MST	NT	NTS
					NST
1	0.1696E-03	0.0	0.0	-0.1804E-01	0.0
2	0.4328E-04	0.0	0.0	-0.1477E-01	0.0
3	-0.1678E-04	0.0	0.0	-0.7037E-02	0.0
4	-0.3475E-04	0.0	0.0	-0.4148E-02	0.0
5	-0.2233E-04	0.0	0.0	-0.1084E-02	0.0
6	-0.1561E-04	0.0	0.0	0.3640E-03	0.0
7	-0.4979E-05	0.0	0.0	0.7758E-03	0.0
8	0.1862E-05	0.0	0.0	0.6837E-03	0.0
9	0.5153E-05	0.0	0.0	0.4376E-03	0.0
10	0.6104E-05	0.0	0.0	0.2123E-03	0.0
11	0.5212E-05	0.0	0.0	0.6431E-04	0.0
12	0.5368E-05	0.0	0.0	-0.1043E-04	0.0
13	0.1661E-05	0.0	0.0	-0.3675E-04	0.0
14	0.4342E-05	0.0	0.0	-0.3914E-04	0.0
15	0.4854E-05	0.0	0.0	-0.3345E-04	0.0
16	0.4680E-05	0.0	0.0	-0.2563E-04	0.0
17	0.4667E-05	0.0	0.0	-0.1297E-04	0.0
18	0.4964E-05	0.0	0.0	0.1363E-04	0.0
19	0.5558E-05	0.0	0.0	0.6593E-04	0.0
20	0.4899E-05	0.0	0.0	0.1511E-03	0.0
21	0.4031E-05	0.0	0.0	0.2580E-03	0.0
22	0.4747E-05	0.0	0.0	0.3367E-03	0.0
23	-0.1676E-05	0.0	0.0	0.2737E-03	0.0
24	-0.5470E-05	0.0	0.0	-0.1244E-03	0.0
25	-0.1551E-04	0.0	0.0	-0.1095E-02	0.0
26	0.110E-05	0.0	0.0	-0.2833E-02	0.0
27	0.5910E-05	0.0	0.0	-0.5209E-02	0.0
28	0.4521E-04	0.0	0.0	-0.7355E-02	0.0
29	0.1184E-03	0.0	0.0	-0.7108E-02	0.0
30	0.2331E-03	0.0	0.0	-0.5632E-03	0.0
31	0.3265E-03	0.0	0.0	0.1765E-01	0.0
32	0.5412E-03	0.0	0.0	0.5243E-01	0.0
33	0.1031E-03	0.0	0.0	0.1038E+00	0.0
34	-0.6246E-03	0.0	0.0	0.1575E+00	0.0
35	-0.2108E-02	0.0	0.0	0.1735E+00	0.0
36	-0.4310E-02	0.0	0.0	0.7145E-01	0.0
37	0.6778E-02	0.0	0.0	-0.2619E+00	0.0
38	-0.7937E-02	0.0	0.0	-0.9503E+00	0.0
39	-0.7467E-02	0.0	0.0	-0.2034E+01	0.0
40	0.3643E-02	0.0	0.0	-0.3296E+01	0.0
41	0.3709E-01	0.0	0.0	-0.3999E+01	0.0

END OF FILE

[illegible]

DISPLACEMENT		R		U		V		U	
1	-0.1425E-11	-0.3573E-04	0.2855E-11	-0.0	0.2855E-11	-0.0	0.2855E-11	-0.0	0.2855E-11
2	-0.4188E-04	-0.2937E-04	0.2064E-06	0.0	0.2064E-06	0.0	0.2064E-06	0.0	0.2064E-06
3	-0.4440E-04	-0.1790E-04	0.1026E-05	0.0	0.1026E-05	0.0	0.1026E-05	0.0	0.1026E-05
4	-0.3182E-04	-0.8117E-05	0.1236E-05	0.0	0.1236E-05	0.0	0.1236E-05	0.0	0.1236E-05
5	-0.1705E-04	-0.1991E-05	0.1292E-05	0.0	0.1292E-05	0.0	0.1292E-05	0.0	0.1292E-05
6	-0.6489E-05	0.9008E-06	0.1266E-05	0.0	0.1266E-05	0.0	0.1266E-05	0.0	0.1266E-05
7	-0.6414E-06	0.1719E-05	0.1206E-05	0.0	0.1206E-05	0.0	0.1206E-05	0.0	0.1206E-05
8	0.1678E-05	0.1531E-05	0.1143E-05	0.0	0.1143E-05	0.0	0.1143E-05	0.0	0.1143E-05
9	0.1996E-05	0.1036E-05	0.1088E-05	0.0	0.1088E-05	0.0	0.1088E-05	0.0	0.1088E-05
10	0.1490E-05	0.5888E-06	0.1042E-05	0.0	0.1042E-05	0.0	0.1042E-05	0.0	0.1042E-05
11	0.8424E-06	0.2395E-06	0.1003E-05	0.0	0.1003E-05	0.0	0.1003E-05	0.0	0.1003E-05
12	0.3454E-06	0.1427E-06	0.9690E-06	0.0	0.9690E-06	0.0	0.9690E-06	0.0	0.9690E-06
13	0.5763E-07	0.9558E-07	0.9362E-06	0.0	0.9362E-06	0.0	0.9362E-06	0.0	0.9362E-06
14	-0.3462E-07	0.9918E-07	0.9038E-06	0.0	0.9038E-06	0.0	0.9038E-06	0.0	0.9038E-06
15	-0.8881E-07	0.1201E-06	0.8710E-06	0.0	0.8710E-06	0.0	0.8710E-06	0.0	0.8710E-06
16	-0.6992E-07	0.1407E-06	0.8379E-06	0.0	0.8379E-06	0.0	0.8379E-06	0.0	0.8379E-06
17	-0.4130E-07	0.1548E-06	0.8044E-06	0.0	0.8044E-06	0.0	0.8044E-06	0.0	0.8044E-06
18	-0.1807E-07	0.1622E-06	0.7707E-06	0.0	0.7707E-06	0.0	0.7707E-06	0.0	0.7707E-06
19	-0.4027E-08	0.1648E-06	0.7369E-06	0.0	0.7369E-06	0.0	0.7369E-06	0.0	0.7369E-06
20	0.2311E-08	0.1649E-06	0.7030E-06	0.0	0.7030E-06	0.0	0.7030E-06	0.0	0.7030E-06
21	0.3885E-08	0.1641E-06	0.6692E-06	0.0	0.6692E-06	0.0	0.6692E-06	0.0	0.6692E-06
22	0.3252E-08	0.1631E-06	0.6354E-06	0.0	0.6354E-06	0.0	0.6354E-06	0.0	0.6354E-06
23	0.2040E-08	0.1625E-06	0.6017E-06	0.0	0.6017E-06	0.0	0.6017E-06	0.0	0.6017E-06
24	0.1035E-08	0.1621E-06	0.5679E-06	0.0	0.5679E-06	0.0	0.5679E-06	0.0	0.5679E-06
25	0.4668E-09	0.1619E-06	0.5341E-06	0.0	0.5341E-06	0.0	0.5341E-06	0.0	0.5341E-06
26	0.2670E-09	0.1618E-06	0.5004E-06	0.0	0.5004E-06	0.0	0.5004E-06	0.0	0.5004E-06
27	0.2356E-09	0.1617E-06	0.4666E-06	0.0	0.4666E-06	0.0	0.4666E-06	0.0	0.4666E-06
28	0.8581E-10	0.1617E-06	0.4329E-06	0.0	0.4329E-06	0.0	0.4329E-06	0.0	0.4329E-06
29	-0.5120E-09	0.1617E-06	0.3991E-06	0.0	0.3991E-06	0.0	0.3991E-06	0.0	0.3991E-06
30	-0.1888E-08	0.1620E-06	0.3653E-06	0.0	0.3653E-06	0.0	0.3653E-06	0.0	0.3653E-06
31	-0.4284E-08	0.1628E-06	0.3316E-06	0.0	0.3316E-06	0.0	0.3316E-06	0.0	0.3316E-06
32	-0.7103E-08	0.1645E-06	0.2978E-06	0.0	0.2978E-06	0.0	0.2978E-06	0.0	0.2978E-06
33	-0.9146E-08	0.1663E-06	0.2640E-06	0.0	0.2640E-06	0.0	0.2640E-06	0.0	0.2640E-06
34	0.7142E-08	0.1684E-06	0.2301E-06	0.0	0.2301E-06	0.0	0.2301E-06	0.0	0.2301E-06
35	0.4187E-08	0.1690E-06	0.1962E-06	0.0	0.1962E-06	0.0	0.1962E-06	0.0	0.1962E-06
36	0.3150E-07	0.1650E-06	0.1623E-06	0.0	0.1623E-06	0.0	0.1623E-06	0.0	0.1623E-06
37	0.7961E-07	0.1515E-06	0.1286E-06	0.0	0.1286E-06	0.0	0.1286E-06	0.0	0.1286E-06
38	0.1445E-06	0.1236E-06	0.9527E-07	0.0	0.9527E-07	0.0	0.9527E-07	0.0	0.9527E-07
39	0.2012E-06	0.7974E-07	0.6261E-07	0.0	0.6261E-07	0.0	0.6261E-07	0.0	0.6261E-07
40	0.1891E-06	0.2860E-07	0.3088E-07	0.0	0.3088E-07	0.0	0.3088E-07	0.0	0.3088E-07
41	0.1285E-10	-0.2959E-11	-0.1048E-12	0.0	-0.1048E-12	0.0	-0.1048E-12	0.0	-0.1048E-12

END OF FILE

PRIMARY STRESS RESULTANTS					
	NS	SS	NS	TS	
344	1	0.1249E+00	-0.5000E+00	-0.6027E-01	0.0
345	2	0.2981E-01	-0.2657E+00	-0.6027E-01	0.0
346	3	-0.1447E-01	-0.9719E-01	-0.6027E-01	0.0
347	4	-0.2609E-01	-0.5656E-02	-0.6027E-01	0.0
348	5	-0.7221E-01	0.2932E-01	-0.6027E-01	0.0
349	6	-0.1398E-01	0.3237E-01	-0.6027E-01	0.0
350	7	-0.6519E-02	0.2392E-01	-0.6027E-01	0.0
351	8	-0.1824E-02	0.1335E-01	-0.6027E-01	0.0
352	9	0.4505E-03	0.5233E-02	-0.6027E-01	0.0
353	10	0.1139E-02	0.7052E-03	-0.6027E-01	0.0
354	11	0.1037E-02	-0.1156E-02	-0.6027E-01	0.0
355	12	0.6835E-03	-0.1471E-02	-0.6027E-01	0.0
356	13	0.3464E-03	-0.1127E-02	-0.6027E-01	0.0
357	14	0.1209E-03	-0.6511E-03	-0.6027E-01	0.0
358	15	0.6121E-05	-0.2760E-03	-0.6027E-01	0.0
359	16	-0.3562E-04	-0.5405E-04	-0.6027E-01	0.0
360	17	-0.3217E-04	0.4374E-04	-0.6027E-01	0.0
361	18	-0.1726E-04	0.6504E-04	-0.6027E-01	0.0
362	19	-0.1930E-05	0.5268E-04	-0.6027E-01	0.0
363	20	0.8820E-05	0.3177E-04	-0.6027E-01	0.0
364	21	0.1454E-04	0.1424E-04	-0.6027E-01	0.0
365	22	0.1665E-04	0.3362E-05	-0.6027E-01	0.0
366	23	0.1676E-04	-0.1742E-05	-0.6027E-01	0.0
367	24	0.1608E-04	-0.3130E-05	-0.6027E-01	0.0
368	25	0.1935E-04	-0.2501E-05	-0.6027E-01	0.0
369	26	0.1484E-04	-0.1140E-05	-0.6027E-01	0.0
370	27	0.1479E-04	0.7958E-06	-0.6027E-01	0.0
371	28	0.1927E-04	0.3115E-05	-0.6027E-01	0.0
372	29	0.1635E-04	0.5502E-05	-0.6027E-01	0.0
373	30	0.1784E-04	0.6659E-05	-0.6027E-01	0.0
374	31	0.1950E-04	0.4755E-05	-0.6027E-01	0.0
375	32	0.1969E-04	-0.4802E-05	-0.6027E-01	0.0
376	33	0.1652E-04	-0.2665E-04	-0.6027E-01	0.0
377	34	0.5024E-05	-0.6333E-04	-0.6027E-01	0.0
378	35	-0.1689E-04	-0.1120E-03	-0.6027E-01	0.0
379	36	-0.5827E-04	-0.1502E-03	-0.6027E-01	0.0
380	37	-0.8719E-04	-0.1298E-03	-0.6027E-01	0.0
381	38	-0.1033E-03	0.3267E-04	-0.6027E-01	0.0
382	39	-0.4941E-04	0.4466E-03	-0.6027E-01	0.0
383	40	0.1497E-03	0.1201E-02	-0.6027E-01	0.0
384	41	0.5785E-03	0.2256E-02	-0.6027E-01	0.0
385					

END OF FILE

END OF FILE

SECONDARY STRESS RESULTANTS				
	NT	NTS	HST	
390				
391	1	0.3658E-01	0.0	
392	2	0.8412E-02	0.0	
393	3	-0.5173E-02	0.0	
394	4	-0.3671E-02	0.0	
395	5	-0.7242E-02	0.0	
396	6	-0.4475E-02	0.0	
397	7	-0.2075E-02	0.0	
398	8	-0.5571E-03	0.0	
399	9	0.1679E-03	0.0	
400	10	0.3798E-03	0.0	
401	11	0.3377E-03	0.0	
402	12	0.2208E-03	0.0	
403	13	0.1103E-03	0.0	
404	14	0.3726E-04	0.0	
405	15	0.5599E-06	0.0	
406	16	-0.1134E-04	0.0	
407	17	-0.1096E-04	0.0	
408	18	-0.5957E-05	0.0	
409	19	-0.9127E-05	0.0	
410	20	0.2575E-05	0.0	
411	21	0.4410E-05	0.0	
412	22	0.5069E-05	0.0	
413	23	0.5008E-05	0.0	
414	24	0.4862E-05	0.0	
415	25	0.4615E-05	0.0	
416	26	0.4458E-05	0.0	
417	27	0.4332E-05	0.0	
418	28	0.4574E-05	0.0	
419	29	0.4900E-05	0.0	
420	30	0.5381E-05	0.0	
421	31	0.5858E-05	0.0	
422	32	0.5932E-05	0.0	
423	33	0.4862E-05	0.0	
424	34	0.1577E-05	0.0	
425	35	-0.4996E-05	0.0	
426	36	-0.1506E-04	0.0	
427	37	-0.2630E-04	0.0	
428	38	-0.3144E-04	0.0	
429	39	-0.1577E-04	0.0	
430	40	0.4342E-04	0.0	
431	41	0.1719E-03	0.0	
432				
433				
434				
435				

END OF FILE

NT	NTS	NST
-0.3995E+01	0.0	0.0
-0.3272E+01	0.0	0.0
-0.2001E+01	0.0	0.0
-0.9186E+00	0.0	0.0
-0.2401E+00	0.0	0.0
0.8061E-01	0.0	0.0
0.1718E+00	0.0	0.0
0.1513E+00	0.0	0.0
0.9679E-01	0.0	0.0
0.4688E-01	0.0	0.0
0.1419E-01	0.0	0.0
-0.2080E-02	0.0	0.0
-0.7330E-02	0.0	0.0
-0.6950E-02	0.0	0.0
-0.4648E-02	0.0	0.0
-0.2366E-02	0.0	0.0
-0.8052E-03	0.0	0.0
0.1469E-04	0.0	0.0
0.3042E-03	0.0	0.0
0.3172E-03	0.0	0.0
0.2228E-03	0.0	0.0
0.1153E-03	0.0	0.0
0.4519E-04	0.0	0.0
0.2779E-05	0.0	0.0
-0.1738E-04	0.0	0.0
-0.2707E-04	0.0	0.0
-0.3402E-04	0.0	0.0
-0.3907E-04	0.0	0.0
-0.3445E-04	0.0	0.0
-0.2917E-05	0.0	0.0
0.8019E-04	0.0	0.0
0.2378E-03	0.0	0.0
0.4691E-03	0.0	0.0
0.7105E-03	0.0	0.0
0.7792E-03	0.0	0.0
0.3227E-03	0.0	0.0
-0.1184E-02	0.0	0.0
-0.4291E-02	0.0	0.0
-0.9185E-02	0.0	0.0
-0.1488E-01	0.0	0.0
-0.1806E-01	0.0	0.0

B30219